

## 5-1 USE INSTRUCTION

### \*CONNECT AUX (DVD/VCD/CD/TAPE/MP3 etc. PLAYER) AUDIO INPUT

1. Connect RCA signal cable according to the back panel connection instruction: AUX (DVD/VCD/CD/TAPE/MP3 etc. Player) audio L/R output socket connect to the input L/R socket by RCA cable correctly.
2. Insert electric source cable, turn on the power switch button.
3. Press MODE key on USB panel, and select AUX input mode;
4. Adjust function knob on front panel to your satisfied best sound effect.

### \*PLAY USB/SD CARD

1. Insert USB device or SD/MMC card that stored MP3 format songs to USB or SD card reader socket;
2. Insert electric source cable, turn on the power switch button.
3. Press MODE key on USB panel, and select USB input mode;
4. Adjust function keys on USB panel and function knobs on front panel to your satisfied best sound effect.
5. USB/SD card operation, pls see USB/SD CARD function operation instruction in user manual.
6. When you use USB or SD card device to play Mp3 song, you want to take out USB/SD card device. You should stop or power off speaker before you take out USB/SD card device, avoid to USB/SD card device damage;

### \*PLAY FM RADIO

1. Insert electric source cable, turn on the power switch button.
2. Press MODE key on USB panel, and select FM input mode;
3. Adjust function keys on USB panel and function knobs on front panel to your satisfied best sound effect.
4. If FM signal is not good in the room and you can not search FM station, You can connect metal cable on the FM antenna, and put another terminal of metal cable at outdoor, it can help you search FM station. But you should take care and avoid in lightning strike area.
5. FM radio operation, pls see FM radio function operation instruction in user manual.

### \*KARAOKE AND MICROPHONE FUNCTION OPERATION INSTRUCTION

1. Insert microphone into MIC socket on the panel, and turn on microphone, and adjust microphone volume properly, and you can sing and speak freely by microphone;
2. MIC.VOL: Turn MIC.VOL.KNOB to adjust MICROPHONE volume;
3. Don't use microphone towards speaker or near speaker, avoid to squeal sound and damage speaker.

## 6-1 TROUBLE SHOOTING

Symptom	Possible Problem	Solution
No Function Light & No Sound	1. Plug is not well connected	Insert the plug into electric outlet
	2. Speaker power button is not turned on	Turn on the button
Function Light on but No Sound	1. Cable misconnected	Turn off the power, check the input jack to ensure proper audio signal is connected to relevant input jack.
	2. Satellite speakers and subwoofer are not connected or misconnected	Power off, then check and confirm the cable connection again
	3. Audio signal is not transmitted to subwoofer	Check all the speakers if there is audio signal output
If the problem exists after checking related procedures above, please refer to the appointed service agent or professional technician to fix it. Do not attempt to open the cover, otherwise we assume no responsibility.		

# USER MANUAL

## SPEAKER



## JET15



## TURN ON YOUR LIFESTYLE

PLS READ USER MANUAL CAREFULLY BEFORE SYSTEM CONNECTION

## Welcome to buying our products

Dear Customer,

takes the pride to congratulate you on your purchase, we welcome you to the revolutionary world of technology. You have made the right choice by selecting product that has steered in to the minds of millions for its quality and performance for the last two decades. We have engineered entirely new approach in the product creation that delivers incredibly accuracy in the quality and reliability of the products you buy.

From the onset of the product development, each minute part has been thoroughly tested and experimented in order to provide ultimate customer satisfaction. Our goal is to bring cutting edge technology to your every day life with a focus on the future. Click to way, Set your expectation free, and see what is leads you. Rest assured. Please spare few minutes to go through this manual carefully before using the product in order to enjoy maximum pleasure or using this product.

### IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions, meanwhile, please observe all the indications about safe operating. These safety and operating instructions should be kept in condition of consultation.



- 1. Protection of electric power supply line:** Be aware that the electric power supply line is not tramped, pressed by heavy objects. Pay special attention to the plug of power supply line and outlet on the machine. DO NOT lengthen the electric shock, DO NOT pull or drag or the power supply line.
  - 2. Ventilation:** This set must be put in ventilated place. DO NOT put disk on it or cloth to cover it. The distance away from the wall should not be less than 10 centimeters. DO NOT put this set on the bed, sofa, carpet or other objects with similar surface in case of good ventilation.
  - 3. Casing Dismantling:** DO NOT dismantle the case. If one touches the inner components, he will probably get serious electric shock.
  - 4. Unusual smell:** When you discover unusual smell and smoke, cut power supplies immediately and pulls out the plug from the outlet on the wall. Contact the sell shop or nearest repairing center.
- Attention:** This set applies to AC 220V~240V/50Hz~60Hz power supply. Use standard power supply. Do not use power supply of small output and unsteady voltage.

## 1-1 PRODUCT FEATURES

- 1.New design multimedia speaker.
- 2.High output power amplifier design, the treble is clear, natural and bass is powerful.
- 3.With Karaoke function.
- 4.With USB/SD card reader function, can play Mp3 song freely.
- 5.With FM radio, can automatically search and memory FM station.
- 6.Compatible with DVD/VCD/CD/TAPE/MP3/ AUX 2.0ch audio signal input.

## 2-1 FRONT PANEL FUNCTION OPERATION INSTRUCTION

- 1. VOLUME:** master volume adjustment.
- 2. BASS:** bass volume adjustment.
- 3. TREBLE:** treble volume adjustment .
- 4. MIC.VOL.:** Microphone volume adjustment.
- 5. MIC :** microphone input socket.

### ● USB/SD CARD READER FUNCTION OPERATION INSTRUCTION

- 1.INPUT or MODE:** Input selection key. Press INPUT/MODE key to select USB/SD input mode.
- 2.SD:** SD card reader socket.

- 3.USB:** USB socket.
- 4.▶|| or PLAY/PAUSE:** Press ▶|| key to play USB/SD, press ▶|| key again to PAUSE mode.
- 5.◀◀/▶▶, PREV/NEXT and VOL-/VOL+ :** This is multi function keys, press this key 1 second to select previous or next Mp3 song. Press this keys more than 2 seconds into increase or decrease playing USB/SD CARD volume

### ● FM RADIO FUNCTION OPERATEION INSTRUCTION

- 1. INPUT or MODE:** This is audio input selection key. Press MODE key to select FM radio input mode.
- 2. CH-/CH+ or PREV/NEXT:** press CH-/CH+ to select FM station PREV or NEXT one by one.
- 3. SCAN:** In FM mode, Press SCAN key to search FM station and memory FM station automatically.

## 3-1 BACK PANEL FUNCTION OPERATION INSTRUCTION

- 1.INPUT:** DVD/VCD/CD/TAPE/COMPUTER/MP3 etc. 2.0CH audio signal input socket;
- 2.OUTPUT:** Satellite R/L channel audio signal output socket, connect to R/L satellite speaker;
- 3.POWER:** Power switch ON/OFF switch.
- 4.FM ANTENNA:** FM antenna, Pls adjust FM antenna angle correctly, can help you catch FM station well.

If you don't use speaker long time, you have to turn off power on back panel. Otherwise it is easy to damage speaker and waste electric power.

### PLEASE ATTENTION :

- \*All our satellite speaker must be connected to our same model subwoofer. Otherwise, our company resumes no responsibility for any damages.
- \*Specification are subject to changes without further notice. Please refer to the entity!

## 4-1 REMOTE CONTROL FUNCTION OPERATION INSTRUCTION

### USB/SD CARD function operation insruction

- 1. MODE:** audio input select key, Press mode key to select USB/SD input mode.
- 2. MUTE:** MUTE function key, press this key to turn ON/OFF mute mode.
- 3.◀◀/▶▶ :** Press ◀◀/▶▶ to select MP3 song rearward or onward one by one.
- 4.▶|| :** in USB/SD input mode, Press ▶|| to play USB or SD card, press▶|| again to PAUSE .
- 5. ◀/▶ or VOL-/VOL+ :** USB/SD volume keys, press these 2 keys to adjust USB/SD volume.
- 6. 0, 1, .....9, 100+ NUMBER keys:** press these number keys to select Mp3 song .
- 7. REPEAT or “↺”:** Press REPEAT one time into repeat one mode; Press REPEAT two times into repeat all mode; Press REPEAT three times to exit repeat mode and into Random play mode
- 8.POWER:STANDBY** key, press this key to turn ON/OFF USB/SD mode.
- 9.USB/SD:** Press USB/SD key to select USB or SD input mode selection key.

### FM radio function operation instruction

- 1. MODE:** audio input selection key, Press mode key to select FM input.
- 2. MUTE:** MUTE function key, press this key to turn ON/OFF mute mode.
- 3. CH-/CH+ :** press CH-/CH+ to select previous or next FM station one by one.
- 4. SCAN:** press SCAN to search and memory FM station automatically .

## **Federal Communications Commission (FCC) Statement**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by GUANGZHOU DONGHAO AUDIO CO., LTD. may void the FCC authorization to operate this device.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.