

WK DESIGN

Wireless MONO
P3.EARPHONE
In-Ear Wireless Mono Earphone
说明书

IN-EAR WIRELESS MONO EARPHONE

P3.EARPHONE
5.0 WIRELESS
兼容智能手机

蓝牙版本: V5.0
支持蓝牙协议: A2DP, AVRCP, SPPP, HFP,
蓝牙工作频率: 2.402GHz-2.480GHz
蓝牙有效距离: 8米
内置电池: 锂电池3.7V/ 50mAh
音乐时间: 约2.45小时
通话时间: 约2.5小时
充电输入标准: DCSV 50mA
充电时间: 约1.5小时
电量指示: 支持iOS及部分安卓系统手机电量指示

This ergonomically designed earphone with ear hook provides a secure comfortable fit for all-day wear, allowing you to enjoy high quality music on the go.

LED指示状态

配对状态	红白灯交替闪烁
已连接状态	白灯慢闪烁
音乐状态	白灯慢闪烁
电状态	红灯长亮
充电完成	红灯熄灭, 白灯长亮.
低电状态	红灯闪烁并伴有提示音

按键功能操作

开机 长按MFB键约3秒
关机 长按MFB键约4秒
配对模式 长按MFB键开机后即进入配对状态
接听 来电时单击MFB键实现来电接听
挂断 通话时单击MFB键实现挂断
拒接 来电时若长按1-2S MFB键则是拒接电话
未带重接 双击MFB键实现未带重接
播放/暂停 音乐状态单击MFB键实现音乐播放与暂停
开机后 在没有配对状态 下双击MFB键后进入中、英文切换
电量提示 低电压报警

蓝牙连接操作

请将蓝牙耳机和手机(或其他连接设备)的距离在1米的范围内, 越近越好
确保耳机在关机状态, 长按多功能键约3秒直到红/白灯交替闪烁, 此时进入配对状态, 等待连接; 开启用户手机蓝牙功能(或其他蓝牙设备), 并进行搜索或扫描, 此时手机会搜索到附近所有的蓝牙设备点搜索到的耳机名称: P3(部分手机会提示输入密码, 请输入: 0000), 成功配对连接后, 耳机指示灯转为白灯闪动, 表示配对连接成功!

POWERFUL HD SOUND
ハイビジョン音質

配套明细

P3蓝牙耳机 1/个
Micro充电线 1/条
说明书/保修卡 1/份

注意事项

请在常温环境中存放以及使用本产品;
请勿将本产品暴露雨中或潮湿环境中;
请勿丢弃, 避免因跌落造成产品损坏;
请勿自行拆解、修理和改造本产品;
产品内置锂电池, 请勿随意丢弃或置以火中, 以免引起危险!

温馨提醒

1. 为有利于延长耳机使用寿命和您的身心健康, 请不要在长时间大音量的环境下听音, 以免损害您的听力。
2. 为了延长本产品电池使用寿命, 请在出现低电量提示音后及时为本产品充电, 请勿长时间低电存放
3. 当产品出现不开机现象时, 请连接充电器充电10分钟后, 重新尝试开机

保修条例

本产品有效保修期自售出之日起一年内, 在保修期限内正常使用和维护的情况下, 机器本身机件材料及功能出现问题, 发生故障, 经鉴定属实的, 本公司将免费提供维修服务。
本产品的保修不适用于
A. 耳机已超出保修期;
B. 用户未按照说明指南要求, 造成耳机折断, 外壳破损;
C. 未经本公司授权自行拆解、修理、改动结构;
D. 无法提供保修卡及消费凭证;
E. 因自然灾害等不可抗力(如地震、火灾)原因造成产品故障或损害;
注: 维修服务不包含产品运输费用及不提供上门服务
保修反馈表(勾选)
A. 耳机无声 B. 音质差 C. 按键无法操作 D. 无法配对设备
E. 无法充电 F. 耳壳脱落 G. 其他

用户购买时间 购买经销商

问题出现时间 用户联系方式

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WK DESIGN

Wireless MONO
P3.EARPHONE
In-Ear Wireless Mono Earphone
Instructions

IN-EAR WIRELESS MONO EARPHONE

P3.EARPHONE
5.0 WIRELESS
兼容智能手机

Bluetooth Version: V5.0
Support Bluetooth Protocol: A2DP, AVRCP, SPPP, HFP
Bluetooth Working Frequency: 2.402GHz-2.480GHz
Bluetooth Effective Range: 8 meters
Built-in Battery: Lithium battery 3.7V / 50mAh
Music Time: About 2.45 hours
Call Time: About 2.5 hours
Charging Input: DCSV 50mA
Charging Time: About 1.5 hours
Battery Display: Support battery display for iOS-powered phones and some Android-powered phones

This ergonomically designed earphone with ear hook provides a secure comfortable fit for all-day wear, allowing you to enjoy high quality music on the go.

LED INDICATOR MODES

Pairing	Red and white lights flash alternately
Connected	The white light flashes slowly
Music	The white light flashes slowly
Charging	The red light is on
Charging Completed	The red light is off and the white light is on
Low Battery	The red light flashes with prompt tone

BUTTON INSTRUCTIONS

Power On: Press and hold the MFB for about 3 seconds
Power Off: Press and hold the MFB for about 4 seconds
Pairing Mode: Long press the MFB to power on and enter the pairing state
Answer: Click the MFB to answer the call
Hang up: Click the MFB to hang up during a call
Reject: Press and hold the MFB for 1-2 seconds during a call to reject the call
Redial the last number: Double-click the MFB to redial the last number
Play/Pause: Click the MFB to play and pause the music when playing music
Once powered on, double-click the MFB in the unpaired mode to switch between Chinese and English
Battery Warning: Low voltage alarm

BLUETOOTH CONNECTION INSTRUCTIONS

Please connect the Bluetooth headset to your mobile phone (or other connected device) within 1 meter, as close as possible.
Make sure the headset is turned off; press and hold the MFB for about 3 seconds until the red and white light flash alternately, entering the pairing mode and wait for connection.
Turn on the mobile phone Bluetooth (or other Bluetooth device) and search or scan. At this time, the phone will search for all nearby Bluetooth devices. Click on the searched headset, P3 (some phones require a password, please enter: 0000); after the successful pairing connection, the headset indicator turns to white light flashing, indicating that the pairing connection is successful!

POWERFUL HD SOUND
ハイビジョン音質

KIT CONTENTS

P3 Wireless earphone 1 / pc
Micro charging line 1/pc
Instruction/Warranty card 1/pc

CAUTIONS

1. Please use or stock this product with normal temperature.
2. Please do not put this product under rainy or wet conditions.
3. Please try to avoid throwing or hitting which may lead to a damage to this product.
4. Please do not demolish, repair or alter this product by yourself.
5. Please do not drop this product at will, especially in the fire. Or it may cause danger.

TIPS

1. For enjoying a longer, safer and healthier life with our earphone, please do not continuously use them for a long time with high volume. And keep the volume at a safe level during your outdoor use.
2. Please get the earphone charged in time if you sound the low battery alarm.
3. In case of failure to power on, please get the earphone charged at least 10 minutes and retry.

WARRANTY

This product is covered under warranty for a period of twelve months from the date of sale limited to normal use and maintenance of the machine parts, materials and functions. Problems and failures verified upon further identification will be provided free repair.
THIS PRODUCT'S WARRANTY DOES NOT APPLY TO
A. Earphone is beyond the warranty period;
B. User does not follow the instructions which caused the earphone wire and earplug broken;
C. Without the authorization to dismount, repair, change structures;
D. Can not provide warranty card and receipt;
E. Caused by natural disasters and other force majeure (such as earthquake, fire).
Note: The warranty does not include product transport costs and does not provide on-site maintenance services.
WARRANTY FEEDBACK FORM (TICK OFF)
A. No sound B. Worse sound quality C. Button mal-function
D. Unable to pair with other device E. Can not recharge
F. Earplug degumming G. Others

Time of purchasing Dealers of sale

When does the problem occur? User's Contact info

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.