CDMA 2000 1x WIRELESS LOCAL LOOP PHONE ACW-1xP800/1xP1900 USER'S MANUAL



TABLES OF CONTENTS

Safety Precautions	4
Checking Parts	5
Setting up Your Phone	6
Getting to Know Your Phone	9
Display Icons	10
Function Keys	11

Basic Operation

Placing Calls	14
Redial	14
Receiving Calls	15
Adjusting Volumes	
Choosing the Ring Tone	17
On-Hook Call	17

Internal Phone Book

The Internal Phone Book	20
Storing Numbers in Memory	20
Searching for Numbers in Memory	21
Erasing a Number in Memory	23
One-Touch Calling	24
Two-Touch Calling	24

Useful Features

Call Logs	26
Electronic Dialing	27
Displaying Your Phone Number	28

Mute	28
Silent Scratchpad	29
Sending Your Phone Number	30
Selecting Time Mode	31
Setting the Alarm	31
Checking and Clearing Call Times	32
Setting Warning Beeps	32

Advanced Features

Changing Greeting Message	34
System Reset	34
Restricting Use of the Phone	35
Locking the Phone	37
Changing the Lock Code	38
Tone Length	38

Optional Features

Call Forwarding	40
Call Waiting	 40
Three-Way Calling	 40
Message Service	 40

Miscellaneous

Menu Options Table	46
Conversation and Message Menu	48
Specifications	48

RF Exposure Information

THIS MODEL PHONE MEETS THE GOVERNMENT 'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

Near-by Person Operation

This device was tested for typical operations with the antenna of the phone kept 1.5 cm from the body. To maintain compliance with FCC RF exposure requirements, maintain a 1.5 cm separation distance between the user's body and the phone, including the antenna. *WARNING! Read this information before using your phone*

SAFETY PRECAUTIONS

- 1. Avoid placing the phone in a dusty location, or near a source of gas or fire.
- Don't shake, hit or drop the phone.
- If you clean the outside of the phone, use only a soft, dry cloth. The chemicals in alcohol, benzine or acetone can damage the surface of the phone.
- 4. Do not twist or pull the cord out of the phone.
- 5. Do not disassemble the phone.
- 6. DO NOT use the power adapter if:
 - The power cord is damaged.
 - . The phone has been dropped or damaged in any way.
- Use only the AXESS TELECOM provided adapter. Do not use the AXESS TELECOM adapter for any other purpose.
- Use only the AXESS TELECOM provided antenna. Do not use the antenna for any other purpose.
- Frequency and length of use can affect the life of the self-charging battery. Contact your customer service if the battery is not operating properly.
- Use only the designated self-charging battery. Dispose of exhausted batteries properly. Never discard a battery in or near fire or flame.
- Do not use the telephone near water, for example, near a bathtub, sink, wet basement, or swimming pool.
- NOTE : The input voltage and the shape of the plug on this phone may vary from country to country.


CHECKING THE PARTS

Once you have unpacked your phone, make sure that you have all the parts shown below. If any piece is missing or broken, please call your customer service.

1. ACW-1xP800/1xP1900 Main Set

- 3. AC/DC Adapter
- 5. Antenna
- 7. Data Cable-USB(Optional)
- 2. Hand Set
- 4. User's Manual
- 6. External Battery
- 6. Data Cable-RS-232C(optional)



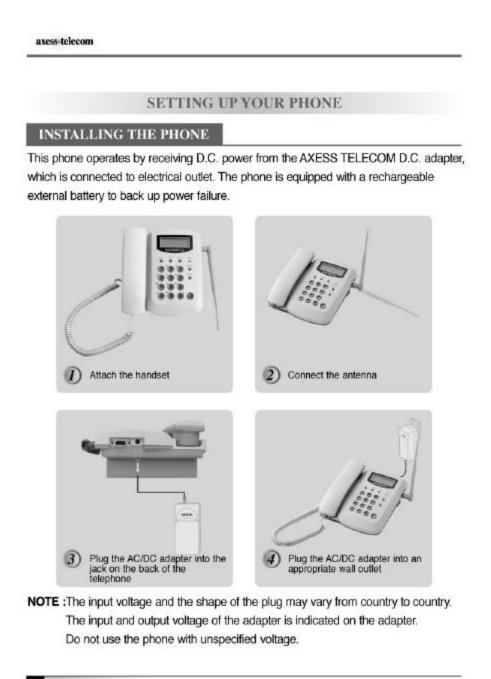

SERVICE STATUS CHECK

Display in service area

 
When the power cord is connected properly, Power LED will light.

All segments in the LCD window will turn on briefly. When the service LED at the top of the phone is on, service is available.

The display will show the greeting, time and date. You can change the greeting(See page 34).

Display in area with no service


When there is no service in your area, the signal icon does not appear in the display. In this case, contact your service provider.



AXESS TELECOM 123-456-7859

Display in area with no service

AXESS TELECOM 123-456-7859

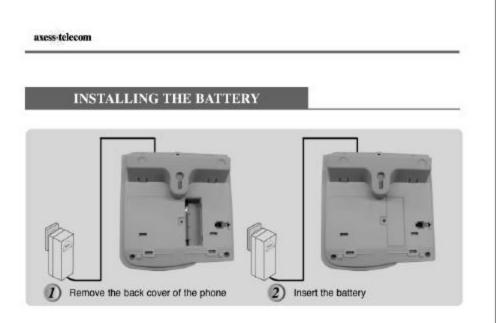





- 1. Antenna : Adjusting the antenna improves the sound quality of the call.
- Power/RSSI LED : The Power LED lights when the power is connected. Under battery power, this LED is always off.
- STORE : Stores phone numbers, and any settings you select in the menu within the phone's memory.
- 4. MESSAGE : Press to retrieve messages.
- 5. RECALL : Allows you to redial the last number called.
- 6. On-Hook : Allows you to enter phone number without lifting the handset off the hook.
- Shift Keys : Press to move the cursor when entering letters and to scroll through menu options and displays.
- 8. CLEAR : Lets you clear your last entry.
- 9. MENU : Press to access the phone's menus.



DISPLAY ICONS

Icons display on the screen to indicate what features you are using and the status of the phone, signal strength, and battery.

	Taul IIII MENU O CAXESS TELECOM 8/26[MO] 16:41 PM
T.ull	Indicates the strength of the current signal. The more bars, the stronger the signal.
	Indicates the level of battery power. The more bars, the more power. When the battery is low, the icon blinks and an alert tone sounds.
MENU	Indicates that you are using the phone's menu.
	Indicates that you have set your phone's alarm.
	Indicates that you are in the phone's internal phone book.
	Flashes when you have a page, a text message or a voice mail message.
(Indicates that a call is in progress.

		FUNCTION KEYS
 CLEAR To erase one character from the display screen, press it once. To erase all the characters on the screen, press and hold dow. To go back one step when you're accessing a menu, briefly press it once. STORE Press this key to store a number in the phone's internal phone book and to save menu settings. MESSAGE Press this key to retrieve messages. Press this key to retrieve messages. The ON-HOOK button is used to enter a number, without lifting	MENU	Press this key to display the phone's main menu.
Press this key to store a number in the phone's internal phone book and to save menu settings. MESSAGE Press this key to retrieve messages. RECALL Press this key to redial the last number called. The ON-HOOK button is used to enter a number, without lifting	CLEAR	 To erase one character from the display screen, press it once. To erase all the characters on the screen, press and hold down. To go back one step when you're accessing a menu, briefly
RECALL Press this key to redial the last number called. The ON-HOOK button is used to enter a number, without lifting	STORE	이 것 같은 것 같
Press this key to redial the last number called. The ON-HOOK button is used to enter a number, without lifting		ress this key to retrieve messages.
	RECALL	Press this key to redial the last number called.
		그 것 같아요. 말 나 주 같아요. 그는 것 같아요. 이 것 ? 이 것 같아요. 이 것 같아요. 이 것 않아요. 이 집
USER'S MANUAL		USER'S MANUAL 11



Basic Operation

Placing Calls

Redial

Receiving Calls

Adjusting Volumes

Choosing the Ring Tone


On-Hook Call

PLACING CALLS 1. First, check to see that your AXESS TELECOM WLL Phone is turned on. If the Power / RSSI LED is lit, Tatil Man the power is on. AXESS TELECOM 01/03[MO] 10:31 AM Pick up the handset or press not to hear a dial tone. If the service is not available, you hear a no servicel tone (intermittent tone). Tell 2000 3. Using the keypad, dial the desired telephone number. PLEASE DIAL The LCD window displays the number. 4. press 5. When the other person answers, begin your conversation. If you pressed on in step 2, pick up the handset before Tell MM l Calling..... you begin conversation. 011-695-5978 To end the call, replace the handset (). NOTE : Modifying a phone number. - Modifying the number by one digit : Press O briefly. - Modifying the entire number : Press on and hold. REDIAL Redial the last number you dialed by using this feature. 1. Pick up the handset, or press . 2. Press . Tall 200 C Calling 011-695-5978 To speak to the other person, pick up the handset. NOTE : You cannot redial in the above manner when the power is just on. 'NO LAST CALL!' will display. 14 USER'S MANUAL

RECEIVING CALLS

When you receive an incoming call, your phone will ring and blink "Incoming Call" display in LCD window and the LED on the phone will blink.

- 1. Simply pick up the handset to answer the call.
- 2. To disconnect, replace the handset.

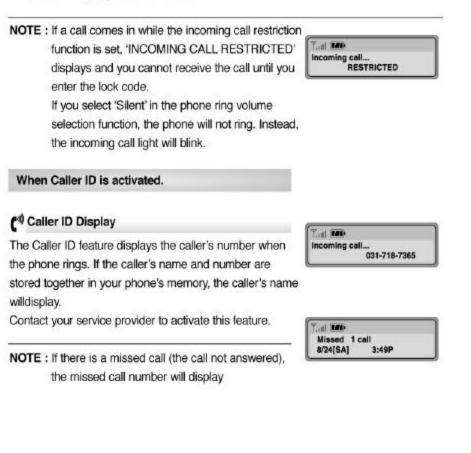

ADJUSTING VOLUMES

You can control the sound volumes on your phone, including the key tone (the sound you hear when you press a key), the conversation volume (the sound of the other party during a phone call) and the ring volume of an incoming call.

Controlling conversation volume

Lift the handset and press , , , , , , and store to adjust voice volume.

Controlling key tone volume

Controlling ring tone volume

ati any

all ma

KEY VOLUME

EARPIECE

Call (MA) RINGER VOLUME

ULAR (MAN)

RINGER TONE

MONOTONE 1

CHOOSING THE RING TONE

You can choose from ten different ring tones.

- 1. Press and (1) to select 'Ring/Alert'.
- 2. Press (2) to select 'Ring Tone'.
- 3. Press O or D. to scan ring tones.
- 4. Press to save the desired ring tone setting.

ON-HOOK CALL

This feature allows you to make a call without picking up the handset.

1. Press 💿 .

You will here the dial tone through the speaker. Dial tone time : 20 sec.

Kall 200	
PLEASE	DIAL

- 2. Enter the phone number you want to call.
- When you hear the other party answer, pick up the handset and begin the conversation.

NOTE : If you do not pick up the handset, the other party will not be able to hear you.

To make a Quick Call

Pick up the handset, or press , enter the phone number of the party you want to call, and then press . The call connects immediately.



8 M S S S

Internal Phone Book

The Internal Phone Book

Storing Numbers in Memory

Searching for Numbers in Memory

Erasing a Number in Memory

One-Touch Calling

Two-Touch Calling

THE INTERNAL PHONE BOOK

Your phone has an 'Internal Phone Book' in which you can store up to 99 frequently called names and numbers. You can set them up for convenient, one-touch or two-touch dialing, and you can store them as confidential phone numbers.

STORING NUMBERS IN MEMORY

- 1. press 👘 .
- 2. Enter the desired telephone number up to 28
- 3. Press
- Enter a name by pressing the alphanumeric keys.
 NOTE : If you do not wish to enter a name, just skip over this step. You can only input 16 letters
 - втоне
- 5. Press O.
- Press to store at an empty location displaying automatically.
- To assign a specific location, Press a 2-digit location number between 01 and 99.

To store the number in the next memory location, Press () or ().

NOTE : If you are selecting a location between 1 and 9 enter zero (0) before that number. If there is no empty location, the message 'MEMORY(01-99) IS FULL!' will display.


If the message 'MEMORY USED!' displays,


- 8. Press
- To store the number in confidential, press (3) or (1) and select 'SECRET'.
- 10. Press



SEARCHING FOR NUMBER IN MEMORY

If you do not remember which telephone numbers have been stored in the various memory locations, you can scroll through memory to find a specific entry.

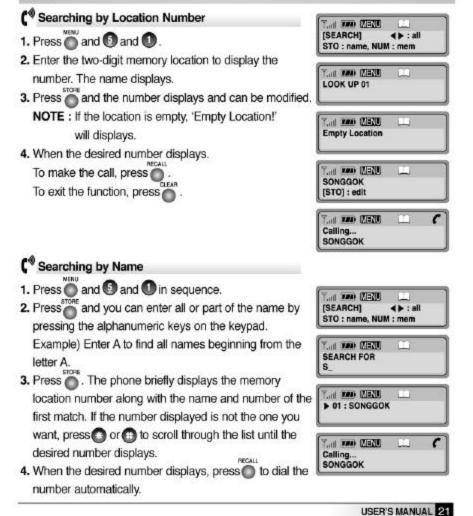

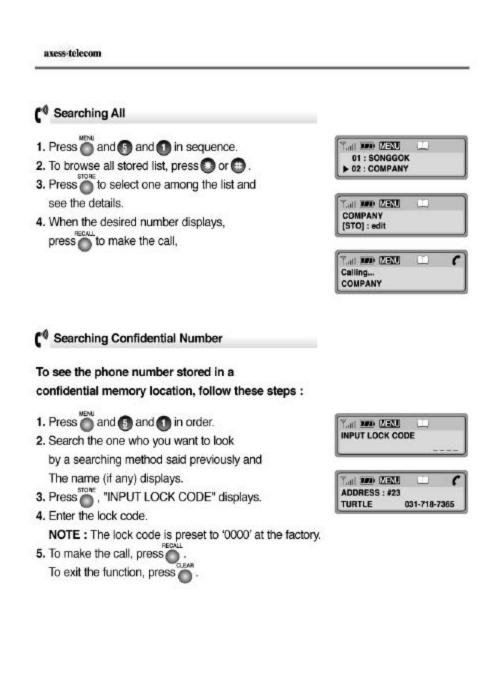

ERASING A NUMBER IN MEMORY

(* To Erase a Specific Number

1. Press and n and n and n order.

- 2. Search the one who you want to look by a searching method said previously and The name (if any) displays.
- 3. Press on one who you want to erase among the list.
- Press to erase it. Confirming message displays.
 To confirm, press . To cancel, press .
- If you erase a secret one, you have to enter lock code instead of pressing to confirm.

NOTE : In order to erase everything in the memory,

you must reset the phone.

SEARCH]	
SEARCH]	★ ⊨ : all
TO : name, I	NUM : mem

Yadi KAN) (XEXU) ► 07 : AHN 08 : DUKE

Tatt In State AHN [MSG] : del

Tall MAR MER E ERASE #07? [STO] : ok [MSG] : no

Lat AND MED ш - ERASED -

ONE-TOUCH CALLING

Memory locations 01 ~ 09 are special one-touch dialing locations. You can dial the numbers stored in 01~09 by pressing one key. You do not need to precede the numbers with a zero when using one-touch dialing.

- 1. Pick up the handset or press .
- Press and hold the number of the location number and hold it down for at least one second.
- 3. The number displays and dials automatically.



TWO-TOUCH CALLING

- You can easily dial phone numbers stored in memory by pressing the two-digit memory location.
- Briefly press the first digit of the memory location number, then press the second digit and hold it down for at least one second.

Example) To dial location 23, briefly press the 2, then press (2) and hold for a moment.

3. The number stored displays and dials automatically.



Yadi 🚥	C
Calling	
TURTLE	



Useful Features

Call Logs

Electric Dialing

Displaying Your Phone Number

Mute

Silent Scratchpad

Sending Your Phone Number

Selecting Time Mode

Setting the Alarm

Checking and Clearing Call Times

Setting Warning Beeps

CALL LOGS

Your phone stores the last 10 outgoing calls and the last 10 incoming calls (only when Caller ID function is activated). You can display and redial these numbers.

C[®] Redialing Outgoing Calls fail (m) MENU Pick up the handset or press 1. OUTGOING 1 2. INCOMING 2. Press to redial the last outgoing call. NOTE : If there's no last call record, "MEMORY Tatt (MAN) (MENU EMPTY" will appear with an alarm. MEMORY EMPTY 3. To display the phone numbers of the last 10 outgoing calls, press 0, 0 and press or the until the desired number displays. To redial the number in the fail (MAN) MENU display, press ► 01:123-456-789 4. To exit the function, press 02:011-764-1177 C⁰ Returning Incoming Calls To display a list of recently received calls. 1. Press 0, 0 . 0 Tail NON MERCE NOTE : If there's no incoming call record, "INCOMING ▶ 01:031-718-7365 02:031-716-1894 CALL MEMORY EMPTY!" message will appear with An alarm. Press O or O until the desired number displays. 3. To redial the number in the display, press Tall (MAN) (MEXU 4. To exit the function, press MEMORY EMPTY NOTE : This function is available only when caller ID is activated. C⁰ Erasing All Numbers in Redial Memory 1. Press 0, 0. Latt (MAN) (MENU 2. Press (1) to select 'Erase Logs', and then ERASE LOG ERASE press or eselect 'Erase'. 3. Press to erase all outgoing and incoming numbers. 26 USER'S MANUAL

ELECTRONIC DIALING

This function is used for a computer service, pager, or home automation provided by a bank or a stock company. If 'SILENT KEY' is set, electronic dialing is not available.

(** Entering a Hard Pause

You can enter a hard pause between numbers by Pressing of while entering digits. The hard pause displays as 'p' on the phone. A hard pause is useful when you access an interactive voice response system, such as an automated banking system.

 
(* Electronic Dialing Using Pause

This method is used to send numbers while you are in conversation. You can use the pause symbol in more than one position. Up to 30 positions are possible, including the pause symbol. You can store them all in memory with a reference number.

- 1. Pick up the handset or press
- 2. Enter the phone number and press Pause symbol 'p' will appear in the display.
- 3. Enter the numbers to be dialed electronically.
- 4. When the call connects, you are prompted to enter the number to be dialed electronically.
- 5. Press

C[®] Electronic Dialing With Several Pause Symbols

You can send more than one series of numbers using more than one pause. Ex) '02-541-3000p1234p5678' Call the 025413000 number first. Pick up the handset. When you are prompted to enter the next number, press and '1234' will be dialed automatically. After that, if you press again, '5678' will be dialed.



Latt www. MENU

Latt Man

Tall	100	
SEN	DING DTMF	
	123	4

123P456P789P0

	leco	

DISPLAYING YOUR PHONE NUMBER

You can display your own phone number.

Displaying Your Phone Number

- 1. Press
- 2. Press (1) to select 'Security'.
- 3. Enter the lock code.

NOTE : The lock code is preset to '0000' at the factory.

4. Press (1) to select 'My Phone#'.

The screen displays the phone numbers.

MUTE

This feature lets you mute the microphone, so that the other party cannot hear your voice or the sound of your surroundings. This function is available only during a telephone conversation.

1. Press oduring conversation.

2. Press () to select 'Mute'.

The message 'MUTE' blinks. The other party can no longer hear you, but you can hear them.

Press and again when you wish to resume the conversation.

The message 'MUTE' disappears from the display and you can speak to the other party.

Tatl (MAR)		6
MUTE	03:29	
SONG	2002	

My Phone Number

0317161894

SILENT SCRATCHPAD

You can check your own phone number or press a number during a conversation without transmitting the dial tones to the other party. This function is available only during a telephone conversation.

(* Turning off the Key tone

- 1. Press during conversation.
- Press () to select 'Scratchpad'. The message 'Scratchpad' displays.

Tatl TAN)	c
Time	0:35 017-895-9087

 Enter the desired number.
 There is no key tone when you press the keys during a conversation.

(* Turning on the Key tone

- 1. Press
- Press () to select 'Scratchpad'. The message 'Scratchpad' disappears and the key tone sounds

NOTE : If you do not turn on the key tone, you cannot use ARS (Automatic Response System) service or Call Pager.


SENDING YOUR PHONE NUMBER

When leaving a message on another party's pager, you may be prompted to enter your phone number. You can conveniently transmit your number to the pager by pressing two keys instead of the entire number. If 'SILENT KEY' is set, you cannot use this feature. This function is available only during a telephone conversation.


 When the pager prompts to enter your phone number after calling a paging system, press



 Press (1) to select 'Send Tel #'. Your phone number is transmitted automatically.

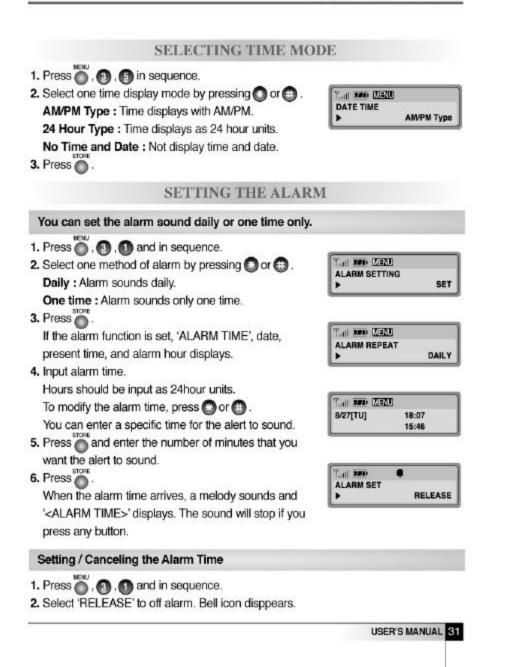


CHECKING AND CLEARING C	CALL TIMES
Checking the Last Call Time	(m
1. Press 🕘 , 🕥 , 🚱 in sequence.	Call Time 00 Year
2. Press to clear the display.	000day 00:00:29
Checking Accumulated Air Time	
1. Press 💭 , 🕥 , 🕥 in sequence.	Air Time 00 Year
2. Press to clear the display.	000DAY 00:09:30
Reset Accumulated Air Time	[v
MENU A A	Clear Air Time
1. Press 🔘 . 🔊 . 🗊 in sequence.	
옷 그 김 지수는 것 같아요. 가지는 것 같아요. 같이 많은 것이 없는 것은 것이 다 한 것이 안 했다. 것이	VES YES
1. Press (), (), () in sequence. 2. Select 'YES' by pressing 3. Press ().	► YES
2. Select 'YES' by pressing .	
2. Select 'YES' by pressing . 3. Press 🔘 .	EEPS
2. Select 'YES' by pressing 3. Press O. SETTING WARNING BI	EEPS
2. Select 'YES' by pressing 3. Press O . SETTING WARNING BI You can set your phone to sound warning beeps during o	EEPS
 Select 'YES' by pressing Press SETTING WARNING BI You can set your phone to sound warning beeps during a each minute you are on a phone call when you are out of the service area 	EEPS conversation that indicate:
 Select 'YES' by pressing Press . SETTING WARNING BI You can set your phone to sound warning beeps during a each minute you are on a phone call when you are out of the service area Press . , , , , in order to select '1min Alert'. 	CEPS conversation that indicate:
 Select 'YES' by pressing Press . SETTING WARNING BI You can set your phone to sound warning beeps during a each minute you are on a phone call when you are out of the service area Press , and a phone to select '1min Alert'. Press , or to choose the status 'ON/OFF'. 	CEPS conversation that indicate:
 Select 'YES' by pressing Press . SETTING WARNING BI You can set your phone to sound warning beeps during a each minute you are on a phone call when you are out of the service area Press , and a phone to select '1min Alert'. Press , or to choose the status 'ON/OFF'. Press , and a phone select '1min Alert'. 	CEPS conversation that indicate:
 Select 'YES' by pressing Press . SETTING WARNING BI You can set your phone to sound warning beeps during a each minute you are on a phone call when you are out of the service area Press . Press . or . to choose the status 'ON/OFF'. Press . Press . or .	CONVERSATION that indicate:
 Select 'YES' by pressing Press . SETTING WARNING BI You can set your phone to sound warning beeps during a each minute you are on a phone call when you are out of the service area Press , and a phone to select '1min Alert'. Press or to choose the status 'ON/OFF'. Press , and a phone select '1min Alert'. 	CEPS conversation that indicate:

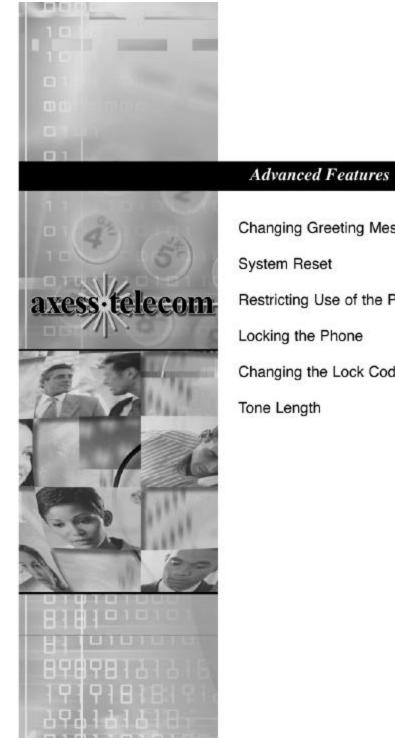

Changing Greeting Message

Restricting Use of the Phone

Changing the Lock Code

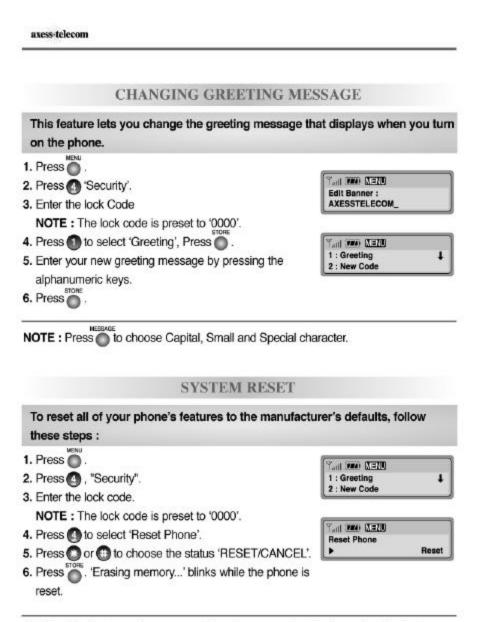

NOTE : This feature will erase everything in memory, the telephone book inclusive.

RESTRICTING USE OF THE PHONE

You can restrict the use of the phone by unauthorized persons. There are 4 restriction modes you can choose as follows :

C⁴ Restricting Outgoing Calls

In this mode, the phone cannot originate a call. If you try to call, 'OUTGOING CALL RESTRICTED' will display.

Latt 200	
OUTGOING	
•	RESTRICT

C[®] Restricting Incoming Calls

In this mode, you cannot answer an incoming call. If the phone receives an incoming call, 'INCOMING CALL RESTRICTED' will display.

Tall	300	
INC	OMING	
		RESTRICT

 
(* Restricting Long Distance Calls

In this mode, you cannot make a long distance call. If you try to dial a long call number, 'LONG DISTANCE CALL RESTRICTED' will display.

C¹⁰ Restricting International Calls

In this mode, you cannot make an international call. If you try to dial a international phone number, 'INTERNATIONAL CALL RESTRICTED' will display.





Setting Restriction Modes	
1. Press	Tal 780
2. Press 🚳 , "Security".	ENTER LOCK CODE
3. Enter your lock code.	
NOTE : The lock code is preset to '0000' at the fac	THE COMPT GLEARS
4. Press 🔞 to select 'Restrict'.	INT. CALL
5. Select the desired menu by pressing the number	
1. Outgoing, 2. Incoming, 3. Long Call, 4. Intl. Call	
6. Press 🔘 or 🜐 to select the status, 'RESTRICT/CA	ANCEL'
7. Press O.	
7. Press 🔘 .	
7. Press 🔘 .	~~~~~
 7. Press . Voice Privacy The voice privacy menu offers protection from illegal wiretapping. 	
7. Press	Yall 220
 7. Press . Voice Privacy The voice privacy menu offers protection from illegal wiretapping. 1. Press . 	Yall IM VOICE PRIVACY ► Enhanced
 7. Press . 	Yoit IIII) VOICE PRIVACY ► Enhanced Yoite PRIVACY VOICE PRIVACY
 7. Press . 	Yadi 200) VOICE PRIVACY ► Enhanced Yadi 2000 (JEND VOICE PRIVACY ► Standard
 7. Press . <	Yadi 200) VOICE PRIVACY ► Enhanced Yadi 2000 (JEND VOICE PRIVACY ► Standard
 7. Press . 7. Press . 7. Voice Privacy The voice privacy menu offers protection from illegal wiretapping. 1. Press . 2. Press . 3. Enter your lock code. 	Yadi 200) VOICE PRIVACY ► Enhanced Yadi 2000 (JEND VOICE PRIVACY ► Standard
 7. Press . 7. Press . 7. Voice Privacy 7. The voice privacy menu offers protection from illegal wiretapping. 1. Press . 2. Press . 3. Enter your lock code. NOTE : The lock code is preset to '0000' at the fac 4. Press . 	Yadi 200) VOICE PRIVACY ► Enhanced Yadi 2000 (JEND VOICE PRIVACY ► Standard
 Press . Voice Privacy The voice privacy menu offers protection from illegal wiretapping. Press . Press . Press . Security". Enter your lock code. NOTE : The lock code is preset to '0000' at the fac Press to select "Voice Privacy". Select the desired menu, "Enhance or Standard". 	Yadi 200) VOICE PRIVACY ► Enhanced Yadi 2000 (JEND VOICE PRIVACY ► Standard

CDMA WIRELESS LOCAL LOOP PHONE

LOCKING THE PHONE

You can lock your phone so that calls cannot be made by unauthorized persons. You can still receive incoming calls when your phone is locked by entering the lock code when the phone rings. Turning the phone off does not erase this feature; the phone stays in mode until you reset it.

(* Locking the Phone

- 1. Press
- Press to select 'Security'. At this time, the display will show 'ENTER LOCK CODE'
- Enter the lock code.
 NOTE : The lock code is preset to '0000' at the factory.
- Press () to select 'SET LOCK', and you can set the desired lock state. Choice "Never, On power up, Now, Aways".

The default setting is "Never".

STORE

- 5. Press O or to select the status, 'SET'.
- Press to auto lock the phone. LOCKED displays. If you try to dial numbers, it will ask you to key in Lock Code.

NOTE : The lock code is preset to '0000' at the factory.

- 7. If you want to unlock the phone.
- Follow the same steps above and select 'never' on the step 5.

Tail 200	
SET LOCK	

5. AUTO LOCK 6. MY PHONE #

T.atl (700) 10/11 (FR) 3:19PM +LOCKED-

T.all IIII) (IEN) Enter Lock Code

CHANGING THE LOCK O	CODE
When you purchase your phone, the lock code is prochange the lock code to any 4-digit code.	eset to 0000. You can
 Press . Press to select 'Security' and then enter the current lock code. NOTE : The lock code is preset to '0000' 	Yatti Innie (XEXIE 1. Greeting 1 2. New Code Tatti Innie (XEXIE) ENTER NEW CODE
STORE O	Tail Me (XEXI) RE-ENTER CODE
TONE LENGTH	
Tone Length : Some phones you call may be able to recognize only long tones. You may have to change the tone length to LONG for some calls that you place. Press (), (), (): "DTMF Ton Length"	TONE LENGTH
NOTE : When calling a paging system, your phone should be in the Short mode.	i
38 USER'S MANUAL	



10000

Optional Features

Call Forwarding

Call Waiting

Three-Way Calling

Message Service

CALL FORWARDING

Call Forwarding is a feature on your phone that lets you forward your incoming calls to another phone number, even if your phone is turned off. Also, you can receive calls while Call Forwarding is activated.

Contact your service provider to activate Call Forwarding.

CALL WAITING

Call Waiting alerts you to a second incoming call while you are on the phone. To respond to a call waiting, press or the hook switch. Contact your service provider to activate Call Waiting.

THREE-WAY CALLING

Three-Way Calling is a feature on your phone that lets you set up a three-way conversation with two other persons. or the Hook switch is used with Three-Way Calling.

Contact your service provider to activate Three-Way Calling.

MESSAGE SERVICE

Message Service can be used only when provided by your CDMA service provider. Check that the CDMA service provider you use is providing message service before using this function. The messages are stored in the order they are received. If there are messages that the user has not checked, icon will display.

CDMA WIRELESS LOCAL LOOP PHONE

(* Sending Text Messages atti maa 1. Press , 3, 0. in sequence. 1:WRITE MESSAGE 2:SAVED MESSAGE Enter the dial number and Press . 3. Write message using the alphanumeric keypad. Gall (000) DIAL NUMBER Note : Press on to choose capital, small latters and 011-9929-2875 special character. 4. Press . A call back number is automatically your all (000) HI! Songgok phone number. I am fine It can be changed as you like. 5. Press Call 1000 CALL BACK NUMBER EMERGENCY, using O or (1). 018-250-1995 Note : Emergency or Urgent message is available only Tall MA when your service provider support it. SMS PRIORITY IS NORMAL . Press on to send the message. Note : Sending text message is available only when att (ma) MESSAGE SEND your service provider support it. ...SENDING. (* Receiving Voice Messages 1. If a voice message is received, '--VOICE MAIL--' and 8/26[MO] 7:20P -- VOICE MAIL -🖂 will display. 2. Press to connect voice mail center and hear the all man 031-718-7365 message. 3. Press again to call back if the caller leaves a phone numbers. Lat Im Note : If the phone number is stored in the phone book THE NUM. OF MSG 13 with a name, the name will display instead of the phone number. and man [STO] : ERASE MENU [RECALL] : SEND USER'S MANUAL 41

C⁰ Receiving Text Messages

- If a text message is received, CALL BACK NUMBER and Solution and solution of the second second
- 2. Press O or O scroll down the message.
- 3. Press and one more the number automatically.
- 4. Press
 - Note : If the phone number is stored in the phone book with a name, the name will display instead of the phone number.

[CALL BACK NUM.]	Yatti (MO) 8/26[MO] 5:371	, ,
		(NUM.]
Storal Contraction of the second s		-110

[MESSAGE] Hello!

Tail (MA) [STO] : ERASE MENU [RECALL] : SEND

C⁰ Receiving Page Messages


- If a page message is received, PHONE NUMBER and will display.
- 2. Press to call back or to erase Page message.

Note : If the phone number is stored in the phone book with a name, the name will display instead of the phone number.

Note : If the incoming message tone is operating, a beep tone will be sound at intervals of two minutes until you check the message. If a new message is the same as the previous message, 'DUPLICATE' will display. Tant (999) 8/26(MO) 7:06P 031-716-1894

(STO) : ERASE MENU [RECALL] : SEND



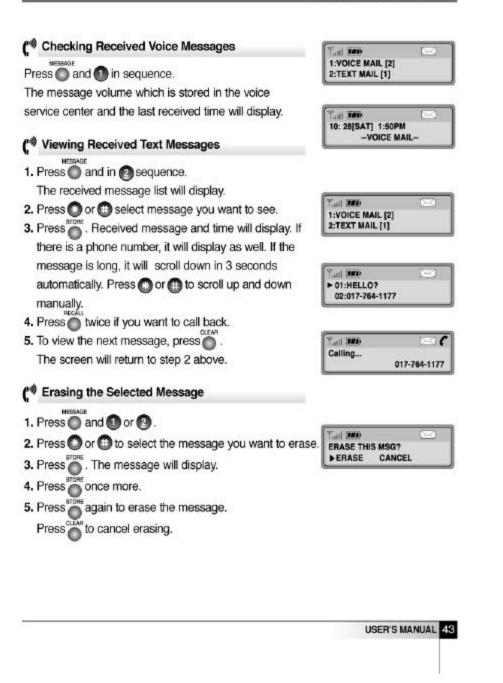

Clearing All Received Messages

1. Press (), () in sequence. 2. Press O or O to select 'ERASE/CANCEL' 3. Press

C⁰ Setting Message Lock

1. Press , and in sequence. 2. Press O or (1) to select 'SET/RELEASE'

3. Press

If you set message lock, the phone will ask Lock Code whenever you press button.

all (100) ERASE ALL

ERASE

Tall IND MESSAGE LOCK

▶ SET

MESSAGE ALERT

▶ SET

> CANCEL

RELEASE

RELEASE

NOTE : The lock code is preset to '0000' at the factory.

C⁴ Setting Message Alert

1. Press , and in sequence.


2. Press O or O to select 'SET/RELEASE'

3. Press

If you set the message alert, the LED will blink with an alert when a message arrives. If you release the message alert, the LED will blink without an alert.



Conversation and Message Menu

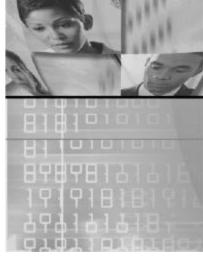

1			Explanation
1: Sound	1: Hand Set Vol		Adjust the volume on earpiece when to conversation.
	2: DTMF Ton Len	Tone Length short / long	Sets length of lone (when DTMF number is sent) to short or long
	3: Key Volume		Adjust Key Volume
	1: Ring Type	Ring Type Bell + Lamp / Lamp	Determines whether the phone alerts the incoming call with sound and lamp or only with lamp
	2: Ring Tone	Ring Tone Monotone1~6/Melocly1~4	Selects ring sound
	3: Ring Volume	Ringer Volume	Adjusts the ring volume
2 : Ring / Alert	4: 1 min Alert	1 min Alart On/Of	Determines whether alert beeps at one minute intervals when you make or receive a call
	5: Svc Alert	Svc Alert On/Of	Determines whether alert beep should sound when you are out of the service area
	6: Alarm Tone	Alarm Tone Monotone1~6/Melocty1~4	Selects alarm sound
3 : Time	1:Alarm	Set/Release	Sets/ Release an alarm
	2: Call time		Shows the time of last call made
	3: Air Time		Shows accumulated call time
	4: Cir Air Time	Clear Air Time Yes/No	Resets accumulated call time
	5: Select Time	Select Time No Time & Date/ AMPM/24 Hours	Selects time expression mode
	1: Greeting		Used to change greeting
	2: New Code		Used to change look code
	3: Restrict	1. Outgoing	Used to limit outgoing calls
		2. Int. Call	Used to limit international call
		3. Receive Cal	Used to limit incoming calls
4 : Security		4. Long Call	Used to limit long distance calls
	4: Reset Phone	SYSTEM RESET RESET/CANCEL	Returns the phone to factory setting
	5: Auto Look	AUTO LOCK SET/RELEASE	Used to lock the phone
	6: My Phone#		Used to check your phone number
	7: Voice Privacy	Standard / Enhanced	Protect illegal wiretapping

MENU OPTION TABLE

* The lock code is preset to 0000 at the factory.

CDMA WIRELESS LOCAL LOOP PHONE

L.			Explanation
5: Phone Book	t:Search	SEARCH OPTION NAME / MEMORY / NUMBER	Used when searching for a phone number in the phone book by alkhumber/stored memory reference number
	2 : Erase	SEARCH OPTION NAME / MEMORY / NUMBER	Used when erasing a phone number in the phone book by memory and number
6: Call Logs	1 : Outgoing		Stores ten phone numbers called mos recently
	2 : Incoming		Stores ten phone numbers of calls received most recently
	3 : Erase Logs		Erase outgoing / Incoming log

* At MENU, press " or return to the previous menu.

Axess Telecom Co., Ltd.

Printed in Korea Code No. : P00-DCC UM-X0V1.0 2002.10. Revision

685, Buk-Ri, Namsa-Myun, Yougin-City, Kyunggi-Do, Korea 449-884 Te1: +82-31-718-7365 Fax: +82-31-716-1894 www.axesstelecom.com