

# AT-LP3XBT

## Quick Start Guide

Automatic Wireless Turntable

## Guide de démarrage rapide

Platine sans fil automatique

## Kurzanleitung

Automatischer kabelloser Plattenspieler

## Guida rapida

Giradischi wireless automatico

## Guía de inicio rápido

Giradiscos inalámbrico automático

## Guia de início rápido

Toca-discos automático sem fio

## Краткое руководство по установке

Автоматический беспроводной проигрыватель

## 快速启动指南

自动无线唱盘机

## 快速入門指南

自動無線唱盤機

## 간편 사용 설명서

자동 무선 턴테이블

## Audio-Technica Corporation

2-46-1 Nishi-naruse, Machida, Tokyo 194-8666, Japan

www.audio-technica.com

©2021 Audio-Technica Corporation

Global Support Contact: www.at-globalsupport.com

162502300-01-01

ver.1 2021.08.01



<https://www.audio-technica.com>

## Support

For more information on how to use this product and troubleshoot any problems, refer to the user manual on the Audio-Technica website.

## Support

Pour plus d'informations sur l'utilisation de ce produit et la résolution des problèmes, reportez-vous au manuel de l'utilisateur sur le site Web d'Audio-Technica.

## Unterstützung

Weitere Informationen zum Gebrauch dieses Produkts und zur Behebung eventueller Probleme entnehmen Sie bitte der Bedienungsanleitung auf der Website von Audio-Technica.

## Assistenza

Per maggiori informazioni sull'utilizzo del presente prodotto e per la risoluzione di eventuali problemi, fare riferimento al manuale dell'utente sul sito Audio-Technica.

## Asistencia

Para más información sobre el uso de este producto y la resolución de problemas, consulte el manual de usuario en el sitio web de Audio-Technica.

## Suporte

Para obter mais informações sobre como usar este produto e solucionar qualquer problema, consulte o manual do usuário no site da Audio-Technica.

## Техническая поддержка

Для получения дополнительной информации о том, как использовать этот продукт и устранять любые неисправности, обратитесь к руководству пользователя на веб-сайте Audio-Technica.

## 支持信息

关于如何使用本产品及解决各种问题的详细信息，请参阅“铁三角”网站上的用户手册。

## 支援資訊

 
有關本產品的使用方法以及各種問題的故障排除方法，請參閱「鐵三角」網站上的使用說明書

## 지원


본 제품의 사용법 및 문제 해결에 관한 자세한 사항은 Audio-Technica 웹사이트의 사용자 설명서를 참조하십시오.

## Preparation


### 1 Set the platter.

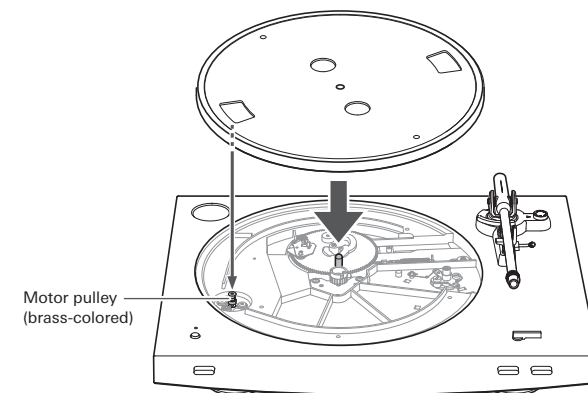


### 2 Attach the drive belt to the motor pulley (brass-colored).

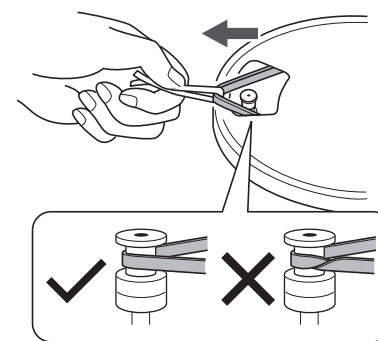 


### 3 Remove the red ribbon from the drive belt.

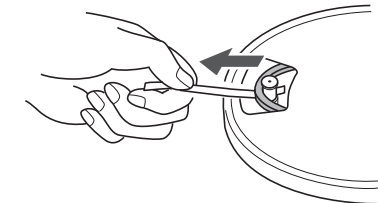 


### 4 Set the felt mat.

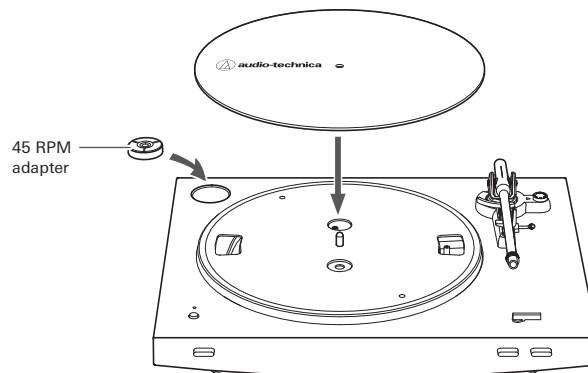 


### 5 Mount the product on a level surface.

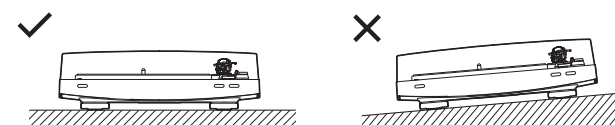 


### 6 Insert the headshell into the tonearm, and remove the cartridge's protector.

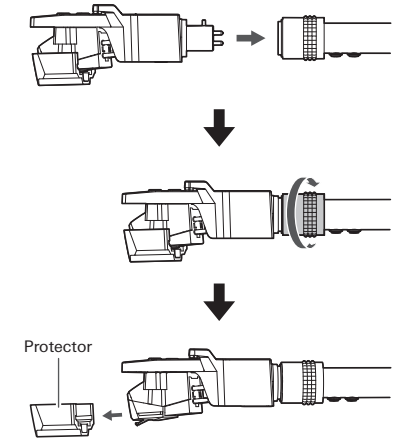 


### 7 Attach the counterweight to the back of the tonearm, and slowly turn it counterclockwise (to the left).

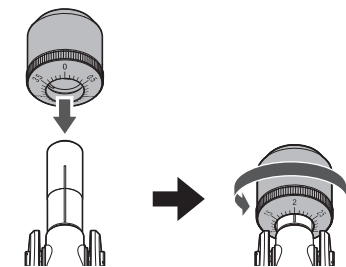 


### 8 Turn the counterweight to adjust the tonearm's balance so that the tonearm is level when you release the headshell.

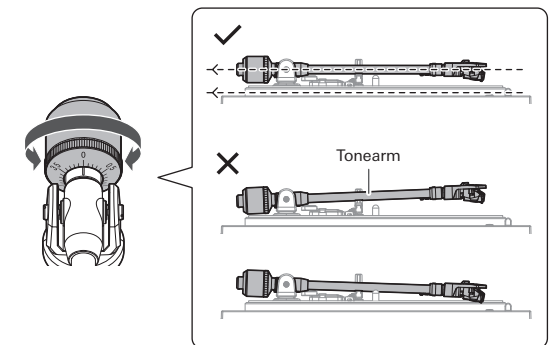 


### 9 Set the tracking force gauge ring to the "0" position. After that, turn the counterweight and the tracking force gauge ring together counterclockwise (to the left) to the "2" position.

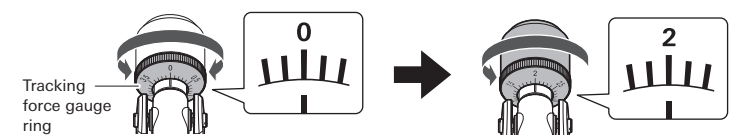 


### 10 Set the anti-skate control dial to "2", the same value as the tracking force value.

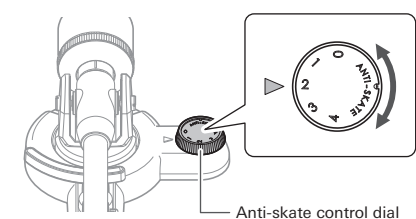 


## Contents

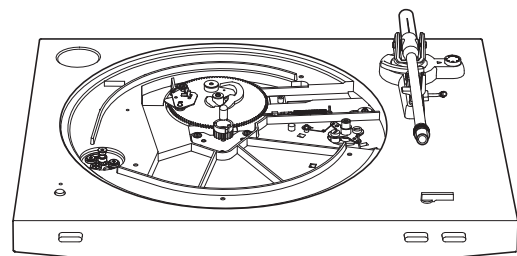 


Turntable body

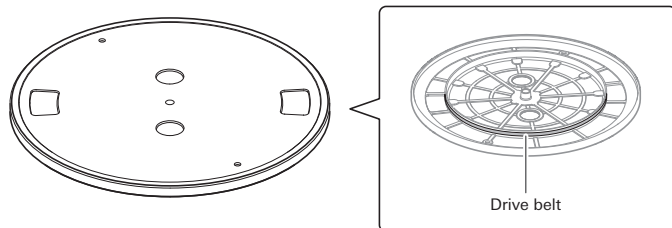 


Platter (with drive belt)

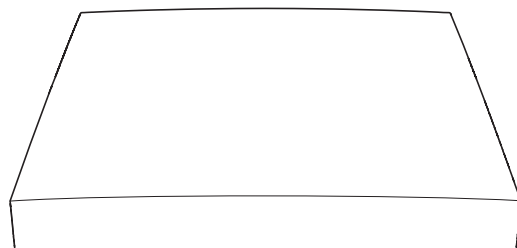 


Dust cover

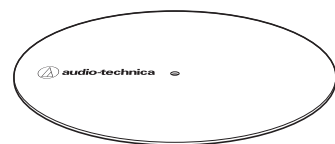 

Felt mat

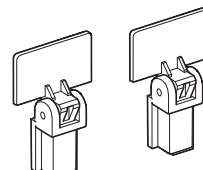 

Dust cover hinges

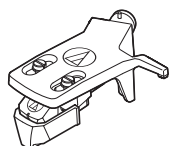 


Headshell with VM stereo cartridge




Counterweight



 45 RPM adapter

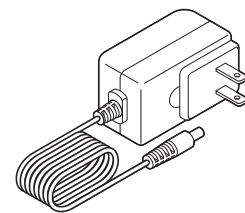


AC adapter

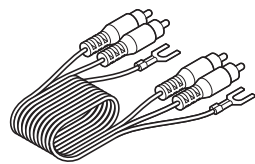 

RCA audio cable

## Wired Connection

 This product has a built-in phono equalizer function. You can use the product, even if you do not have a phono amplifier or connectable equipment with a built-in phono amplifier, by connecting an active speaker, etc. Use the pre-amplifier selector switch to set the output.

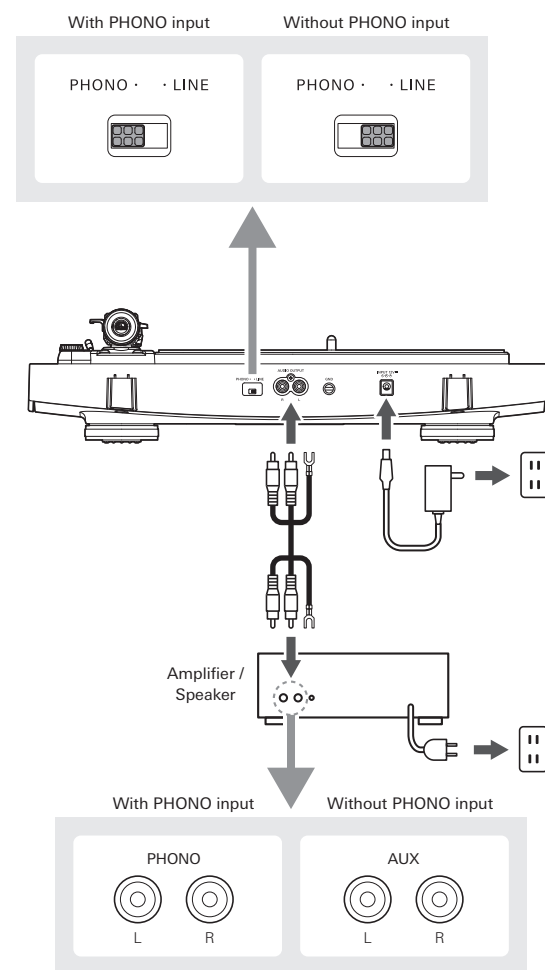


## Wireless connection


- 1 Set your Bluetooth headphones, speakers, etc. to pairing mode.



 - 2 Press and hold the wireless function button.

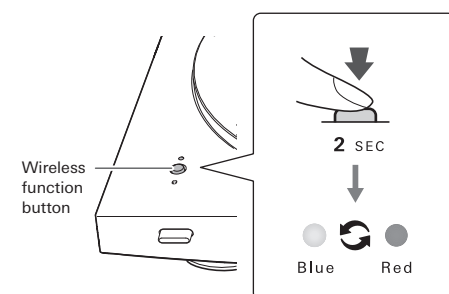


 - 3 When pairing is complete, the indicator LED lights in blue.

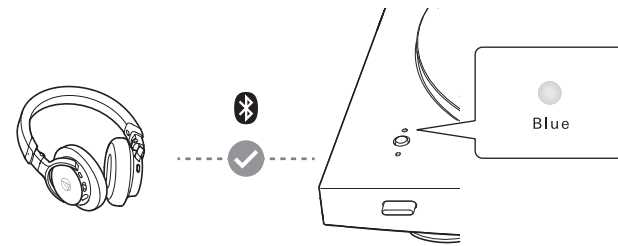


## Play

 - 1 Remove the cartridge's protector.





 - 2 Place a record on the felt mat, select the size with the size selector, and then select the speed with the platter speed button.

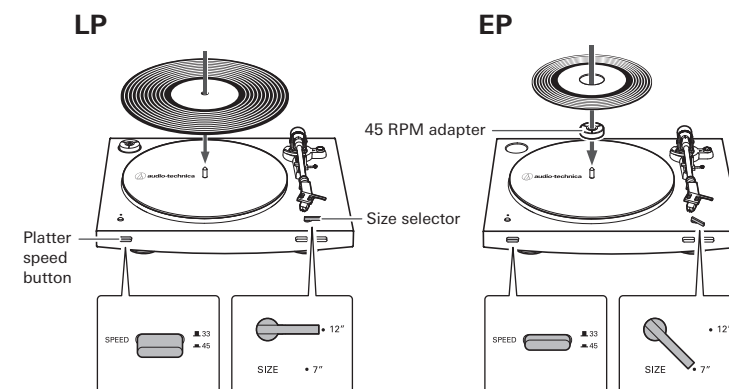


## Auto

  - 1 Press the START button.

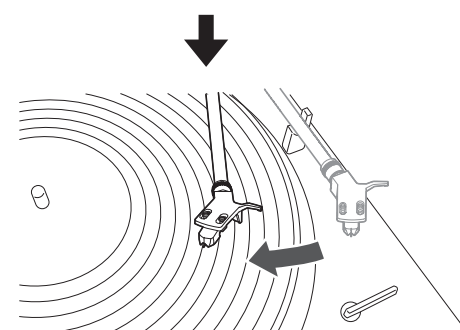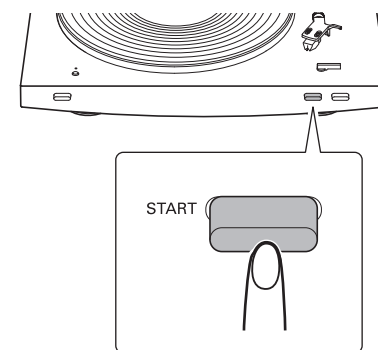


## Manual

 
- 1 Raise the tonearm by lifting the tonearm lift control lever to the UP position.

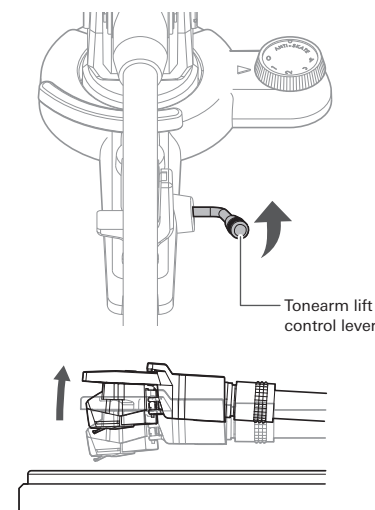

 - 2 Position the tonearm over the desired location (groove) on the record.

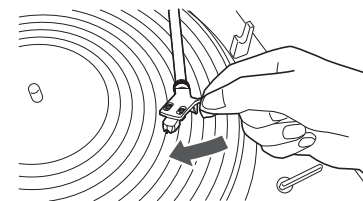


 - 3 Lower the tonearm by moving the tonearm lift control lever to the DOWN position.

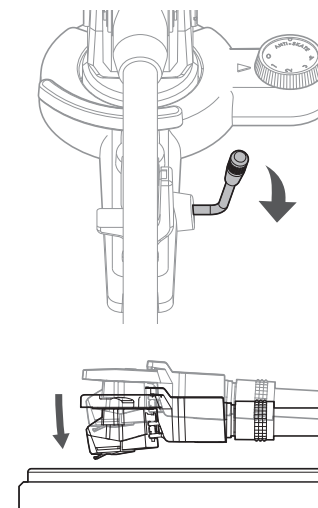


## Stop

 
- 1 If the product is connected via a wired connection, lower the volume of the connected device (amplifier, etc.).

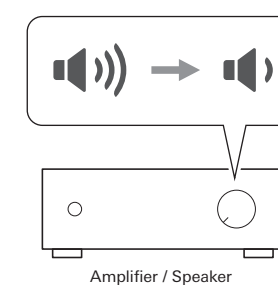

- 2 Press the STOP button.

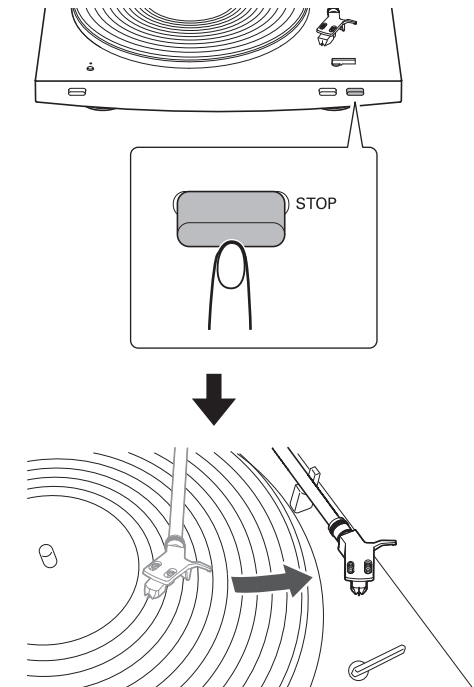 


- 3 Attach the cartridge's protector.

 

## Cleaning

For details about turntable and cartridge care accessories, visit <https://www.audio-technica.com>.
 
## Stylus

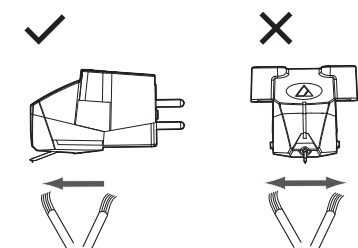

## Record

