

140mm

 
90mm

Afuclim  
PET

## QUICK START GUIDE

### Dog Training Collar

Model: FF01

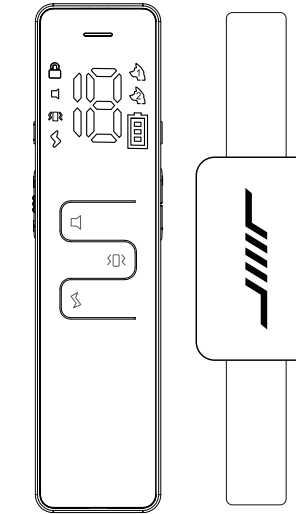

Please read the quick start before use

✉ Support@afuclimvip.com

## Important Safety Information

### A WARNING

**1. Your dog must be at least 6 months old to use this training collar**

**2. Not leaving the collar on your dog over 12h per day. (Better within 6h.)**

**3. Reposition the collar on your dog's neck every 1-2h**

**4. Not install the metal contact points when shock function is not be used**

**5. Check the skin condition of dog's neck every day, for any abnormalities please suspend the use of this product and consult doctor**

 
1

## Specifications

Product name : Dog training collar  
Product model: FF01  
Material: ABS  
Battery capacity: remote control 300 mAh; receiver 300mAh  
Charging voltage:5V/250mAh  
Charging time: 1.2 hours  
Charging port: Type-c USB  
Operate range: 1600FT  
Remote controfrequency: 433M FSK  
Operating temperature: -32-104 , <95%RH  
Remote Waterproof Rating: Non-Waterproof  
Receiver Waterproof Rating: IPX7  
Standby time: 20 days for remote control; 10 days for receiver.  
Receiver sensitivity:-126DBm  
Endurance: 6H continuously working  
Working temperature: -30 C - 70 C  
Storage temperature: -30 C - 85C  
Scope of application: all kinds of dogs

2


## Overview (Remote)

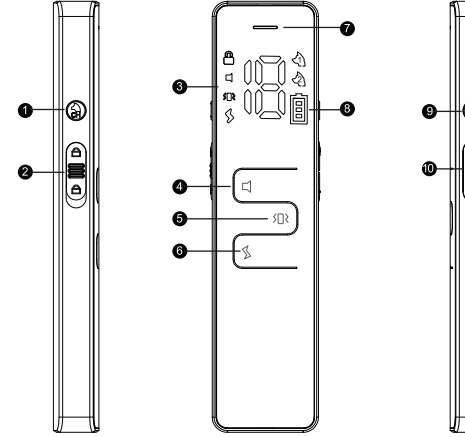

1. Channel Conversion
2. SwitchLock Keyboard
3. Level Display
4. Beep Button
5. Vibration Button
6. Shock Button
7. LED Indicator
8. Battery Display
9. Setting Mode
10. Shock /Vibration Level + -

3

## Overview (Receiver collar)

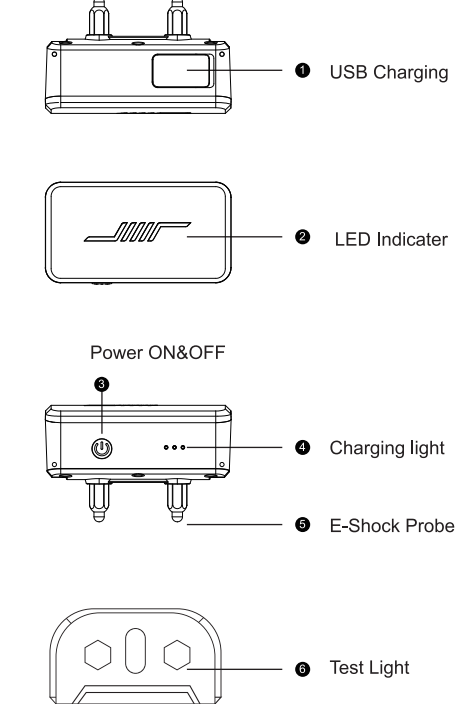 

4

## Pairing Operation

**Tips: In the 1-pair package, the receiver and controller are already paired on dog channel 1 by default.**

 
1. Operate the remote: press CH button to select the channel you need.
2. Operate the receiver: Briefly press the power button twice, till the light turned green and start flashing.
3. Operate the remote: Press vibrate or beep or shock button to finish the pairing.
4. When the blue light turned off means the pairing has done.
5. Change the channel: If you want to change the receiver's channel, please repeat the above procedure.

5

## Function Test


### Beep Test

A press on the Beep button will deliver a beep with non-adjustable volume to the receiver.

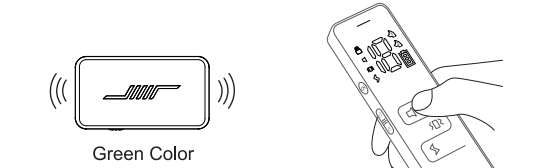

### Vibration Test

 A press on the Vibration button will deliver a vibration with non-adjustable intensity to the receiver. 8-level setting

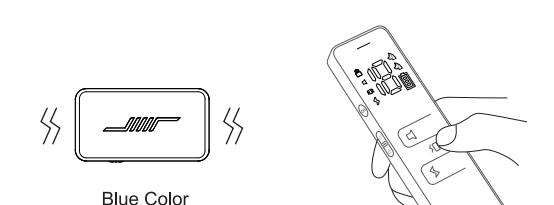


6

## Function Test
 
### Shock Test

Put the test lamp vertically on the contact points and make sure the metal wire in the test lamp has direct contact with the top of the points. Press the Shock button to send a shock to the receiver, the test light will be light. The light changes its brightness accordingly with the Shock Level adjusted from 0-18 level.

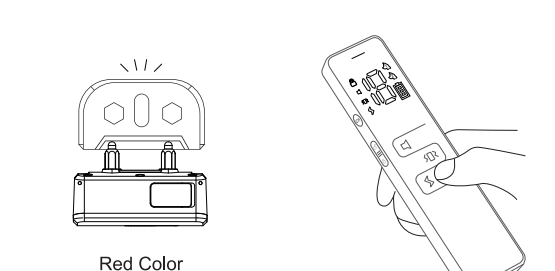


7

## How to setting level

 
### Vibration Level :

1. Press M button first,
2. The vibration icon flashes,
3. Press the plus and minus buttons

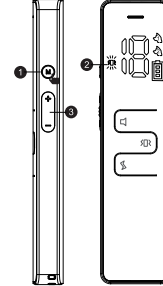

### Shock Level:

 1. Press M button
2. The shock icon flashes,
3. Press the plus and minus buttons

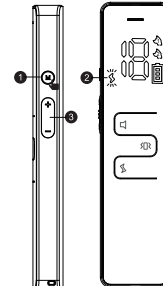

8

## Certification Statements



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.  
**Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**  
**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

9

## Certification Statements



from that to which the receiver is connected.  
• Consult the dealer or an experienced radio/TV technician for help.



The company declares under its own responsibility that this product complies with the basic requirements of CE (2014/30/EU) and RoHS (2011/65/EU). Without the approval of our company or the distributor, unauthorized changes or modifications to the equipment may violate the CE regulations, may cause the user to lose the right to operate the equipment, and invalidate the warranty.



### Recycling Information & Battery Disposal

Please observe the regulations for electronic and electrical devices to be disposed of in the respective country. In some countries or regions, this device must be recycled. If this device is no longer required, it must not be disposed of with normal municipal waste. Separate collection of spent batteries is required in many regions; check the regulations in your area before discarding spent batteries. For more recycling information, please refer to local regulations.

10

## Warranty

**12-month limited warranty**

**Any Problem Please Email US**

**Customer Support:**  
**Support@afuclimvip.com**

**Made in China**



11