

blackweb

PULSE

BLUETOOTH® SPEAKER

Model: BWA17AA002

PRODUCT GUIDE

Thank you for purchasing the Pulse Bluetooth® Speaker for smart phones, tablets, notebook computers and other Bluetooth enabled devices. This product combines high-tech innovation with design to provide you with years of dependability and enjoyment.

Safety Precautions and Maintenance

Please read these operating and maintenance (servicing) instructions before installing and operating your speaker.

Warning: To reduce the risk of fire or electric shock, do not expose this speaker system to rain or moisture (including swimming pools or objects filled with liquids, such as vases or drinks).

Important Safety Instructions

1. Always read Safety and Operation instructions before use. Retain instructions for later reference.

2. For indoor use only. Do not expose the speaker to liquid, moisture or humidity.

3. Do not use abrasive cleaners to clean the speaker case as they may damage the finish. Always unplug the unit before cleaning.

4. Do not expose the speaker to extremely high or low temperatures.

5. Keep the unit away from direct sunlight.

6. Use only accessories and attachments as supplied and designated in the instruction manual.

7. Do not attempt to open or modify the speaker in any way, as it does not contain any serviceable parts. Please refer all servicing to qualified personnel.

8. Please store the unit in a dry place that is free from extreme temperatures and dust.

9. Always operate the speaker on a flat and level surface.

10. Always operate the speaker away from children and small animals as they may play with the power cord and other small parts.

11. Always dispose of the packaging and the unit in accordance with the local regulations and in a responsible manner.

The FCC Wants You To Know

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

Speaker Overview

1

2

3

4

5

6

7

8

9

10

1. Power ON/OFF

2. Vol-

3. Vol+

4. Switch LED themes

5. Play/Pause/Hang up/Answer the call

6. Charging / Working status indicator

7. MIC

8. AUX IN

9. USB charging

10. RESET

Package Content

Main unit x1

USB Charging Cord x1

User Manual

Bluetooth connect

Long press "⏻" to power on and power off. Power on the speaker, speaker will prompt "Pairing" the blue indicator will start blinking rapidly.

Once paired, the Blue LED light will turn on steadily.

Activate the Bluetooth function on your device and search Bluetooth devices, and select "BWA17AA002" to start connecting.

Play

≤ 33 feet

When listening to music on the speaker, press "⏮" or "⏭" to adjust volume, and press "⏸" to Pause or Play.

Conference Mode

When receiving an incoming call on your cell phone via bluetooth linked with the speaker, tap the "📞" to answer, press "⏮" or "⏭" to obtain the desired sound level. To end the call just tap the "📞" again on the speaker. To ignore an incoming call, simply press and hold the "📞" on the speaker for about 2 seconds. Tap twice the "📞" button can dial back the last phone call.

LED Themes

Rainbow

Meteor

Club

Equalize

Groove

Just playing music status will have these themes

Short press the "🌈" to switch the LED themes, there are five different LED themes.

Adjust lightness: Press the "🌈" + "⏮" button to decrease the lightness, press "🌈" + "⏭" to increase the lightness

Charge

Can be charged by using the USB to Micro USB cord (included) through computer or AC adaptor with USB jack (not included). Approximately 4 hours required for full charge.

Note: If the battery is empty, you need to charge it at least 30 minutes to be able to listen to the music.

Aux in

Use a 3.5mm cable (not included) to connect the speaker to another audio source. Press Play on the device and adjust the volume on the unit to obtain the desired volume.

Technical Specifications

\* Amplifier power: 3.5W x

\* Battery type: Li-ion rechargeable

\* Bluetooth transmitter frequency range: 2.402 – 2.480GHz

\* Bluetooth transmitter power: Class 2

朗琴 KUNQIN			
版 本	时 间	20161216	订 单 号
设 计 者	公司型号	T800F	客户型号
设计者	设计内容	说明书	料 号
复 核	描 图	PLM文档编号	
	标准 化	项 目 修 改	
	业 务	产 品 设 计	
		核 准	

展 开 尺 寸	490X70mm
成 型 尺 寸	70X70mm
材 质 要 求	120G书纸
印 刷 要 求	全彩印刷
工 艺 要 求	风琴折
页 码 数 ( 页 )	7页 ( 按成型尺寸计算页数 )

字体要求，两种字体：  
Pirulen Regular  
Myriad Pro Regular