



Monster Airmars XKO01 FCC ID:2 A8 PV-QSM XKO0 1

BLUETOOTH WIRELESS HEADPHONES INSTRUCTIONS MANUAL



Product parameters

 Bluetooth version V5.3
Transmission distance 10m
• Driver diameter Φ16.2mm
 Driver impedance 20Ω
Sensitivity 106±3dB
Frequency response 20Hz-20kHz
Battery capacity(Charging case) 400mAh 3.7V
Battery capacity(Headphone) 50mAh 3.7V
Charging time(Charging case) ≈1.5 hours
Music playtime(Headphone) ≈7 hours
 Music playtime with charging case ≈28 hours

Product Schematic Description

(66)	Headphone*2		Charging case*1
	Instructions Manual*1	6	Type-C Charging Cable*1

Product Schematic Description



Charge the charging case

Connect the charging case to the 5V power adapter with Type-C charging cable.



Rated input: 5V==40mA(Headphone)

Rated input: 5V===320mA(Charging case)

Tips : When the cover of the charging box is closed, the blue LED on the left side of the charging box flashes 5 times continuously, then goes out. Please charge the charging box.

(Indicator guide)

Mode	Describe	Sound prompt
Power On	The headphones LED indicator flash in ice blue light for one second.	"Power on"
Power Off	The indicator LED of headphones show blue and quickly flash 3 times	"Power off"
Pairing	Two headphones are flash blue slowly	"Pairing"
Connected	The headphones LED indicator is off.	"Connected"

Mode	Describe	Sound prompt
Disconnected	The headphones LED indicator flash in ice blue quickly.	"Disconnected"
Low Battery		"Battery low"
Headphones placed in charging case	The indicator LED of headphones stay on blue when fully charged it goes out.	_
Charging case low power	The left blue LED flashes 5 times continuously , then turns off.	
Charging case charged	According to the the three charging indicators flash from left to right.	_
Charging case fully charged	Three blue lights are always on.	

Wearing Guide



Step one Open the upper cover of the charging box and take the headphones out of the charging box lef



Step two

Use the illustration to hold the main body of the headphone with your thumb and forefinger respectively, and use your middle finger to push the hook , also keep it is in this state.



Step one Keep the second step

and slowly rotate the headphone along the inner side of the ear until it fits the ear.



Step four Wear headphones and enjoy music

Product operating instructions

1. Power on

Method 1: Open the charging case, the headphones will turn on automatically. Method 2: Long touch the MF button of the headphones for 3s to turn on the headphones.

2. Power off


Method 1: Put the headphones into the charging case and close the cover. Method 2: When the headphones is not connected to the Bluetooth device long touch the MF button of the headphones for 5s to turn off the headphones. Method 3: After disconnected from the Bluetooth device for 3 minutes.

3. Pairing

Step one: Open the charging case, the headphones will start pairging automatically.

Step two: Search and click for "Monster Airmars XKOOI" on the Bluetooth list of the smart device, and when connection is successful, "Connected" will be heard.

 * Headphones will try reconnecting to the device within 3 minutes when connection is lost




NOTE:

* Fully charge the headphones and power off before an intended not-in-use period.

* Unplug the charging cable after charging

Operation

Normal

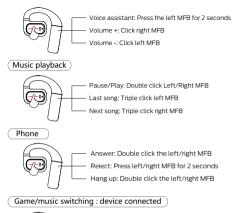



Press right MFB for 2 seconds ro enter game mode

Press right MFB for 2 seconds to enter music mode

Restore factory settings

When you turn on the headphone, make sure it does not connect to any Bluetooth device, and click the MF button 5 times to clear the pairing record, then turn off the headphone.

Precautions

- Headphones will turn on automatically(needless to press any button) pair and connect the device when the charging case is opened. After placing the headphones in the charging case, they will turn off and automatic charging will start when the cover is closed.
- Charging every 15 days will extend battery life when not in use often. Cleaning off dirt on the charging contacts by cotton swabs with alcohol will maintain a good contact for charging.
- Keep battery (battery pack) away from inflammables or excessive heat such as direct sunlight.
- Intermittent is normal during playback for wireless products due to environmental factors, device brand, users' behavior, etc.

Warnings

- 1. Do not use headphones at high volume for an extended perios of time.
- 2. Keep the headphones away from dust and water.
- 3. Do not disassemble the headphones and accessories, otherwise warranty will be voided.
- 4. Keep headphones away from any impact or vibration.
- 5. Do not use any chemical solvents or cleaning agent on the headphones.

Name of the Parts	Hazardous Substances					
Name of the Parts	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Housing	0	0	0	0	0	0
Loudspeakers	0	0	0	0	0	0
PCBA	х	0	0	0	0	0
Accessories	х	0	0	0	0	0

This table is compliled according to SJ/T 11364

O : Indicates that this hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.

X : Indicates that this hazardous subatance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help. This device complies with part 15 of the FCC Rules.

Operation is subject to the following twoconditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

CMIIT ID:2023DP3136



Environment Friendly Use Period(EFUP)

This logo refers to the period (10 years) during which the hazardous substances in electronic and electrical produsts will not leak or mutate so that the use of these [substances] will not result in any severe environmental pollution, any bodly injury or damage to any assets.

Warranty Service

Dear user, this warranty card is the proof of your future warranty application, please cooperate with the seller to fill it out and keep it for future use!

User info				
User name		Email		
Contact number		Postal o	code	
Mailing address				
Product information				
Product name		Product number		
Product barcode / Serial number / Batch number				

Vendor information			
Name			
Address			
Contact number		Postal code	
Sales date		Invoice number	
Remark			

