

WL917 竞速高速船 RC/Racing Boat




请仔细阅读说明书后，方可操作。说明的图片可能与实物有所不同，
请以实物为准。
Please read the instructions carefully, before operation, indicating that the picture
might be different in kind. Please prevail in kind.

1. 这款产品是通过向后高速喷出水柱实现向前航行。无外螺旋桨，安全性高，
使用先进2.4G双向传输技术，可回传电量不足时的报警信号。
1. The product realizes forward navigation by spraying water column at high speed
backward. It has no leakage blades and high safety. It uses advanced 2.4G two-way
transmission technology to return the alarm signal when the power is insufficient.
2. 7.4V 800MAH 15C 高容量高效倍率锂电池。续航12分钟左右。
2. 7.4V 800MAH 15C High discharge rate high capacity lithium battery. Life of about
12 minutes.
3. 艇体的船体长度为 (260MM)
船体宽度为 (68MM)
船体高度为 (83MM)
3 Specification of the hull length (260MM)
Hull width (68MM)
Hull height (83MM)

遥控器电池安装方法(Remote Control Battery Installation)

电池：打开电池盖对遥控器放两节1.5V AA电池，电池正负极要放正确。然后合上
电池盖。（见图）


Battery: open the battery cover and place two 1.5V AA batteries on the remote control.
The positive and negative poles of the battery should be placed correctly, and
then close the battery cover. (see Figure)

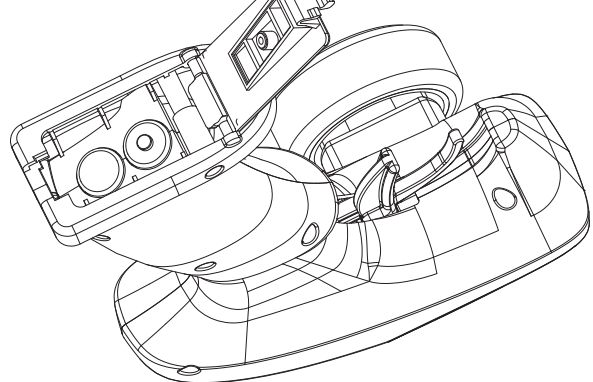

可再充电电池 (Rechargeable battery)


连接电池和充电器，将充电器插入电源插座充电约120分钟。

Connect the battery and charger, the charger into a power
outlet for charging about 120 minutes.

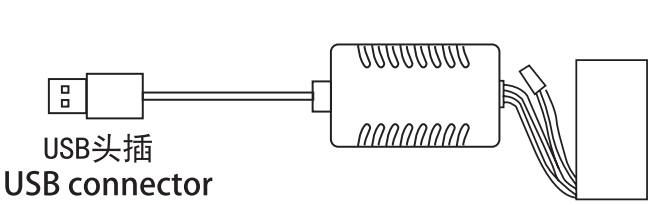


1

船模型电池的安装方法(ship models battery installation method)

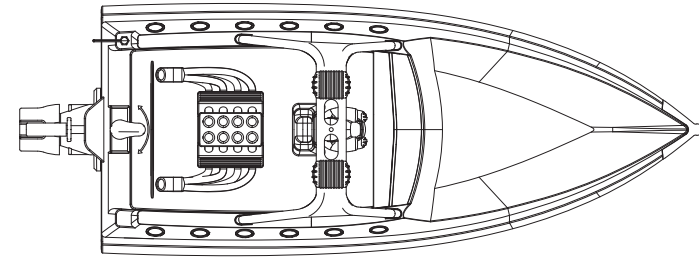


1. 松开船盖锁紧旋钮，把船盖打开。
1. Loosen the locking knob of the ship cover and open the ship cover.

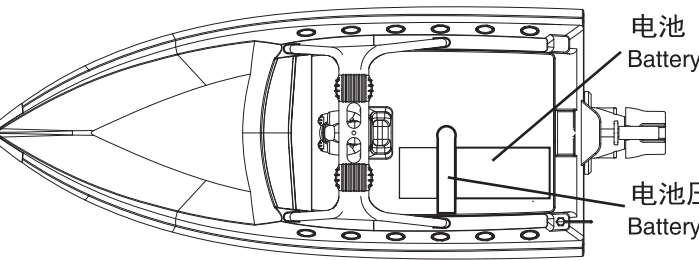

2. 把电池装入电池箱，并固定好，然后盖上：船仓盖，在把旋钮拧紧。
2. Put the battery into the battery box, fix it, then cover it: the cabin cover, and tighten
the knob.

**注意：在船模上使用时注意水柱系统的水管不可
有堵塞，以免充能不足导致无法充电。
注意：当电池充电时，系统管道应注意不要
堵塞，以免导致系统管道堵塞，造成充能不足。
注意：当电池充电时，系统管道应注意不要
堵塞，以免导致系统管道堵塞，造成充能不足。**

船模与遥控器对码 (Code matching between ship model and remote controller)
先把船模上电，然后打开遥控器开关。转动一下方
向旋钮，把舵机左右移动，直到舵机
Firm power on the ship model, and then switch on the
controller. Turn the direction knob, turn the injection
port left and right, and the code alignment is completed.

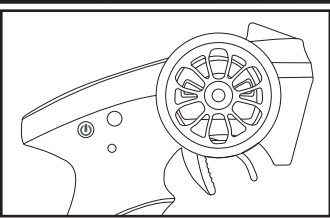

2

(Security Alert) 安全警告


1. 由成年人负责更换电池。
2. 不能在使用完后立即给电池充电，在充电之前必须等到电池冷却。
3. 只可使用盒盖和说明节上的建议使用电池。
4. 小心地按指示以正确的电池极性放入电池。
5. 切勿混会使用新旧电池和充电电池，或不同型号的电池。
6. 非充电电池不可充电。
7. 为充电电池充电前，先把电池从船模中取出。
8. 只可在成年人指导下才可作为充电电池充电。
9. 错误的电池连接可能导致火灾。
10. 避免短路。短路会导致电池和充电器变得过热或造成其他损害。确保
电池块和充电器在充电时放在小孩够不到的地方。不能在靠近火或重
近温度比较高或潮湿的地方充电。充电器在充电时会有轻微发热。
11. 身体不要触及到螺旋桨。

- 1 batteries should be replaced by adult.
- 2 You can not charge the battery immediately after use, must wait until
the battery to cool before charging.
- 3 Use only with box and instructions on the recommended batteries.
- 4 Carefully follow the instructions in the correct battery polarity into the
battery.
- 5 Do not mix old and new batteries and rechargeable batteries, or
different types of batteries.
- 6 non-rechargeable battery is not charged.
- 7 Charge the rechargeable battery before the first battery is removed
from the Ship model.
- 8 can only be under the guidance of adult rechargeable battery.
- 9 dead batteries should be removed from the yacht.
- 10 Avoid short circuit. Short circuit may cause the battery and charger
to overheat or cause other damage. Ensure Battery pack and charger
during charging out of reach of small children. Not near the fire or by
Near relatively high temperature or humid places charge. Charge
when charging a slight fever.
- 11 Do not touch the propeller body.

3

操作方法 (Method of operation)

1. 使用时，将遥控器和船模对好码，把船模放入水中，将遥控器油门向后拉，螺旋
桨旋转，船模前进。向左边/右边转动方向旋钮，船
模左转/右转。（当舵机电量不足时，电量指示灯开始闪烁，并带有报警声，这时需
更换新的电池）
1 When using the remote control and the ship model of good code.
Mold boat into the water, will pull back the throttle, propeller, ship
model forward to the direction of rotation of the knob left / right,
ship model left / right (when the remote control is running low, the
power light starts flashing, with an alarm sound, then the need to
replace the battery)

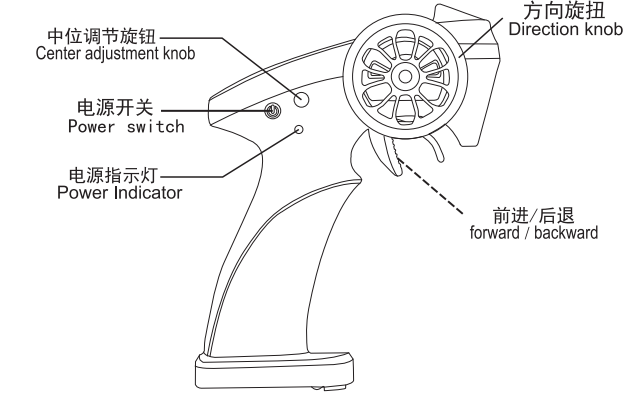

2. 使用前请确定周围无干扰

注意：（1）、14岁以下的使用者必须在成人的指导下操作。

- （2）、下水航行前先发艘水中有无杂物，如果杂物过多，船模航行时可能
会碰撞性碰撞障碍物。建议不要在无杂物情况下使用。
2 before use to determine without interference around
Natal (1) users under 14 years old must be supervised by an adult action.
(2) observe the water before sailing into the water without debris, if too much debris,
sailing boats may Entangled in the propeller will be suspended, the water is not
recommended in these operating boats.

3. 长时间不使用本船模时，请取出遥控器及船模的电池。
3 When not using the boat, remove the remote control and the boat battery.
4. 本船模产品遥控半径 80米。请注意不要超出遥控范围，以免发生失控现象。
4 The radius of 80 meters remote control speedboat product, please be careful not to
exceed the remote range to avoid runaway.

4

微调操作方法 (Fine tuning operation method)

1. 调整遥控器上的中位旋钮，可调整船模的直线行驶性能。
当船模右行驶时，向左调节旋钮直到船模直线行驶。
当船模左行驶时，向右调节旋钮直到船模直线行驶。
Adjust the middle knob on the remote control to adjust the straight-line driving performance
of the ship model.
When the ship moves to the right, adjust the knob to the left until the ship model moves in
a straight line.
When the ship moves to the left, adjust the knob to the right until the ship model moves in
a straight line.

1. 在操作过程中如果遥控器发出滴滴的警告声，而且船速有明显的减少，则是
船模上的电池电量不足，请尽快把船开回岸边。
注意：电量警告信号启动后，遥控器会一直发出滴滴的响声，为了避免电量耗
尽请一分钟内把船开回来。
1. During operation, if the remote control sends out a drip warning sound and the ship cutting
speed is significantly reduced, the battery on the ship model is insufficient. Please drive the
ship back to the shore as soon as possible.


**Attention! After the power warning prompt is started, the remote control will make a
drip sound all the time. In order to avoid running out of power, please drive the ship
back within one minute.**

船模的保养 (Maintenance of ship model)

1. 每次玩耍结束后及时清理船仓里水，用软布擦掉船身的水份。船仓盖不要
盖紧，待船仓里面的水分自然蒸发再把船仓盖盖紧。
2. 海水比淡水腐蚀性大，在海水玩耍后一定要及时清理船模上的水份，以免损
坏机械传动部件。
3. 长时间不玩耍要把遥控器上的电池取出。
1. After each play, clean the water in the cabin in time and wipe the water off the hull with a
soft cloth. Don't cover the bunker cover until the water in the bunker evaporates naturally.
2. Seawater is more corrosive than fresh water. After playing with seawater, the water on the
ship model must be cleaned in time to avoid damaging the mechanical transmission parts.
3. If you don't play for a long time, take out the battery on the remote control.

5

主要配件 (Main accessories)

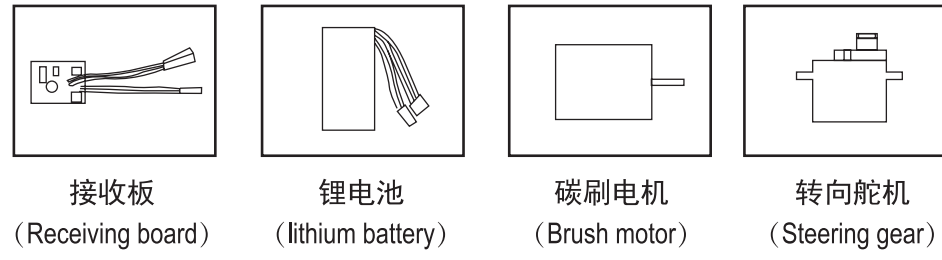

Warning:
This device complies with part 15 of the FCC Rules. Operation is subject to the following
two conditions:
(1) this device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may
cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance
could void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital
device, pursuant to Part 15 of the FCC Rules.
These limits are designed to provide reasonable protection against harmful interference in
a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not
installed and used in accordance with the instructions, may cause harmful interference to
radio communications. However, there is no guarantee that interference will not occur in
a particular installation if the equipment does cause harmful interference to radio or
television reception, which can be determined by turning the equipment off and on, the
user is encouraged to try to correct the interference by one or more of the following
measures:
-- Reorient or relocate the receiving antenna.
-- increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the
receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

6