


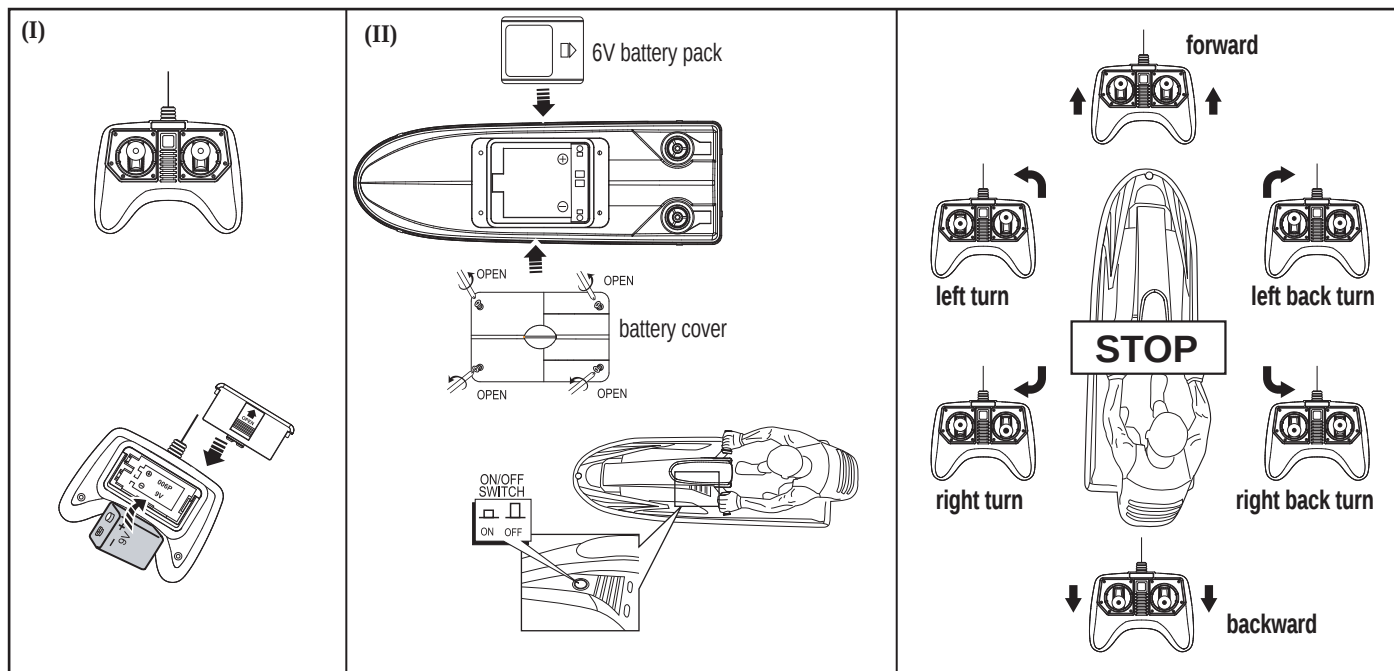

## OPERATING INSTRUCTIONS

Please read through this instruction manual carefully before starting to operate. It is recommended to operate the Jet Ski under adult supervision.

## FEATURES

7 functions (goes forward, backward turns left and right, stops)

**Note:** The Jet Ski is not designed to be used in oceans, rivers, lakes or streams. It is ideal for bath tub and pool play.

## BATTERY REQUIREMENT

- ~ One "9V" battery for transmitter.
- ~ 6V battery pack for Jet Ski.

**Note:** For the best performance and longer play time, alkaline batteries are recommended. Batteries are not included in this package.

## BATTERY INSTALLATION

### (I) Transmitter

1. Press and pull the battery compartment cover in the direction of the arrow to remove it.
2. Put the "9V" battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Replace the battery compartment cover.

### (II) Jet Ski

1. Press the ON/OFF switch on the Jet Ski to "OFF".
2. Use a Philip screwdriver (not included) to unscrew the battery door and remove the door to open.

3. Install the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.
4. Replace the battery door and screw the battery door to close.

## HOW TO OPERATE

1. Press the ON/OFF switch on the Jet Ski to "ON".
2. Use the transmitter's levers to control the movement and direction of the Jet Ski.

### Left Control Lever

- ~ Push forward to turn left.
- ~ Push backward to turn right.
- ~ Release to stop.

### Right Control Lever

- ~ Push forward to turn right.
- ~ Push backward to turn left.
- ~ Release to stop.

### Left Control Lever and Right Control Lever

- ~ Push left and right lever forward to move forward.
- ~ Push left and right lever backward to move backward.
- ~ Release to stop.

## HELPFUL HINTS

- ~ 2 Jet Skis can run together or race only in different frequencies.
- ~ If your Jet Ski moves slowly or does not move at all, replace the batteries with fresh ones.
- ~ For better performance, hold transmitter

antenna upright and pointing at the Jet Ski.

- ~ If the motor runs but the Jet Ski does not respond to the controller, replace the controller's 9V battery.
- ~ After use, take the Jet Ski out of water and press the ON/OFF switch to "OFF".
- ~ Dry the Jet Ski thoroughly before storing it. Leave the Jet Ski's battery compartment cover open while it is in storage to allow moisture to evaporate.
- ~ If you're not planning to play with the Jet Ski for a few days, remove the batteries. Never leave weak or dead batteries in the boat or/and controller, as they may leak damaging chemicals.
- ~ If a CB transceiver is being operated nearby, it may interfere with your control of the Jet Ski. If this happens, move your Jet Ski to a new location or wait until the CB unit stops transmitting.

## THE FCC WANTS YOU TO KNOW

**NOTE:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the User's authority to operate the equipment.