 
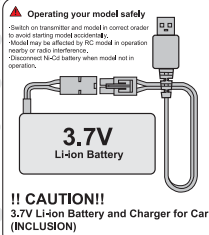 
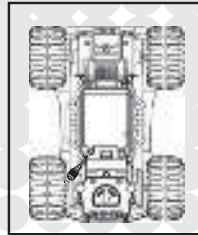 


ENGLISH  
INSTRUCTION MANUAL

**\*IMPORTANT:** PLEASE DO NOT RETURN TO STORE  
For more information please contact Customer Services: [help@hypertoys.com](mailto:help@hypertoys.com)

 
 
 
- Always store batteries in a safe place. Keep out of reach of children who are under the recommended age.
- Ask parents/guardians for help when replacing the batteries.
- ① Close switch, open cover.
- ② Install batteries accurately in the battery compartment and ensure to place batteries as marked with + / -.

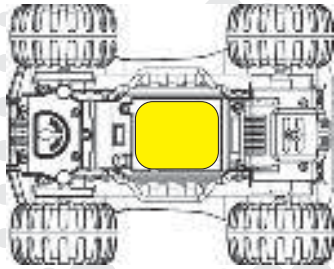

**CAUTIONS:**  
Any improper use of batteries might lead to liquid leakage, heat and splits. Pay attention to the following items:  
(1) Do not use new batteries and old ones at the same time.  
(2) Do not use batteries of different brands at the same time.  
(3) Do not install batteries to wrong + or - poles.  
(4) While installing motor parts, push it 30 degrees upward gently with the tip of one finger.

**WAY OF USE AND PAY ATTENTION TO THE FOLLOWINGS:**  
• Do not let children play under the adult.  
• Do not put small parts into the mouth, avoid eating.  
• Do not touch the fire, it hasn't a function on ultraviolet radiation.  
• Be included in small toys to not suitable under 3 years to play.  
• Please take note that the product may vary from the picture and the illustration of the package.  
• If the exterior a product the disposition and the specification is changed, excuse us.

- Always store batteries in a safe place. Keep out of reach of children who are under the recommended age.
- Ask parents/guardians for help when replacing the batteries.
- 1. Close switch, open cover.
- 2. Install batteries accurately in the battery compartment and ensure to place batteries as marked with + / -.

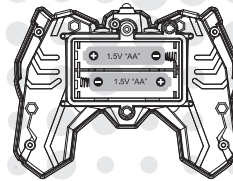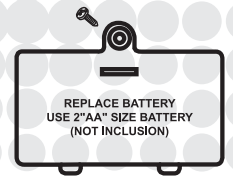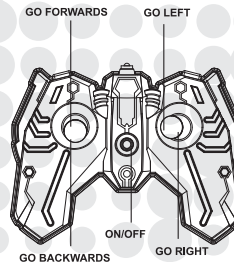

When low cell of batteries occurs, the racer slows down, replace the batteries.

**CAUTIONS:**  
Any improper use of batteries might lead to liquid leakage, heat and splits. Pay attention to the following items:  
(1) Do not use new batteries and old ones at the same time.  
(2) Do not use batteries of different brands at the same time.  
(3) Do not install batteries to wrong + or - poles.  
(4) While installing motor parts, push it 30 degrees upward gently with the tip of one finger.

**WAY OF USE AND PAY ATTENTION TO THE FOLLOWINGS:**  
• Do not let children play under the adult.  
• Do not put small parts into the mouth, avoid eating.  
• Do not touch the fire, it hasn't a function on ultraviolet radiation.  
• Be included in small toys to not suitable under 3 years to play.  
• Please take note that the product may vary from the picture and the illustration of the package.  
• If the exterior a product the disposition and the specification is changed, excuse us.



This device complies with the Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

The instructions did not provide with information stating:

- non-rechargeable batteries are not to be recharged
- rechargeable batteries are only to be charged under adult supervision
- exhausted batteries are to be removed from the toy
- the supply terminals are not to be short-circuited

Note:

- When the markings or instructions are on the packaging only, packaging shall also be stated that the packaging must be retained since it contains important information.
- When the markings or instructions are on the instruction manual only, instruction manual shall also be stated that the instruction manual must be retained since it contains important information.
- When part of markings or instructions are on the packaging and others are in instruction manual, it shall also be stated that the packaging and instruction manual must be retained since it contains important information.

This toy is only to be connected to equipment bearing either of the following symbols:



**WARNING:** This toy produces flashes that may trigger epilepsy in sensitized individuals.

This product contains a battery that is non-replaceable.

**CALIFORNIA PROPOSITION 65 WARNING:**  
This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).



**WARNING:**  
CHOKING HAZARD-Small parts.  
Not for children under 3 years.

**DISTRIBUTED BY:**  
**HYPER TOY COMPANY**  
1-866-204-9737 Toll Free  
177 Malaga Park Dr. Malaga, NJ 08328

**HYPER TOY CO**  
[help@hypertoys.com](mailto:help@hypertoys.com)

© Copyright 2025. HyperToys

**MADE IN CHINA**

