


11B-Ant1-2412-0~Reference-PASS



11B-Ant1-2412-30~1000-PASS



11B-Ant1-2412-1000~26500-PASS

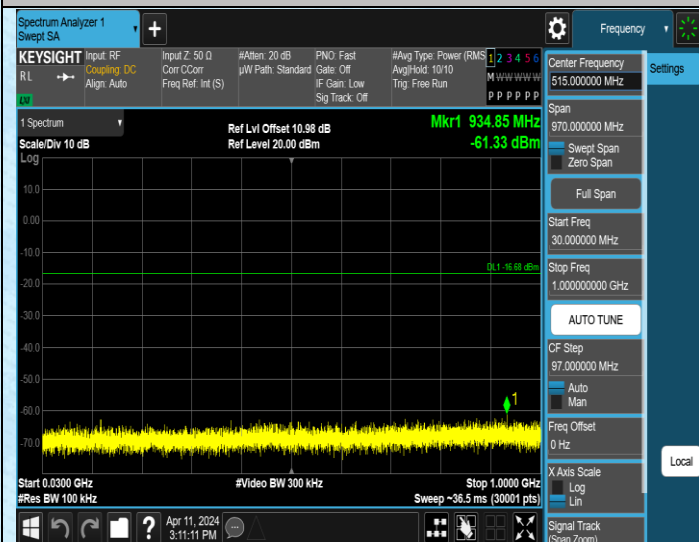


11B-Ant2-2412-0~Reference-PASS



11B-Ant2-2412-30~1000-PASS



11B-Ant2-2412-1000~26500-PASS

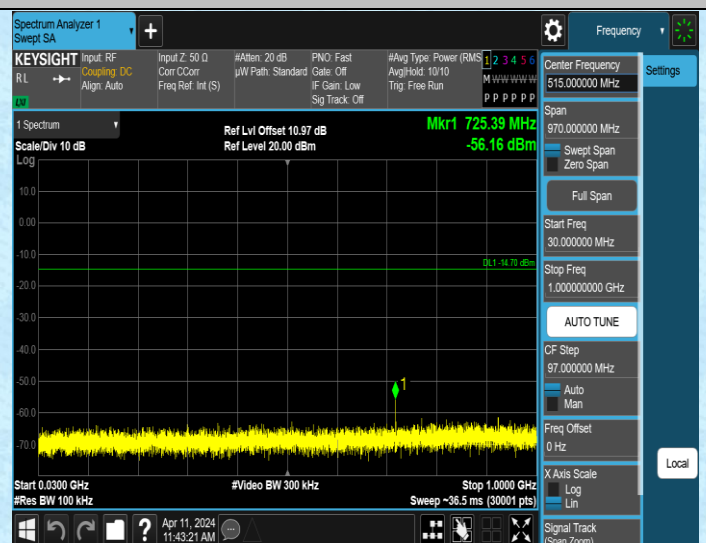

11B-Ant1-2437-0~Reference-PASS



11B-Ant1-2437-30~1000-PASS



