

Micnova®



MO-PR1 Remote Control

Pairing to your smartphone

- 1 Slide the remote control's power switch **ON**. The remote enters pairing mode and the LED blinks rapidly.
- 2 On your smartphone, turn on Bluetooth, then put it in pairing mode. For more information, see the documentation that came with your phone.
- 3 On your smartphone, select **STRIM-BTN10**. The remote control pairs with your smartphone and the LED blinks slowly.

Note: Pressing the  (shutter) button when your phone is not in camera mode may cause unwanted functionality (such as changing the volume). Turn off the remote control when it is not in use.

Taking a photo

- 1 Pair your smartphone to the remote control. See "Pairing to your smartphone" for more information.
 - 2 Open your smartphone's camera app.
 - 3 Press  (shutter) to take a single picture.
- OR
- Press and hold  (shutter) to take a series of photos (if your smartphone supports this feature).




- 4 When finished, slide the power switch **OFF**.

Note: The remote enters sleep mode and the LED turns off after 10 minutes of inactivity. Press  (shutter) to wake.


Replacing the remote battery

Note: The LED blinks quickly when the battery is low.

- 1 Use a Phillips screwdriver to remove the screw, then slide off the battery cover and remove the old battery.

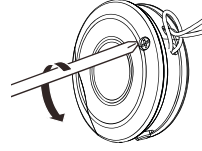

- 2 Insert a new CR2032 battery with the + facing up, then slide on the battery cover and replace the screw.

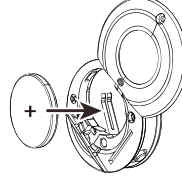

TROUBLESHOOTING

Remote control will not pair with my phone

- Move your phone and remote control within five feet of each other.
- Make sure that your remote control is not paired to another phone.

- Make sure that you selected STRIM-BTN10 on your phone.
- Turn your remote off, then on. Re-pair your remote control and phone.
- The remote control battery may be depleted. Replace the battery.

"STRIM-BTN10" does not appear on my phone

- Move your phone and remote control closer together.
- Put your remote control in pairing mode, then refresh your list of Bluetooth devices. For more information, see the documentation that came with your phone.

www.micnova.com

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.