


Pantone Black C

Cut Line

wireless retro speaker

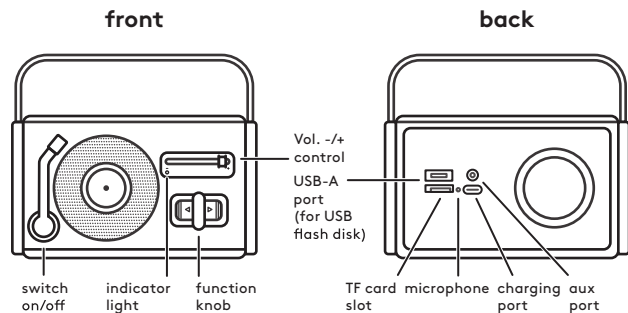

included

- Wireless Speaker
- USB-C Charging Cable
- 3.5mm AUX Cable

pairing

- Switch the speaker to on
- Rapid flashing white light
- Use Bluetooth settings on your phone to pair with HEYDAY SPEAKER 06
- White light turns solid followed by a chime - pairing successful

indicators

- * Flashing Red - Low Battery
- Solid Red - Charging
- No Red Light - Fully Charged
- Rapid Flashing White - Pairing Mode
- Solid White - Bluetooth Connected
- * Slow Flashing White - Play Music

- Ascending Tones - Power on
- Descending Tones - Power off
- Three Rapid Tones - Ready to pair
- Single Chime - Paired
- Two Rapid Dings - Low battery

function knob

- One push- prev. track(to left), next track(to right)
- Double pushes- play / pause (to left or to right)
- Push 2 sec.- modes(to left or to right): Bluetooth / FM radio
(in radio mode: one push- auto. search station, push again - stop search station)

front

4 in

charging

- Full charge requires approximately 1.5 hours
 - Charging is complete when red light turns off
 - Plug USB-C end of charging cable into back of speaker
 - Plug USB end of charging cable into a power supply of at least DC **5V 1A**
- warning:** please use UL compliant power supply

aux/line in

- Insert the AUX cable into AUX port of the speaker
- Insert opposite end of the AUX cable into the media source

TWS (True Wireless Stereo) pairing

- You can pair two speakers of this same model together to get true stereo sound
- Turn Bluetooth off on your device, place two matching speakers together, switch them on, and triple pushes 'function knob' (to left or to right) to enter TWS pairing
- The speakers will automatically pair with one another, you will hear a chime when they pair
- After the speakers are paired, use your device to connect to HEYDAY SPEAKER 06
- Pairing of multiple speakers does not rely on the "Dual Audio" feature of newer phones

troubleshooting

- If the speaker is not working correctly, turn it on/off to reset
- If the speaker won't turn on, recharge the battery and try again
- If the speaker won't charge, make sure the supply works, is **5V 1A**, and not damaged
- If the speaker makes no sound or does not show as an available device, make sure it is not paired, if so unpair the device and repair the desired device

need some help?

Can't get it to pair? Just have a question?



call us at: 1-833-TGT-Tech or: 1-833-848-8324

safety

- The speaker is splash resistant, do not submerge under water
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth

heyday

FCC ID: 2A023-BTSP6 Model: BTSP6 Input: 5V = 1A Made in China
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.
Target Corp. Mpls. MN. 55403 Phone: 612-304-6073
For qualified repair specialists requesting repair information and parts please contact the original manufacturer at customersupport@gemsfindyours.com

back

5.6 in