



Printed in China.

1-800-374-2744.

FOR CUSTOMER SUPPORT, PLEASE CALL

ALL RIGHTS RESERVED.

MERCHSOURCE, LLC, IRVINE, CA 92618.

TRADEMARKS, DISTRIBUTED BY AND © 2022

THE 77 LOGO) ARE TRADEMARKS OR REGISTERED

SHARPER IMAGE NAME AND LOGOS (INCLUDING

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

## CONGRATULATIONS ON YOUR PURCHASE OF THE NOSE + EAR HAIR TRIMMER.

## SHARPER IMAGE® NOSE + EAR HAIR TRIMMER




### CLEANUP

Once you are finished trimming, be sure to clean the trimmer.

1. Ensure the trimmer is off.
2. Clean by gently sweeping hair off the trimmer with a small, soft brush (not included). You can also run the tip under a faucet to remove hair from the blade assembly.
3. The top of the trimmer can also be removed by twisting it slightly counterclockwise, and the blades can be popped out for additional cleaning.

Note: Use caution when removing, cleaning or replacing the blades. The blades are extremely sharp and can easily cut skin. Avoid damaging the blades when removed from the assembly. Damage to the blades will affect the trimmer's performance.

4. Place the trimmer on the charging station for easy use next time.

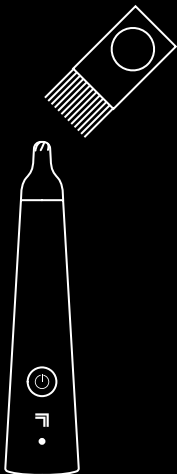

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


## WHAT YOU GET

- a. Nose/ear hair trimmer
- b. Wireless charging stand

a.



b.

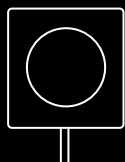

## SAFETY WARNINGS

### PLEASE READ BEFORE USE

- Use this item only for its intended use.
- Do not expose to extreme temperatures.
- Thoroughly inspect products before every use. If the product appears worn, frayed/splintered, cracked, or broken in any manner, discontinue use and discard immediately.


## RECHARGEABLE BATTERY WARNINGS

- This product contains batteries that are non-replaceable.
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused.
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flammable materials and direct sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Allow battery to cool to room temperature before charging.
- Charge on a non-flammable surface and keep away from flammable products.
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts. In the event of such damage, chargers must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws.
- Keep these instructions for future reference.

## GETTING STARTED

The nose/ear hair trimmer is powered by a built-in 3.7V 350mAh Lithium battery. It takes about 2.5 hours to fully charge the hair trimmer for about 60 minutes of use.

1. Plug in the wireless charging stand into a 120V household AC socket.
2. Place the nose/ear hair trimmer onto the base. The bottom of the nose/ear hair trimmer will allow it to stay in place and charge.

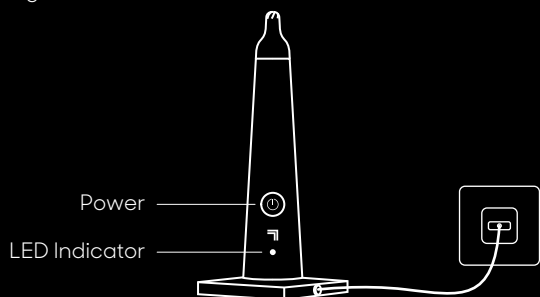

3. The LED indicator on the front of the nose/ear hair trimmer will begin pulsing when charging. When the LED indicators glow solid, the nose/ear hair trimmer is fully charged. LED indications while charging are listed below.
  - Below 20% - LED breathes red.
  - 20% - LED breathes white.
  - 99% - LED is solid white for 5 minutes then turns off.
4. When the LED indicator begins flashing red during use, it means the battery is low and it is time to charge. LED indications while in use are listed below.
  - Below 20% - LED solid red.
  - Above 20% - LED solid white.

## HOW TO USE

### TURN ON/OFF

- To power on the nose/ear hair trimmer, push the power button located in the front. The LED will turn on once operating.
- To turn off the hair trimmer, push the power button again.

### TRIM HAIRS

- To trim nose or ear hairs, power on the trimmer and gently enter the end of the trimmer into a nostril or the outer ear and gently sweep back and forth until the desired hairs have been trimmed.

Note: Do not press the trimmer hard. Do not insert into ear canal.

