

B: Perform the following steps to enable the answer/call function. If you don't need to use the call function, you can turn off the answer


Appearance Description



◆ Schematic Diagram of Charging

Operate in strict accordance with the following figures: 1.Please use the product-specific magnetic charging cable to chargeby aligning it with the charging contacts on the back of the watch. 2.Do not use a power adapter with a voltage exceeding 5V and anoutput current exceeding 1A for charging, as this may cause chargingfailure and damage to the magnetic charging cable or the

3.Please activate the watch when it runs out of power beforecharging: the watch screen will only light up after about 5 minutes ofnormal charging.

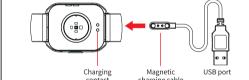


Introduction to Watch Function


Call Bluetooth switch 2)Cellular menu 3 Day and night mode switch 4 Do Not Disturb On/Off ⑤Brightness adjustment @Up hand to light screen 7 Vibration mode switch ®Lock screen Bell mouth drainage


@Setting




Main interface: Display the current time, date, steps and other nformation of the watch: press the main interface for a long time to switch the main dial left and right, and click to confirm.

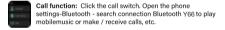

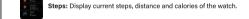

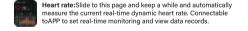

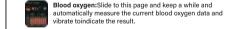

xercise: Click on the icon on this page to access the multiple ◆ Watch App Installation and Connection sport modes option. Select a sport mode, click the icon to start. Instructions

and slideright to pause or stop the sport.

andnetwork connection.

Sleep: The bracelet can record and display your sleeping time

last night, and the time of deep sleep and light sleep. More

detailed data can be viewed synchronously in the APP.

Weather: Display the local weather conditions. Connect the

synchronization APP for normal use, and open the phone GPS to

ensure that the APP gets the positioning permission function

Message: The watch can receive cell phone calls, SMS, OO.

according to the message alert and turn on the corresponding

oush switch on the APP This page can store up to 8 message

records. This function needs to stay connected with the phone

mobile phone player to play/pause/switch to the previous song

phone player before it can be controlled on the watch. This

function requires staying connected to your phone and turning

Setting:Click on the icon to start the function, switch left and

Stopwatch: Click on the icon to start the function, and click Start

and the next song. This function must be opened on the mobile

and make sure the APP gets the corresponding permission.

Music: After connecting the APP the watch can control the

on the notification push permission.

for timing, pause or reset. Slide right to leave.

the watch and view the watch information.

WeChat and other notification alerts, which can be set

As a Bluetooth product, most of the functions of this product need to be connected to a special APP for normal use, such as time display, call alert, and message alert. For Android phones, please do not use Bluetooth to connect and pair with the watch directly. Please scan the following QR code to select the version suitable for your mobile phone system or enter main application markets to download and install Glory Fit.

Device Connection

Before using the APP, please turn on the mobile phone Bluetooth and mobile phone GPS positioning to obtain the mobile phone positioning permission. After the connection is successful, it will prompt" To pair with: Y2 ",please select pairing.

1. For Android users, the APP

2. For systems below iPhone

connect to the Y2 for the

second time in the Bluetooth

settings of the mobile phone,

and then you can make calls.

play multimedia music and

hould obtainpermissions

otherwise it will affect the

ios 13, after connecting in

the APP vou need to

user experience.

The watch connection operates as follows:

and run backstage. _ Click [Select Device] to search

_

Connection succeeded

Search: Click this icon, your phone will beep to indicate the prientation of your phone, this function requires your phone to stay connected with the watch APP No alert on the phone

elect the name of the searche Bluetooth: Y2 _

right to set the brightness adjustment, factory data reset, turn off

watch cannot synchronize with the time of the phone. A. Make sure your phone's Bluetooth and phone GPS positioning are

C. If the watch has already been paired with a Bluetooth connection in

D. If the watch is not used for a long time, the Bluetooth will go into a dormant state. Please turn off the Bluetooth of the watch and the phone, reopen it after about 1 minute, and try to search the connection in the App again.

Answer: For first time use:

For Apple users: After the watch is connected to the APP, the phone

1.No charging with water stains.

Precautions

2. This product is an electronic monitoring product, not for medical use and the measurement data is for reference only. 3.It is not recommended to wear in hot water baths and longtime

4.Please charge with the matching charging cable.

1. Problems such as the watch cannot be searched in the APP, or the

on before using it for the first time.

B. Users need to open the APP to obtain positioning permission(-Phone Settings - Applications).

the phone, please cancel the pairing first and then search for the connectionin the APP

E. The watch must be connected to the APP, otherwise, the steps, sleep time, and other function will not work properly.

There is no alert function on the watch.

For Android users: Please operate according to the page prompt, or open the information reminder function in the APP and open the APP notification permission according to the prompt.

will pop up a pairing request, please choose to allow pairing and turn on the switch of the application reminder that you need to use in the APP Please open the "Notification Center" in the application you need to use via Phone Settings - Notification.

FCC STATEMENT : 3. The reminder switch is turned on, but there is no reminder on the

watch, or the reminder is sporadic.

alert after a period of connection.

Activation & Warranty

email below within 15 days.

service008@aoear.com

4. Android's phone Bluetooth often disconnects or has no message

Android will from time to time clean up the phone's backstage

applications or applications that consume more power for smooth

system operation. If the APP is not set to allow backstage running, it

will be easily cleaned by the system and the Bluetooth will drop out.

running settings. As in the Huawei nova 8 SE: Settings - Battery -

Support for 24 months to replace damaged, defective, upgraded or

missing items (no need to return the original). Please activate via

Management - Manually manage to turn on backstage running.

Power Consumption Ranking APP - Application Launch

Different Android phones have different methods for APp backstage

two conditions: If the phone turns on the message notification and the

corresponding notification permission according to the above tips, This device may not cause harmful interference, and the Bluetooth is kept on, and the APP and the watch are kept This device must accept any interference received, including interference that may cause connected, maybe the system authorized APP alert function is not undesired operation.

working, and the user needs to re-check the message push Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

> NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

This device complies with Part 15 of the FCC Rules. Operation is subject to the following

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

Consult the dealer or an experienced radio/TV technician for help.

measures:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

