

ONYX TWS EARBUD

QUICK START GUIDE

IMPORTANT SAFETY

Read all instructions before using your earbuds. Important: Use of earbuds while operaining a vehicle,motorcycle,watercraft or big-cle is not recommended and is llegal in some areas.Check and obey applicable laws and regulations on the use of earbuds while your operating a vehicle. Be careful and attentive while driving Stop Sterning to your audo device if you find it disruptive or distracting while operating any of vehicle or performing another activity that requires your full attention. • Never expose your earbuds to high temperatures, extreme cold or submerse in water.

in water. If the product overheats, has been dropped or damaged or has been dropped in a liquid, discontinue use. I no order to avoid the risk of electric shock, never attempt to open your earbuds or repair them, consult a certified professional. Your earbuds are not to be used by children without adultsupervision. Do not clean the earbuds with harmful chemicals or detergents.

MAINTENANCE

Store the earbuds. When you're not using the earbuds, store them in the charging case. Close the charging case to help preserve battery life and keep the charging case free of debris. When storing the earbuds for an extended period of time (more than 4 weeks), make sure they are stored at room temperature and the charging case battery level is greater than 40[°]

Clean the activation and charging case. Earlips- Remove the tips from the earbuds and wash them with a mild detergent and water. NOTE: Make sure you thoroughly fines and dry the tips before re retacting them to the earbuds. Earbud nozzles. Wipe only with a dry, soft cotton swab or equivalent. CAUTION: Never inset any cleaning tool into the nozzle. Charging contacts (on earbuds) and charging pins (in charging case). To prevent nutsing, whe with a dry, soft cotton swab or equivalent. Charging case. Wipe only with a dry, soft cotton swab or equivalent.

GETTING STARTED

Micro USB charging port
 S Left earbud LED indicator
 Charging case power digital
 display
 S Right earbud LED indicator
 Right control area

Left Earbud / Right Earbud
Pause/Play/Answer Call/End Call, Next Track, Volume+/-



CHARGING YOUR CASE

 Charge on the go charging case, with the included micro USB cable for 2-3 hours.
 Do not charge longer than suggested time. Do not charge overnight.
 When digital display shows 100, charging case is fully


charged.



CHARGING YOUR EARBUDS



 Put the two earbuds into the charging case, put down the lid, the light is keeping going up.
 When the light off, earbud batteries are fully charged.

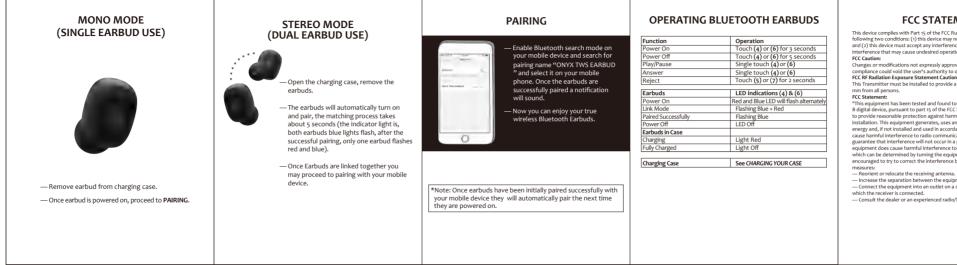

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Interference that may cause undesired operation. FCC Caution: Changes or modifications not expressly approved by the part responsible for Changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment. FCC RF Radiation Exposure Statement Caution: This Transmitter must be installed to provide a separation distance of at least 5

FCC Statement: "This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 5, of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to in action occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

 Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help."