



The keyboard adopts Bluetooth 5.0 standard/2.4G standard - two working modes and relative devices Backup connection control, the product can run in 2.4G mode on computer systems such as Win2000/WinXP/Vista, Win7/Win8, Win10/MAC, etc. Bluetooth mode can run with Bluetooth version machine system.

A mobile phone or computer with Bluetooth 5.0 standard and a USB port available for connecting devices.

A diagram of the TV remote control. A label 'TV/PC' points to a button on the right side of the remote. Another label 'ON/OFF' points to a circular button on the far right edge of the remote.

Fast charging is not allowed. Please use the matching charging cable to connect to the computer for charging!

After 3 minutes of inactivity in Bluetooth®/2.4G mode, turn off the backlight, and enter first level sleep. In 2.4G mode, after 10 minutes of inactivity, enter deep sleep. In Bluetooth mode, after 3 minutes of inactivity, enter deep sleep.

Two stage foot brace; Multi functional button knot;
Antislip foot patches; 2000mAh battery
Class: 1, Labeling: Allergen-free, Anti-static, Anti-static, 30°C

WIN system			
Combination buttons	Function	Combination buttons	Function
FN+F1	Screen brightness	FN+F8	Play/Pause
FN+F2	Screen brightness+	FN+F9	Stop
FN+F3	Multitask window	FN+F10	Mute
FN+F4	microphone	FN+F11	Vol -
FN+F5	player	FN+F12	Vol +
FN+F6	Previous song	FN+Win	LOCK WIN
FN+F7	Next song		

MAC system			
Combination buttons	Function	Combination buttons	Function
F1	Screen brightness-	F7	Previous song
F2	Screen brightness+	F8	Play/Pause
F3	Any running program	F9	Next song
F4	Start station	F10	Mute
F5	Exhale Siri	F11	Vol -
F6	screenshot	F12	Vol +

2.4G connection

The diagram illustrates a 2.4G connection setup. On the left, a laptop is connected via a USB cable to a small black device. This device is then connected to a larger black device. A large arrow points from this setup to the Bluetooth connection diagram on the right.

Bluetooth connectivity

Bluetooth mode: Turn the power switch to the "ON" position.
Enter Bluetooth mode through the knob.
There is no need to use normally.

Wired mode: Turn the power switch to the "OFF" position and use the knob to enter wired mode. Connect the keyboard and computer with a connecting cable, and the keyboard can be used normally.

The diagram shows the front panel of the KNC-1000. It features a central LCD screen displaying '14:30:30' and '100.0'. To the right of the screen is a large circular knob with concentric rings. Below the screen and knob are several buttons. A callout box with a circular arrow icon points to the knob, containing the text: 'The function of the knob is to rotate the previous and next items left and right. Click OK.'

灯光效果

灯光颜色

RGB Red Green Blue Orange Purple Blue White

A screenshot of a progress bar interface. The bar is a horizontal line with a dark grey background. A lighter grey segment on the left indicates the progress, which is labeled '110%' in the center. The bar is flanked by two circular icons: a sun-like icon on the left and a moon-like icon on the right.

音量调整

语言选择

中 EN

1. Keyboard
2. 2.4G receiver
3. TYPE-C charging cable
4. Manual warranty card

[illegible]

Thank you for purchasing the products of our EWAEAD. Thank you very much! To ensure that you can use this product with peace of mind and better. To protect your rights, our company strictly implements the joint information product department of the General Administration of Quality Supervision, Inspection and Quarantine of the People's Republic of China and the "Repair, Replacement, and Refund of Microcomputer Products" jointly issued by the State Administration for Industry and Commerce On the basis of the Goods Liability Regulations, we implement after-sales service and hereby make the following commitments:

1. Service validity period:
Effective from the date of purchase, the date recorded in this certificate shall

1. From the date of purchase, any product malfunctions caused by poor electrical performance will be free of charge during the warranty period. Perform repairs. (The specific maintenance matters shall be handled by the provincial representative or

1. Those who have exceeded the effective service or free repair period.
2. Failure to use, maintain, or store according to the correct instructions, resulting in malfunction or damage.

5. Unauthorized alteration of the content of the three guarantees certificate.

7. Defective products caused by force majeure (such as earthquakes, fires, floods).
8. Product defects caused by human factors (such as operational errors, handling damage, human input discrepancies) Suitable voltage, etc.

Customer Information	
User's Name:	TelNO:
E-mail:	
Mobile:	Company:

This certificate is an important basis for the after-sales service of the products of the EWEADN. Please keep it safe! Note: Please fill in each item clearly, do not make unauthorized changes, and keep warranty service card properly. To safeguard your legitimate rights and interests, if you need service or have any questions, please consult your local dealer or contact us.



前行者

-匠心造物 重塑有型-

84mm

105g铜版纸 覆哑膜