

USER
MANUAL

Sports headphones with
touch screen charging case

T804

Earbuds * 2

Charging Case * 1

Ear Caps * 3

Type-C Charging Cable *1

01

Charging Case

Built-in Mic

button control

Charging Point

Type-C Charging Port

Screen On/Off

Note:
Please remove the protective film of the earphones charging point before use, please fully charge before first use.

02

Model Name: T804

Bluetooth Version: BT5.4

Support: HSP/HFP/A2DP/AVRCP

Transmission Range: 33 feet (without obstacle)

Earphone Charging Time: 1-1.2H

Charging Case Time: 1-1.5H

Input: 5V/0.5A

03

Three Status of the Bluetooth Icons

Bluetooth Icons

Explanation

The earphones are not connected to the charging case and your device

The earphones are connected to the charging case, but not to your device

The earphones are successfully connected to the charging case and your device

Bluetooth Pairing

>1. Take out the earbuds from the charging case, and they will automatically pair with the TWS and turn on.

>2. Turn on your bluetooth of your smart device. Choose the bluetooth which named "T804". The earbuds will pair your smart phone successfully When you hear the prompt sound "connected".

Note: Because the earphone automatically connects to the last paired device, for this reason, you want the earphone to connect to the next device, please turn off the Bluetooth of the previous device

04

Power ON / OFF

Power ON

>1. Open the cover of the charging case, and the earphones will turn on automatically.

>2. Press and hold the earphones for 3 seconds to power on.

Power OFF

>1. Put the earphones into the charging case, and the earphones will automatically shut down.

>2. The earphones is disconnected from the bluetooth of the device, and long press the button for 5 seconds to power off.

Note: After the earbuds is successfully connected, it cannot be turned off manually

05

L/R

button control

Receiving One Tap R/L

Reject Call Long Tap 2s R/L

End Call One Tap R/L

Play / Pause One Tap R/L

Activate voice assistant Triple Tap R/L

L

R

Previous Track Double Tap L

Next Track Double Tap R

Raise the volume Long Tap L

Lower the volume Long Tap R

06

LCD Smart Screen Touch Control

Music Playback

Volume Control

WALLPAPERS

Lock Screen Wallpaper

EQUALIZER

BASS

Equalizer

60 MINUTE

Alarm Clock

BRIGHTNESS

Brightness

07

Find my Earphone

Click the "L/R" to look for your left/right earphone, and then click the "BEGIN", your left/right earphone will automatically play an alarming sound. When you find the earphone and want to return to the original search page, you can click the "⏮" to pause

FIND MY EARPHONE

FIND MY EARPHONE

Camera

Camera

08

Time settings

When your phone is successfully connected to the headset, the time and date will be automatically synchronized to real time.

If your charging case displays an incorrect time and date, set it manually

04 09 2023

05 10 2024

06 11 2025

00 09

01 10

02 11

09

Warnings

>1. When the Battery is low, there will be an alarm sound of "Low power" .

>2. Has been connected to the device, the earbuds will be automatically connected again when it is power on.

>3. Low Battery Waring:

- When the earbud is in low battery. The earbud's white light flashes once every 5 seconds until power off.
- Earbuds will automatically shut down when the low battery and the connection time (10 minutes) is exceeded.

10

Questions

Q: How to reset your earbuds(These problem can be solved by this way: unstable Bluetooth connection , the sound is out of sync, and the device cannot be connected)

A: 1. Take out the earphones, press the button six times, and the earphones will light up white (this means that you have successfully operated) . Then put the headphones in the charging case.

2. Click the icon behind "T804" in the bluetooth of your phone and select "Forget this device.

3. Finally take out the earphones and reconnect it to your device again.

How does the headset connect to the device?

A: 1. Open the charging case cover and take out the earphones

2. Turn on your device's bluetooth and the bluetooth list shows "T804"

3. Tap "T804". The device displays a successful connection.

What if my headphones can connect to my phone, but not to my computer?

A: Please turn off your phone's Bluetooth before connecting the headset to your computer.

(Because the earphone automatically connects to the last paired device, for this reason, you want the earphone to connect to the next device, please turn off the Bluetooth of the previous device)

11

Maintenance

After a period of use, the charging metal contacts of the earphones may be polluted by sweat and dirt, causing the earphones to fail to turn on or charge; and the protective grille of both earphones may accumulate earwax and dust, resulting in muffled volume.

If you experience issues with the earphones not charging, use a clean, soft cloth to gently wipe the charging metal contacts to remove sweat and dirt.

If you experience earphone sound muffled, not as loud as when you first started using it. Use a soft brush or cotton swab to gently remove earwax and dust from the grille. Avoid using sharp objects to avoid damage.

Charging Pin

Charging Contact

Protective Grille

12

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1)This device may not cause harmful interference.
(2)This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note:

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

13

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in in portable exposure condition without restriction.

13

490*90MM
105G 铜版纸彩色正反面印刷
6折页