




Welcome to your NOOK Tablet® 10.1"

## Quick Start Guide

BNTV650


### 1 What's in the box

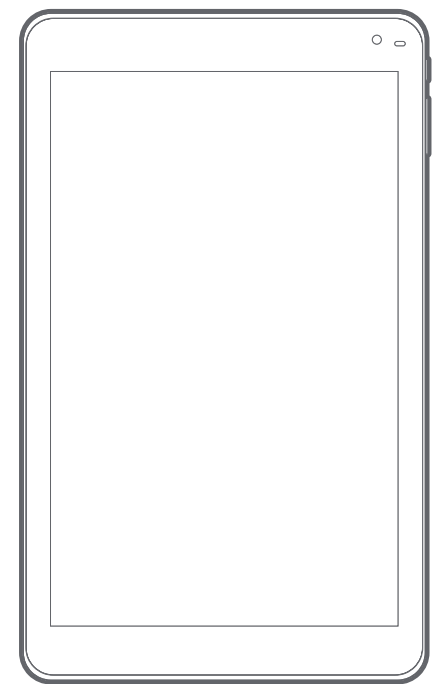


10.1" NOOK Tablet



Charger

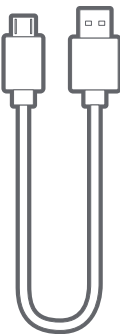


Micro USB Cable

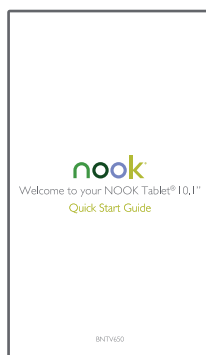

Quick Start Guide

### 2 Buttons and ports

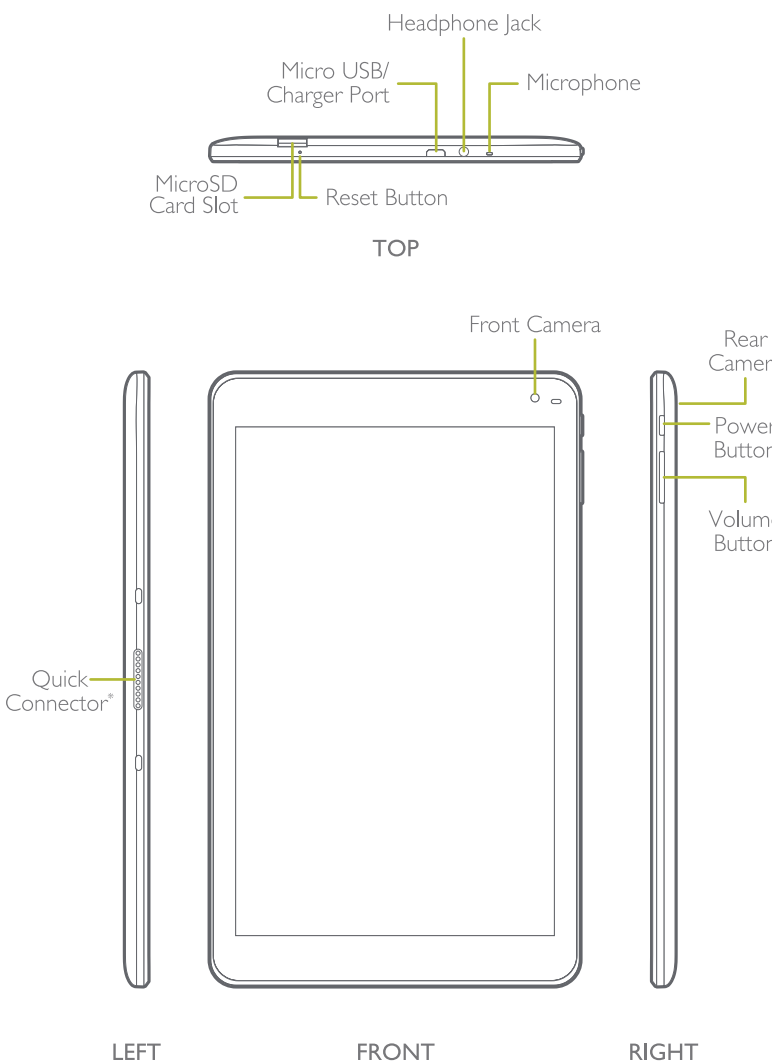


**\*Quick Connector**  
Used for easy docking to NOOK accessories.

### 3 Charge your NOOK

You must charge your NOOK before using it for the first time.

Connect your NOOK to a power outlet using the included charger and Micro USB cable as shown below.

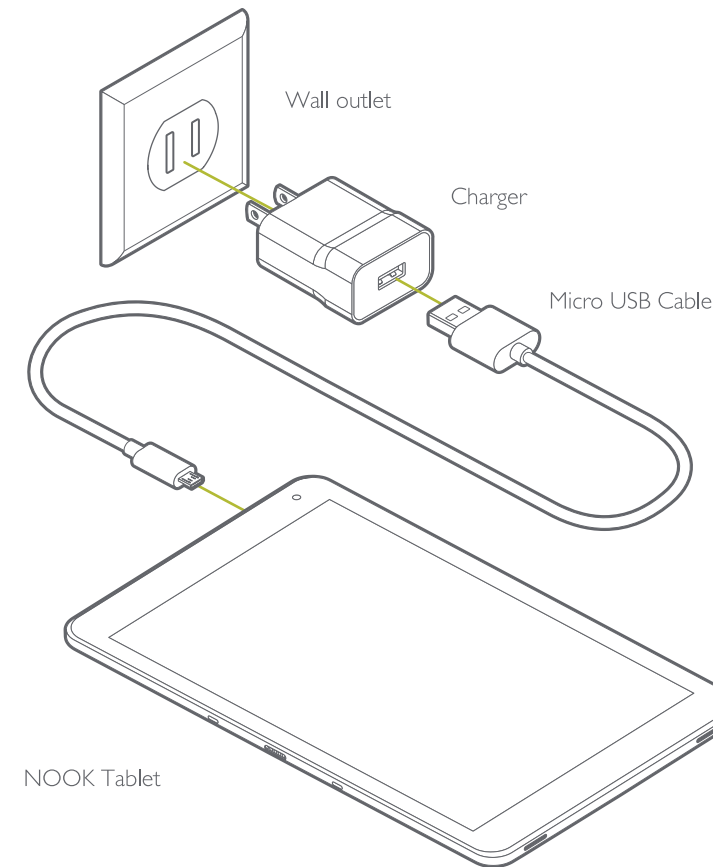


The lightning indicator will appear in the battery icon when charging.



It takes approximately 4 hours to fully charge your NOOK.

#### Power Button

Press and hold the power button until the startup screen appears.

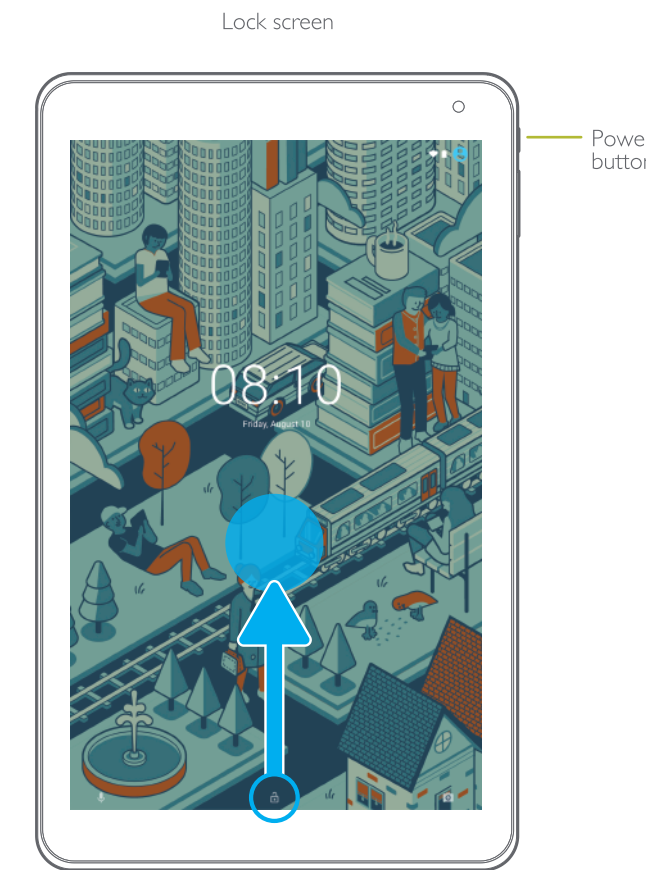

#### Lock (standby)


Briefly press the power button (putting your NOOK in standby will help to conserve the battery).

#### Unlock

Briefly press the power button and slide the "Lock icon" upwards to unlock your NOOK.

### 4 Setting up your NOOK

Follow the initial setup wizard prompts to connect to Wi-Fi®, set the date and time, security and other options.

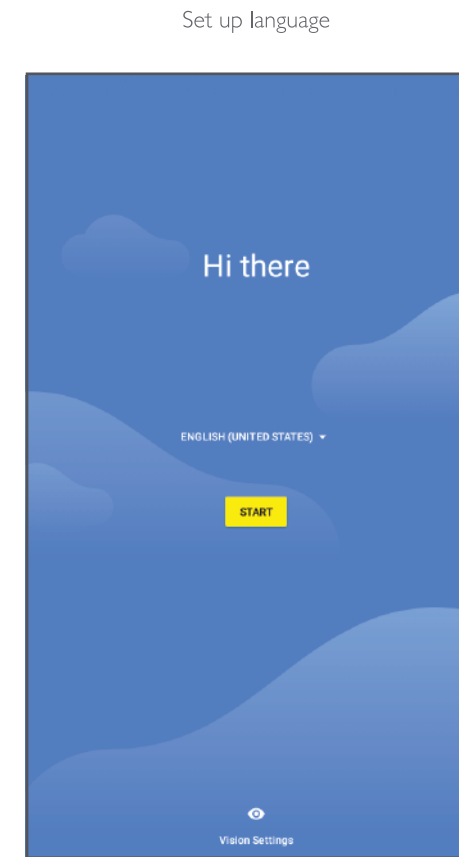

### 5 Register your NOOK

You must register your NOOK to your NOOK (or BN.com) account. This gives you access to any books in your NOOK Library and allows you to shop for new books, magazines, and newspapers on your NOOK.

#### If you already have a NOOK (or BN.com) account:

1. Tap *Sign In*.
2. Enter the email address and password for your account.

#### If you do not yet have a NOOK (or BN.com) account:


1. Tap *Create Account*.
2. Follow the prompts to fill in the form with your name, email, password, and other information.
3. Lastly, add a credit card for future purchases or *Skip*.



That's it. You've registered your NOOK. You're now ready to shop at the Bookstore and read your favorite books, magazines, newspapers, and more.

### 6 Home screen

Swipe up on the Home screen to open the App Drawer and access all your downloaded apps.

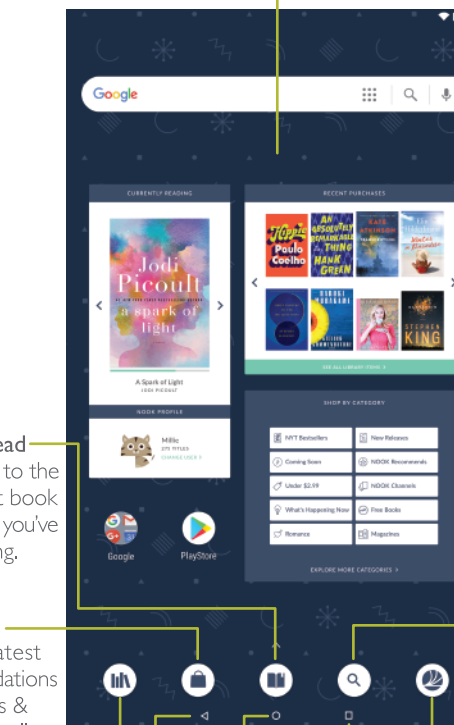

**Current Read**  
A quick link to the most recent book or periodical you've been reading.

**Bookstore**  
Shop the latest recommendations from Barnes & Noble booksellers.

**NOOK Library**  
Access and organize all books and periodicals you own.

**Home**  
Return to the Home screen.

**Return**  
Go back to the previous screen.

**B&N Readouts**  
Discover a curated selection of book excerpts, articles, and quotes.

**Multitask**  
Switch between your open apps.

**NOOK Search**  
Find a book you own or one you're interested in buying.

**Tips:** Press and hold an icon or widget to adjust its placement.

## **FCC Statement**

### **15.19**

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### **15.21**

Note: The grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

### **15.105(b)**

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help


## **RF Exposure Statement**

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types Tablet PC(FCC ID: RBD-BNTV650) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification when properly worn on the body is 1.007W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

## 7 Notifications & Quick Settings


Swipe down from the top edge of the screen to expand and see your app notifications, and swipe a second time to reveal the Quick Settings panel to adjust some common settings.

To access more settings options, select the  icon.

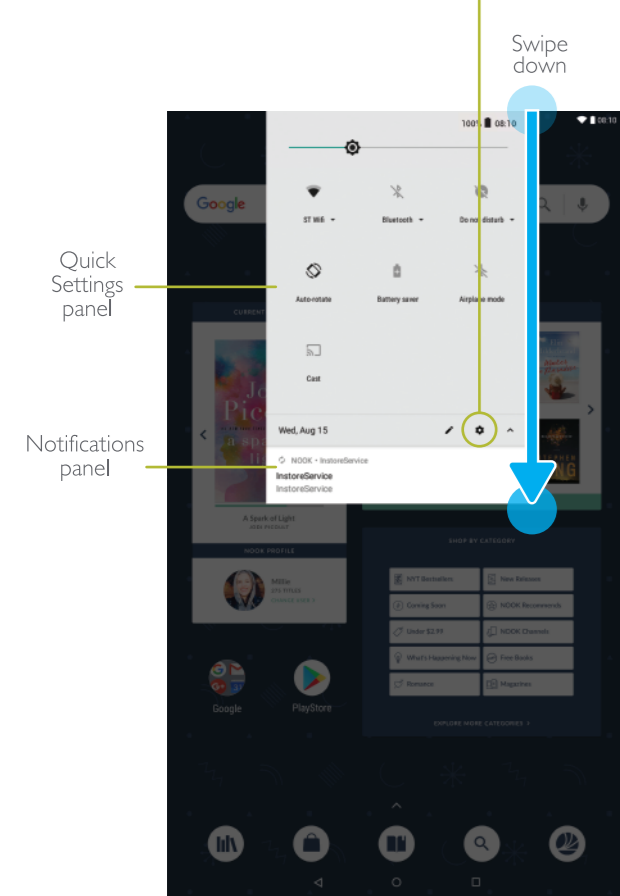

## 8 Shop at the NOOK Bookstore

Once your NOOK account is set up with a valid credit card, you can make purchases with the tap of your finger. Your NOOK adds the item to your Library automatically.

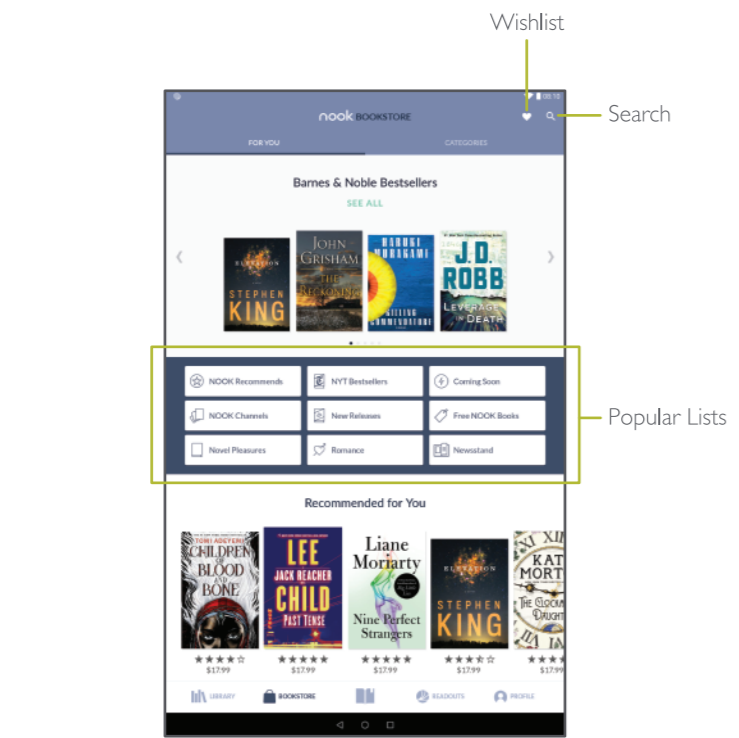

**Building Your Wishlist**  
Save items for later by adding them to your Wishlist. Tap the heart icon along the top to visit your Wishlist. You can also view it on bn.com.


**Search the NOOK Bookstore**  
Tap the search button to display an on-screen keyboard to search by a title, author name, or topic.

**Explore Bookstore**  
Visit FOR YOU for recommendations from Barnes & Noble booksellers or go to CATEGORIES to browse by genre.

**Browse Popular Lists**  
Choose a popular list to get easy access to recommended reads.

## 9 Start reading

**Reading a Book**  
You'll find your books, magazines, and newspapers in your Library. Tap on the cover to download and start reading.

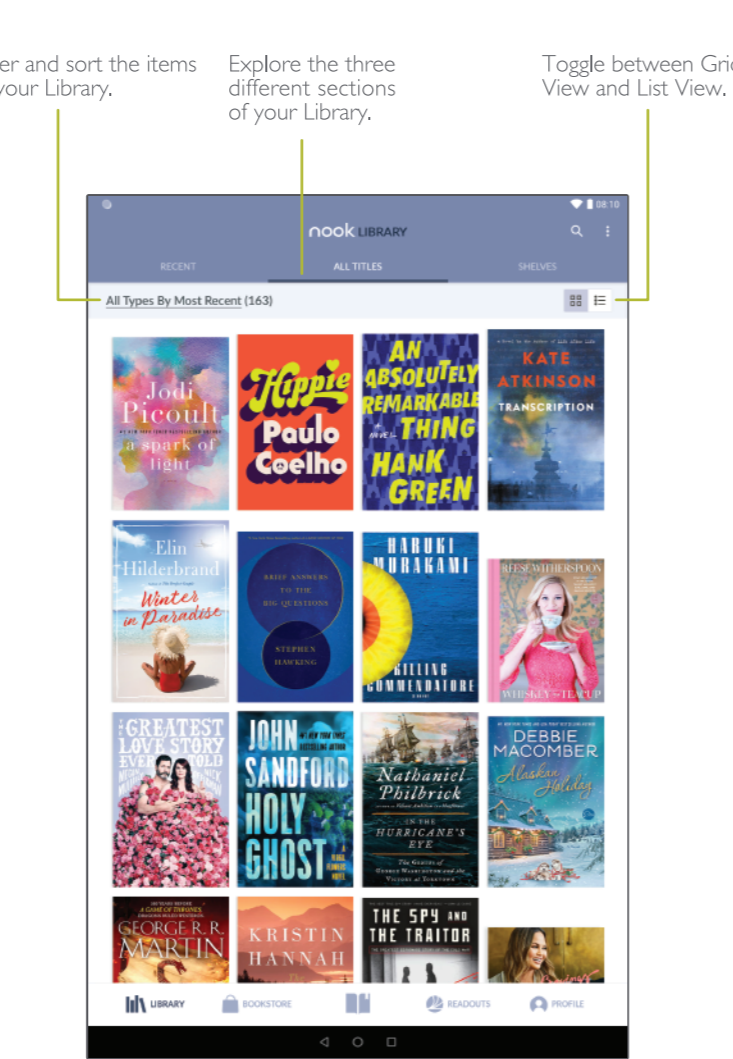


Tips: Press and hold a book cover for additional actions.

**Turn Pages**  
To turn the page of a book forward or back:  
• Tap the right or left edge of the screen.  
• Swipe from right to left or left to right as shown below.




**Change Text Size & More**  
When in a book, tap the center of the screen to bring up the Reading Tools. To adjust the text, tap the text icon in the top corner and select your text size, font style, and other options.


You can also browse the table of contents and view your notes and bookmarks, search for words or phrases, and go to a specific page number.

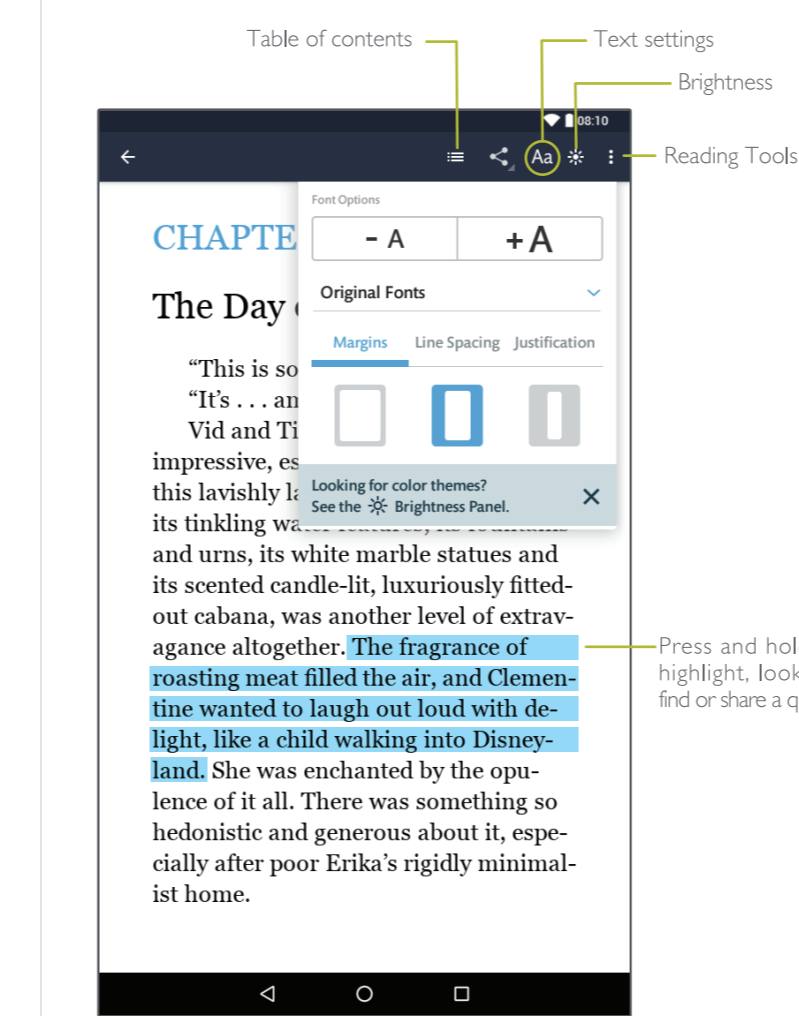

## 10 Google Play

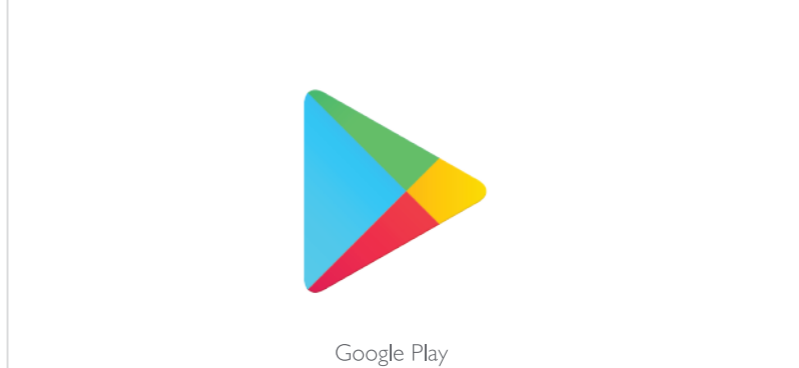

Google Play is a digital content experience from Google™ where you can find and enjoy your favorite music, movies, TV shows, and Android™ apps and games. It's your entertainment hub: you can access it from the web or from your Android device, and all your content is instantly available across your devices.

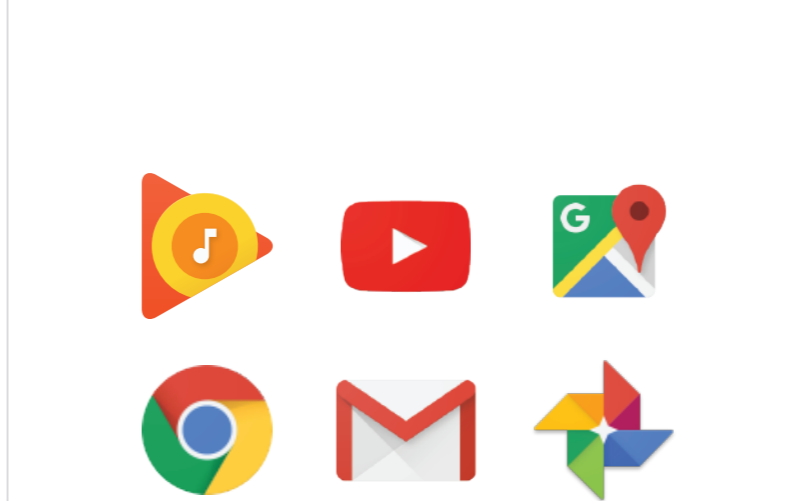


## 11 Expanding the storage

**Inserting a MicroSD™ card**  
Your NOOK supports MicroSD cards up to 256GB (not included). Refer to the user guide for compatible MicroSD card models.

To install a MicroSD card, carefully insert the card as shown below into the card slot until it clicks and locks into place.

To remove the MicroSD card, gently press it inward to eject.

For more details, please refer to the User Guide.

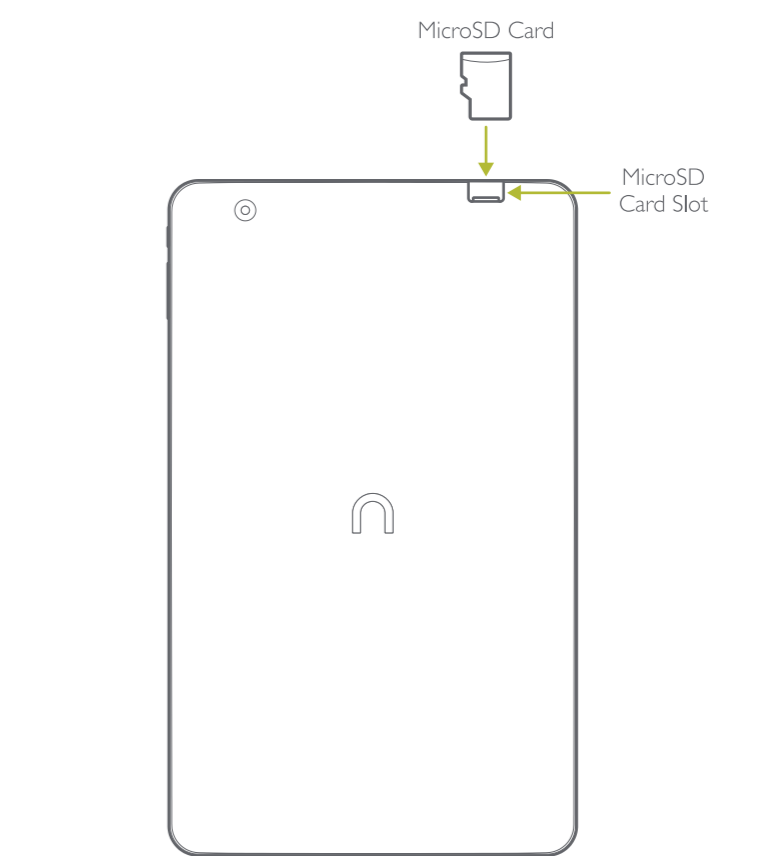

Your NOOK offers several options to optimize the available storage on your NOOK Tablet. Please refer to the user guide for more details.

## 12 Learn more

**User Guide**  
In addition to this Quick Start Guide, please read the User Guide for complete information about all the features of your NOOK. You'll find a copy of the User Guide in your NOOK Library.

**Additional Support**  
Please visit NOOK.com/support for additional information, including:  
• A PDF version of the NOOK® User Guide that you can download to your computer  
• Frequently Asked Questions  
• Live Chat with a NOOK Expert

You can also tweet Customer Service at @NOOK\_Care.

To protect your NOOK's screen from accidental damage, we recommend using a NOOK cover. Your limited warranty does not cover damage to your NOOK's screen resulting from accidental drops or regular wear & tear.

Nook Digital, LLC, 1166 Avenue of the Americas, 18th Floor, New York, NY 10036 © 2018 Nook Digital, LLC. All rights reserved. NOOK, NOOK Tablet, NOOK Store, B&N Readouts and the NOOK logos are trademarks or registered trademarks of Nook Digital, LLC or its affiliates. Patent Pending. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All trademarks or registered trademarks that are not the property of Nook Digital, LLC or its affiliates are the property of their respective owners. Screenshots and product images are simulated; they may differ from the actual product and are subject to change. Use of NOOK is subject to the Nook Device Terms of Service and Privacy Policy located in the Settings area of your device and at www.NOOK.com/legal. Contains Reader® Mobile technology by Adobe Systems Incorporated.

Google, Android, Google Play and other marks are trademarks of Google LLC.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOOK Support**  
For additional assistance and information, please refer to the comprehensive User Guide found in the NOOK Library on your device as well as on NOOK.com. You can also contact Customer Service at 1-800-THE-BOOK to speak with a Customer Service Representative.

Ver: 1.0.1\_20180814