CQL1718-B Bluetooth Speaker Instruction Manual (Read before proceeding)

Power:

- Please charge your Bluetooth speaker fully before its first use.
 To charge the battery:
- Using a Micro USB Charging Cable (included), insert the USB power cable into the micro USB port located
 on the side of the speaker. Connect the other end of the USB cord into a powered USB source such as a
 computer, laptop or USB AC adapter.
- When your Bluetooth speaker is charging, the indicator light will turn red.
- Once your Bluetooth speaker is fully charged, the red light will turn off.

Playing Music via Bluetooth

- Turn your Bluetooth speaker on by sliding the power switch located at the side of the speaker to On position to activate both the Bluetooth function and the LED lights.
- The blue indicator light will flash quickly. This indicates that the speaker is in pairing mode and is searching
 for your Bluetooth device.
- Make sure the Bluetooth function on your device is turned on.
- Search the speaker named, "PBT9502".
- Once you have selected the speaker, your device will pair without a password. (If your device prompts for a password, enter the password 0000.)
- Once your speaker is paired, the blue indicator light will begin to flash slowly.
- Start playing music on your device. Make sure that you keep your device within a 33 feet range of your Bluetooth speaker.
- Adjust the volume of your device to a comfortable level.
- Turn off the unit when not in use.

Button Control:

O:Press to pause your music playing

+: Press it for next track. Long press it to increase the volume.

Press it for previous track. Long press it to decrease the volume.

>: Press it one time to restart your music playing.

:Lighting mode button.

Light Operation

- Switch the on off button to On position, the lights will be slowly changing between colors.
- Press the lighting mode button, the lights will freeze a certain color.
- Long press the lighting mode button to turn the lighting mode into lights dance to the beat of music mode.
- Long press the lighting mode button to turn the lighting mode back into lights slowly changing between colors mode again.
- Press it one more time to freeze the color and press it again to switch to slowly changing mode.

Caution:

- This is not a toy. Please keep away from children.
- Please keep away from water / heat.

- Low power may cause poor connection even no working of Bluetooth.
- Do not overcharge the battery.
- Battery pack shall not be exposed to excessive heat such as sunshine, fire or the like.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.