

Android 15-0.1 Inch Tablet User Manual



Model: 1501-001
Version: 2024.1

Catalogue

- Preface 3
- What to Do When Using for the First Time 5
- Names of Each Part of the Product 6
- Initial Setup 10
- Basic Operations 12
- Settings Menu 17
- Description of Pre-installed Applications 19
- Using SD Cards 20
- External Connections 20
- Initialization 22
- Updates 23
- Frequently Asked Questions 23
- Main Specifications 25
- After-Sales Service 27

Contents

Description: Product operation, applications, and manual content may be updated without prior notice for improvements.

Precautions: This manual is for reference only. It does not cover all possible situations. Please refer to the product manual for detailed information.

Copyright: © 2024. All rights reserved.

What to Do When Using for the First Time


When using the tablet for the first time, please use the device until the battery is depleted.

Charging: To ensure a complete charge, please wait for more than 1 hour before turning the device on.

Charging Method: Connect the Type-C port of the included charging cable to the USB Type-C port of the tablet, and then plug the adapter into a household electrical outlet.

Charging Warnings: Do not use the tablet while charging. Do not use the tablet with a damaged charging cable or adapter. Do not use the tablet with a damaged power source.

Names of Each Part of the Product

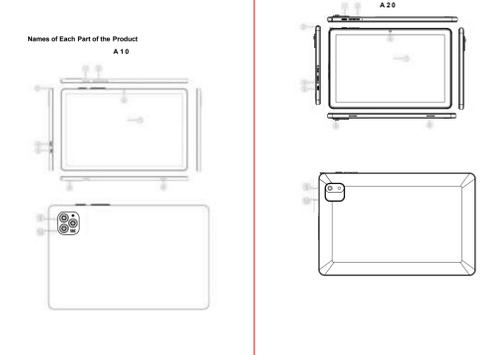

Power Button: Long press the "Power Button" to display the startup screen and turn on the device.

Volume + / - Buttons: Press the "Volume +" button to increase the volume and press the "Volume -" button to decrease the volume.

Home Button: Press the "Home Button" to return to the home screen.

Initial Setup

When you turn on the device for the first time, the screen will display "Hello, [Name]".

Language Selection: Select the language that suits you (people with hearing or visual impairments can click on the "Voice Assistant" button).

Wi-Fi Connection: Select the Wi-Fi network you want to connect to.

Bluetooth Connection: Select the Bluetooth device you want to connect to.

Wireless LAN Connection

The product can use wireless functions through Wi-Fi (WLAN) connection.

Wi-Fi Settings: Tap the "Wi-Fi" icon in the "Settings" app to turn on Wi-Fi.

Wi-Fi Networks: Select the Wi-Fi network you want to connect to.

Basic Operations

The home screen displays application shortcuts, widgets, and the status bar.

Home Screen: Long press the home screen background and tap "Widgets" to add widgets.

App Drawer: Long press the home screen background and tap "App Drawer" to view all installed applications.

Application/Widget Configuration Area

You can place your favorite applications and widgets here.

Adding an Application: Long press the home screen background and tap "Widgets" to add widgets.

Removing an Application: Long press the home screen background and tap "App Drawer" to remove applications.

Notification Panel

Swipe down from the status bar to display the "Notification Panel".

Adjusting screen brightness: You can adjust the screen brightness or darkness of the screen by pulling down from the top of the notification panel.

Quick setup icons: You can quickly adjust the brightness or darkness of the screen by pulling down from the top of the notification panel.

Test Input

Use the on-screen keyboard with these buttons:

- Home:** Return to the home screen.
- Back:** Return to the previous screen.
- App:** Open the app drawer.
- Search:** Search for apps or content.

Settings Menu

In the Settings menu, you can configure Wi-Fi, display brightness, language, storage, and other settings.

System Settings: Tap the "Settings" icon in the app drawer.

System Settings: Tap the "Settings" icon in the app drawer.

Accessibility

Customize Display Size, Text, Colors, Motion, and Sound.

Display Size: Adjust the font size and display size.

Text Size: Adjust the text size.

Color Correction: Adjust the color correction.

Description of Pre-installed Applications

Application Name	Description
Assessant	Complete daily tasks quickly by talking to them.
Calendar	Manage your schedule and appointments.
Camera	Take photos and record videos using the built-in camera.
Contacts	Manage your contacts and address book.
Clock	Set alarms and timers.
Connect	Find friends, family, or other contacts.
Drive	View and edit files in Google Drive.
Files	View files and folders on this product.
Find Device	Find your device if it is lost or stolen.
FM Radio	Listen to live radio stations.
Google	Search for products or additional settings.
Google TV	Watch movies and TV shows using Google TV.
Keep	Manage notes and lists.
Maps	Get directions and explore new places.
Meet	Join video meetings and conferences.
Messages	Send and receive text messages.
Phone	Make and receive phone calls.
Play Store	Download and install apps and games.
Play Store	Download and install apps and games.
Settings	Set up various features for this product.
Sound Recorder	Record audio and share it.
YouTube	Watch and upload videos on YouTube.
TV Mode	Use the tablet as a TV.

Using TF Cards

Inserting an TF Card

The device does not come with a TF card; you will need to purchase one separately.

Inserting the TF Card: Insert the TF card into the slot on the back of the device.

Removing the TF Card: Press the eject button to remove the TF card.

Updates

Updates are usually downloaded in the notification panel.

Check for updates: Tap the "Check for updates" button in the notification panel.

Download and install: Tap the "Download and install" button to download and install the update.

Frequently Asked Questions

Q: The device will not turn on (no image or sound output).
A: Check if the AC power adapter is turned on and the power cord is properly connected. Check if the battery is fully charged.

Q: The battery will not hold a charge.
A: Check if the battery is fully charged. Check if the device is overheating.

Q: The device will not connect to Wi-Fi.
A: Check if Wi-Fi is turned on in the app settings. Check if the Wi-Fi network is available.

Main Specifications

Category	Specification
Display (LCD)	15.0" (394.28 mm) x 8.0" (203.20 mm) IPS LCD, 2160 x 1080 pixels, 20:9 aspect ratio
Processor	Qualcomm Snapdragon 778G 5G
RAM	8GB / 12GB / 16GB
Storage	128GB / 256GB / 512GB
Camera	Front: 8MP, Rear: 50MP
Audio	16W, 2x 8W
Connectivity	Wi-Fi 6E, Bluetooth 5.3, NFC, USB-C
OS	Android 15.0
Dimensions	394.28 mm (H) x 203.20 mm (W) x 7.99 mm (D)
Weight	~450g

Software Specifications

Category	Specification
OS	Android 15.0
Display	15.0" (394.28 mm) x 8.0" (203.20 mm) IPS LCD, 2160 x 1080 pixels, 20:9 aspect ratio
Processor	Qualcomm Snapdragon 778G 5G
RAM	8GB / 12GB / 16GB
Storage	128GB / 256GB / 512GB
Camera	Front: 8MP, Rear: 50MP
Audio	16W, 2x 8W
Connectivity	Wi-Fi 6E, Bluetooth 5.3, NFC, USB-C
OS	Android 15.0
Dimensions	394.28 mm (H) x 203.20 mm (W) x 7.99 mm (D)
Weight	~450g

After-Sales Service

Quality Assurance: Return and exchanges within 30 days from the date of purchase.

Warranty: 1 year warranty for the device.

Support: Contact our customer support for assistance.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.