 



Respectable users: Thank you for your support and trust on the products of our company. To fully exert the function of the product, we suggest you to read the operating instruction carefully before using it to avoid any unnecessary loss. If anything unclear, please contact the distributors directly.

1-CONTROL PANEL FUNCTIONS

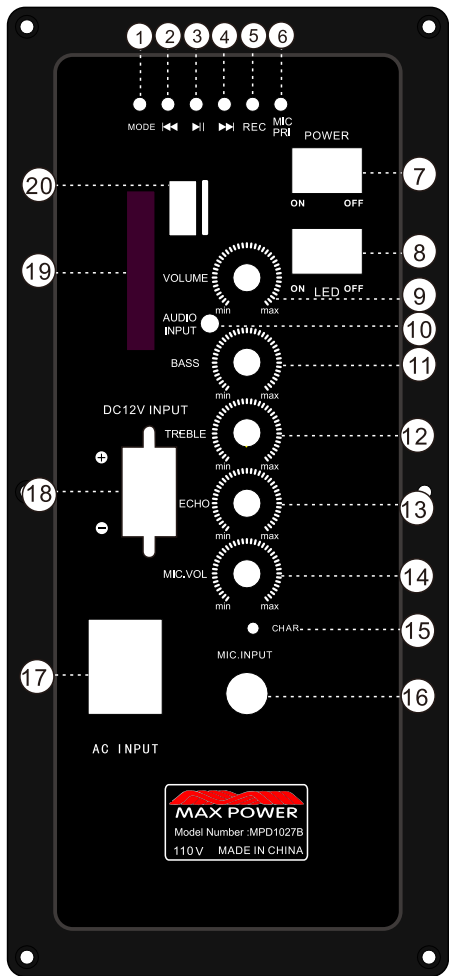

- 1. **MODE:** Different mode transformation
- 2. **PREV/CH-:**
Short press for Previous Track
Short press for previous channel
- 3. **PLAY/SCAN:**
Short press to play or pause
Short press to Auto Scan and Preset available frequencies
- 4. **NEXT/CH+:**
Short press for next Track
Short press for next channel
- 5. **REC:** Press this button for recording
- 6. **MIC PRIORITY**
- 7. **POWER:** Power On/Off button
- 8. **LED:** LED Power On/Off button
- 9. **MASTER VOLUME:** Master volume
- 10. **AUDIO INPUT:** Audio input
- 11. **BASS:** Bass
- 12. **TREBLE:** Treble
- 13. **ECHO:** Microphone echo
- 14. **MIC. VOL:** Microphone volume
- 15. **CHARGING INDICATOR:** Charging indicator
- 16. **MIC. INPUT:** Wired Microphone input
- 17. **AC INPUT:** AC110V
- 18. **DC 12V INPUT:** External DC 12V
- 19. **LED DISPLAY:** LED display
- 20. **SLOT A & SLOT B**

 2-REMOTE CONTROL FUNCTIONS

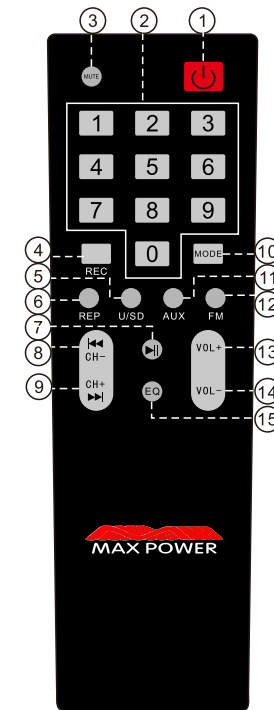

- 1. **Power On/Off:** Turns the Power On/Off
- 2. **Number:** Number keypad selection
- 3. **MUTE:** Press to mute the Volume
- 4. **REC:** Recording
- 5. **U/SD:** signal input
- 6. **REP:** Press to repeat and/or shuffle
- 7. **▶▶** Press to Play or Pause
- 8. **◀◀** Previous track
- 9. **▶▶** Next track
- 10. **MODE:** Switch the Media Input Mode
- 11. **AUX:** Aux signal input
- 12. **FM:** FM signal input
- 13. **VOL+:** Volume up
- 14. **VOL-:** Volume down
- 15. **EQ:** Choose preset Equalizer

PRECAUTIONS

To prevent operational problems or serious damage to the Speaker unit, please follow the below precautions:

- 1. Pull out the power cord from the end of the plug. Do not pull the wire.
- 2. The Speaker should be kept away from other heat sources.
- 3. Do not attempt to open the internal speaker unit or change the circuitry as this may cause the unit to be damaged or cause an electrical shock.
- 4. If you are not going to use the unit for a long period of time, pull out the plug and store in a cool dry place.
- 5. Ensure the Speaker is properly ventilated & kept in a dry location. It is recommended that the speaker be kept about 4 inches away from any wall or object.

WARNING : Do not use this Speaker in any wet location, in the rain or a location with high moisture. Do not place any liquids or other objects on the Speaker as this may cause an accidental short.

- * Specifications are subject to change without notice.
- * All Trademarks and trade names belong to their respective owners.

USER MANUAL

3-CHARGING THE SPEAKER

- 1-Full recharge takes 8-12 hours
 - 2-Please use the supplied charging cable to charge the speaker .
 - 3-When you are using your unit while it is plugged to an external power source, be sure the battery switch is ON.
 - 4-To protect the lifespan of the built-in battery, be sure to fully charge your unit on the same day the battery runs out.
- Not charging your unit right away can affect the performance of the battery.

4-WIRED MICROPHONE INSTRUCTIONS

- 1-Insert the microphone plug into the microphone input jack.
- 2-Adjust the microphone volume knob MIC VOL for proper volume.
- 3-Adjust the echo depth to the proper position.
- 4-Now you can start using your microphone.

5-WIRELESS CONNECTION

You can connect your compatible wireless devices such as a cellphone, computer etc., to listen to your audio tracks from this speaker.

Press the MODE button on the speaker, or press the MODE button on the remote control to enter wireless mode, indicated on the LED display.

Using the native controls on your device, select "MPD1027B" in your settings to pair, and once successful, you will hear a sound of notice on the speaker.

WARNING

WARNING: TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE



CAUTION: TO REDUCE THE RISK OF FIRE OR SHOCK, DO NOT REMOVE COVER OR BACK. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



The exclamation mark inside an equilateral triangle is intended to alert user of the presence of the important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert User of the presence of un-insulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons

 
NOTES:

Please do not attempt to open the back cover or power adapter as opening or removing the covers may expose you to dangerous voltage or other hazards, and it will also cause the restricted servicing to be disabled. There are no user servicing components inside.



KARAOKE SYSTEM

MPD1027B USER MANUAL

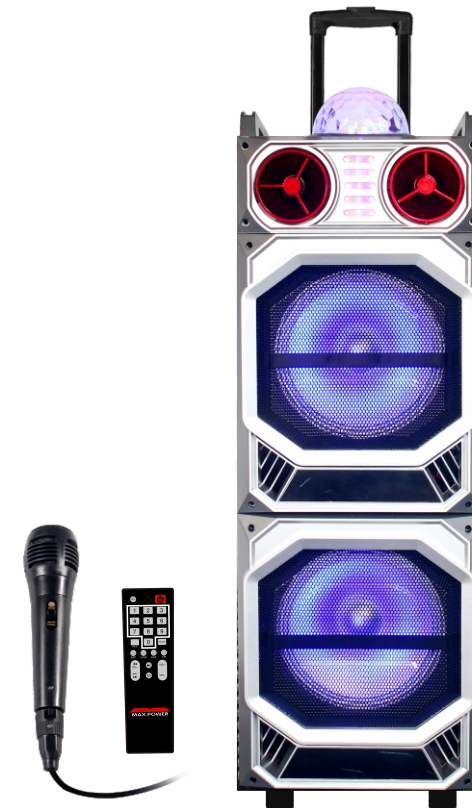

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATION THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE
110V MADE IN CHINA