

## REMOTE CONTROL PROGRAMMING INSTRUCTIONS

### GD-R17



#### INSTRUCTIONS TO PROGRAM A REMOTE:

1. Locate the garage receiver and determine the location of the **PROGRAM** button on your opener.
2. Push the **PROGRAM** button on the opener. Light will blink or noise will sound.
3. Opener is now ready to learn.
4. Within 30 seconds press and hold the desired button you wish to program on the transmitter.
5. Light will blink or noise will sound. The remote is now programmed.
6. \*Follow these same steps to program multiple openers to a multi-button remote.
7. Step away from all moving parts and doors and test the function.

### **⚠ WARNING**

In order to prevent possible **SERIOUS INJURY or DEATH** from a moving gate or garage door:

- Keep remote controls out of the reach of children.
- Only use the remote control when the gate/garage door can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- Keep the gate/garage door in sight until it is completely closed. Do not allow anyone to cross paths with the gate/garage door while moving or operating the remote control.

#### FCC Statement

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.