




Cut Line

4 in

wireless speaker

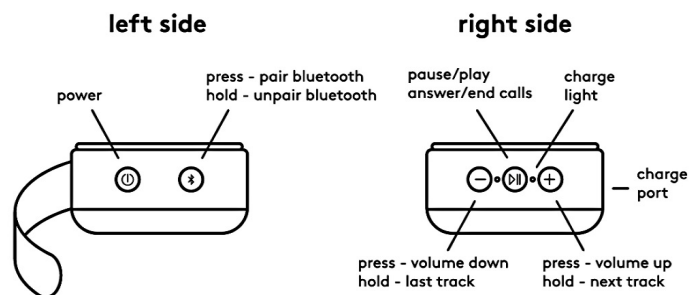

included

- Bluetooth speaker
- Micro USB charging cable

pairing

- Power ON speaker
- Rapid flashing white light
- Use Bluetooth settings on your phone to pair with HEYDAY SPEAKER 06
- White light turns solid followed by a chime - pairing successful

indicators

- Flashing Red - Low Battery
- Solid Red - Charging
- No Red Light - Fully Charged
- Rapid Flashing White - Pairing Mode
- Solid White - Bluetooth Connected
- Ascending Tones - Power on
- Descending Tones - Power off
- Three Rapid Tones - Ready to pair
- Single Chime - Paired
- Two Rapid Dings - Low battery
- Quick Ascending Tone - Max Volume
- Quick Descending Tone - Min. Volume

front

charging

- Full charge requires approximately 3-4 hours, charge complete when red light turns off
- Open charge port cover on speaker
- Plug micro end of charging cable into speaker
- Plug USB end of charging cable into a computer or 5V DC USB power supply

TWS (True Wireless Stereo) pairing

- Turn Bluetooth off on your device
- Place two matching speakers together, turn the speakers on
- On one speaker, press the bluetooth button twice quickly and they will pair automatically
- Enable Bluetooth on your device and connect to HEYDAY SPEAKER 06
- Sound will play from both speakers when connected correctly
- Speakers will pair automatically after TWS pairing
- To use speakers individually, hold the bluetooth button on the main speaker for 2 seconds and follow individual speaker pairing

troubleshooting

- If the speaker is not working correctly, turn it on/off to reset
- If the speaker won't turn on recharge the battery and try again
- If the speaker won't charge, make sure the supply works, is 5V>1A, and not damaged
- If the speaker makes no sound or does not show as an available device, make sure it is not paired, if so unpair the device and repair the desired device
- This device does not have a pairing code. If you are prompted for one make sure you are connecting to the correct device. If you are, "forget" the device and repair. If you are still prompted enter 0000.

IPX7 water resistance

- With the charge flap closed this speaker is water resistant and can be submerged up to 3 ft for up to 30 minutes, perfect for the bathroom, beach and anywhere in between

need some help?

Can't get it to pair? Have a question or comment?



call us at: 877-698-4883 or: 877-MyTgtTech



online at: TargetTechSupport.com

safety

- Submersible up to one meter of water for less than 30 minutes
- Do not modify or repair this device
- Do not use in high temperatures or extreme weather
- Do not use chemical detergents to clean your device, use a soft dry cloth



FCC ID: 2A023-BTSP47 Model: BTSP47 Input: 5V = Max 1A Made in China
This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.
Target Corp. Mpls. MN, 55403 Phone: 1-612-304-6073

back

尺寸: 102x142mm
材质: 157g铜版纸

5.6 in