 


Product Introduction

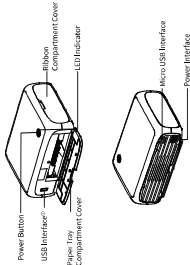 


Accessory List




Note: ① Only for cameras that support PictBridge connection.
② Purchase a ribbon Paper Set separately.


Power On and Connection

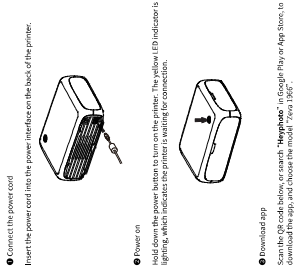


Loading the Ribbon

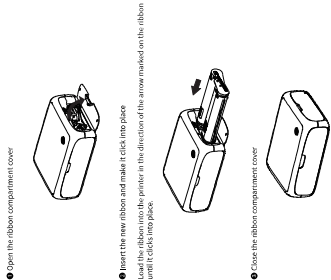 


Loading the Photo Paper

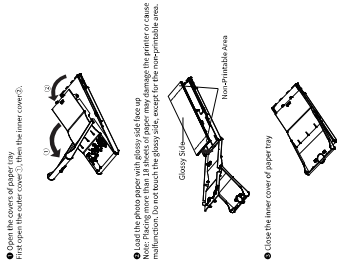 

Loading the Paper Tray

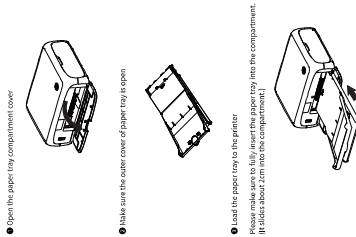 

Replacing the Ribbon

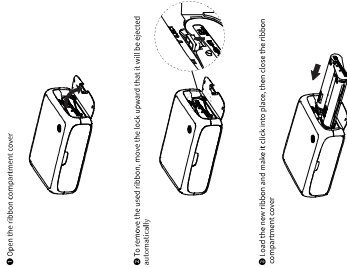 

¹Tip:
All the drawings of products and accessories in the user guide are for reference only.
Due to the updating and upgrading of the products, there may be some differences between the actual products and the drawings. For more information, please contact iDPRT Customer Service.

iDPRT Photo Printer

Product Name: Photo Printer	Dimension: 180×133×26mm
Product Model: Z660	Weight: About 1.0kg
Input: 24V 500mA	Operating Temperature: 5°C~35°C
Power: 10W	Storage Temperature: 0°C~40°C
Wi-Fi Connection: 802.11n	Wi-Fi Frequency: 2.4GHz
Manufacturer: Shenzhen iDPRT Electronic Technology Co., Ltd.	
Address: No. 96, Beiguan Road, Tong'an District, Kunming, China, 651100	
Official Web: www.idprt.com	
Customer Service Email: service@idprt.com	
After Service Web: http://idprt.afterservice.vip	



Instructions for Button Operation

When the printer is powered on, hold down the power button for 3 seconds, the yellow LED indicator is lighting.

- Turn off the printer: hold down the power button for 3 seconds and then release it, the LED indicator will be off.
- Reset of mode in power-on status, hold down the power button until the blue LED indicator is lighting, then release the power button, the printer will enter the factory configuration; after resetting, the LED indicator will turn white.

Instruction for LED Indicator

LED indicator	Status
Yellow, lighting	The system is starting
White, lighting	The printer is ready (Not in sleep mode)
Green, lighting	The printer is in sleep mode (in sleep mode)
White, slow flash	Ribbon has no exit
Red, lighting	Ribbon is abnormal
Red, slow flash	Page sensor ribbon is jammed
Red, slow flash	Print over temperature
Yellow, slow flash	Firmware is updating

Working Position

- Please place the printer on the desk or other flat and stable surfaces.
- Leave some space (at least 10cm) behind the printer for paper out when printing.

Printing Wirelessly from Smartphones (AP Mode)

- Please make sure that the LED indicator of the printer is lighting when at the time.
- Open the Bluetooth app, click "Bluetooth", select the images to print and then click "Next".
- The images in print preview will display the address (see on the left print corner; shown "Zewa 1966XXXX" and click to connect, XXXX is last four digits of Bluetooth MAC address. Showed on the bottom of the printer)
- After connecting, the printer will start to print the photos.

Printing Wirelessly from Smartphones (STA Mode)

- Make sure that the printer has been connected to the Wi-Fi hotspot.
- Open the Bluetooth app, click "Bluetooth", select the images to print and then click "Next".
- Adjust the images in print preview and click the printer icon on the top right corner;
- "Zewa 1966XXXX" and click to connect, XXXX is last four digits of Bluetooth MAC address showed on the bottom of the printer)
- Enter the password of Wi-Fi hotspot, click "Configure Wi-Fi" and the green LED indicator will start to flash, after the connection is successful, the printer will start to print the photos.
- After connecting, the green LED indicator is lighting, and the printer will start to print the photos.

Note: The above instructions take photo album printing for example, for GMS, AR and Credentials printing, please experience on your own according to the guide of App.

Printing via USB from a Computer

- Connect the USB cable to your computer and the other end to the Micro USB port on the back of the printer.
- Turn on the printer.
- Download the printer driver from IDPRT website or the QR code below and install it, as you could be helped.
- After connecting, you can print the photos from the computer.

Driver Download



Or visit: <http://www.idprt.com/Driver/>

Precautions

- The best operating temperature is 15°C-45°C. If the environmental temperature is too high, the print quality may be affected.
- Please do not use the unoriginal adaptor color ink and photo paper to ensure the print quality.
- Please do not touch the film of color ink and the glossy side of photo paper in case of fingerprints that may affect the print quality.
- During printing, the area around the thermal print head is very hot. Do not touch it, as you could be burned.
- Please do not touch the photo paper by force during printing, or else it may damage the printer.
- Please remove the paper tray when it is not used for a long time, and clean the covers of the printer and the paper tray to avoid dust entering.

Disclaimer

Thanks you for purchasing our product. By using this product, you hereby signify that you have read, understood and agreed to the terms and conditions herein. The user should observe safe and lawful practices including, but not limited to, those set forth in this document. Our company therefore holds no liability for damages or losses of any kind, including but not limited to the loss of profits, income or data due to the violation of explicit or implied warranties or conditions mentioned in this user manual. Information in this user manual or intentional misstatement on the part of this user.

Except for the scope prohibited by the applicable laws, the company is not responsible for any damages or losses of any kind, including but not limited to the violation of explicit or implied warranties or conditions mentioned in this user manual. Information in this user manual is for informational purposes only. It is subject to change without prior notice, due to the manufacturer's continuous development program. This document supplements and replaces all information supplied prior to the publication hereof.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not properly installed and used, may cause harmful interference to radio communications.

Changes, such as plug and play, that are not approved by the manufacturer, are discouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Caution: Changes or modifications not approved by the manufacturer could void the warranty and compliance with FCC's RF Exposure guidelines. The equipment should be installed and operated with minimum distance between 20cm from the radiator. Your body (use only the supplied antenna).

FCC ID: 2AUTE-ZWA1966



After Service



© 2016 IDPRT Inc. All rights reserved.
Customer Service Email 1: help@idprt.com
Customer Service Email 2: china@idprt.com

IDPRT Photo Printer Quick Start Guide

Zevo 1966

Please read the guide carefully, before using the product, and keep it handy.