

90mm

70mm

HTC E-mo2

VER:W01

使用说明书

感谢您购买和使用本产品!
为了给您带来更好的使用体验, 请仔细阅读说明书。

产品参数:

产品名称	立体声真无线蓝牙耳机
产品型号	HTC E-mo2
材质	ABS+PC
蓝牙传输距离	≥10m
蓝牙版本	V5.0
净重	46g
充电盒容量	400mAh
耳机电池容量	40mAh
输入	5V/300mA
传输频率	2402-2485MHz

产品概况:

配件清单:

HTC E-mo2

说明书

产品使用说明:

本产品打开充电仓后, 耳机会自动开机配对, 直接与手机蓝牙连接“HTC E-mo2”即可使用。
温馨提示:
当两耳机无法同时播放音乐,或其他不明状态时, 只需在左右耳机配对状态下, 单击触控左右耳各3下后, 配对成功或直接放入充电仓中重新激活。
(注明: 重新连接蓝牙时需要清除手机之前蓝牙连接记录)

播放音乐:

1. 播放/暂停: 双击任意一侧触摸按键;
2. 上一曲: 三击左耳触摸按键;
3. 下一曲: 三击右耳触摸按键。
双耳通话时:
1. 接听电话: 单击任意一侧触摸按键;
2. 结束通话: 单击任意一侧触摸按键;
3. 拒接来电: 双击任意一侧触摸按键。
手动开/关机:
1. 长按1.5S开机;
2. 长按5S关机。
语音助手/游戏模式:
1. 语音助手: 四击左耳机触摸按键;
2. 游戏模式: 四击右耳机触摸按键。
低电量提醒说明:
1. 耳机电量不足时, 嘟嘟语音提示;
2. 耳机电量耗尽后会自动关机;
3. 充电仓电量不足时, 红灯快闪。
*注意事项
1. 切勿使用具有腐蚀性的清洁剂清洗本产品;
2. 确保产品存放在干燥, 适温的环境中, 并每月至少给充电仓充电一次;
3. 使用本产品请将音量调至最适宜状态, 长时间音量过大可能会有听力受损的风险;
4. 请勿私自拆解, 暴力撞击或投入火中, 若出现膨胀, 请勿继续使用。请勿置于高温环境中。

保修说明:

本卡片仅对保修范围内的产品有效使用,详见如下:
1. 通过合法正规渠道获得的本公司产品;
2. 非人为损坏的产品, 包含但不限于私自拆卸, 使用不当, 自然灾害等情况下不在保修范围内;
3. 未超过产品保修期, 产品质量保修卡注意事项。

产品质量保修卡:

顾客姓名 _____

联系电话 _____

联系地址 _____

产品型号 _____

问题简述 _____

产品合格证:

检验员: _____

生产/检验日期: _____

HTC E-mo2

VER:W01

User Manual

Thank you for purchasing and using this product!
For your better experience,please kindly read the instructions.

Product Specification:

Product Name	TWS Bluetooth Headset
Model	HTC E-mo2
Material	ABS+PC
Bluetooth Transmission Range	≥10m
Bluetooth Version	V5.0
Net Weight	46g
Power Bank Capacity	400mAh
Earbuds Battery Capacity	40mAh
Input	5V/300mA
Transmission Frequency	2402-2485MHz

Product Overview:

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Accessories List:

HTC E-mo2

User Manual

How to Use:

The earbuds will be paired automatically once they are turned on.Tap Bluetooth“HTC E-mo2”,on your cellphone,they will be connected.

Warm tips:

When two earbuds can not play music at the same time or in other unknown states,just click the left and right earphones three times in the pairing state,it will shut down and connect automaticly,or put them intothe charging case to reactivate.
(Note:When reconnecting Bluetooth,you need to clear the Bluetooth connection record before reconnecting to the mobile phone.)

Playing music:

1. Play/pause: Double tap either side of earbuds once.
2. The previous song: Tap the left earbud three times
3. Next song: Tap the right earbud three times.
Calling:
1. Answering Calls: Tap either side of earbuds once.
2. End the call: Tap either side of earbuds once.
3. Reject the calls: Double tap either side of earbuds once.
Power on/ off:
1. Long press 1.5S to power on;
2. Long press 5S to power off.
Voice assistant/Game mode:
1. Voice assistant: Tap the left earbud Four times.
2. Game mode: Tap the right earbud Four times.
Low Battery Warning:
1. When the battery of earbuds run low,there is a "Do-Do" beep to remind you.
2. The earbuds will turn off when they run out of power.
3. The red light flash when the charging case without enough power capacity.

* Warning
1. Do not use corrosive detergent to clean this product.
2. Store the product in a dry environment and charge the charging case at least once a month.
3. Please adjust the volume to the most appropriate state when using it. High volume may cause a risk of hearing loss.
4. It is forbidden to dismantle, impact or throw into fire without permission. If expansion occurs, do not continue to use it.Do not put it in high temperature environment.

Maintenance instructions:

This card is only valid for use in products by the warranty,as detailed below:
1. Purchasing the products through legal and formal channels;
2. Non-human damage products,including but not limited to private disassembly,improper use.In case of natural disasters, etc,it is not covered by the warranty;
3. Not exceeding product warranty period.It includes and is not limited to the above.The company reserves the right of final interpretation.

Warranty Card

Customer name: _____

Contact Number: _____

Contact Address: _____

Product Model: _____

Brief description of the problem: _____

Product certification: _____

Inspectors: _____

Production and inspection date: _____