

4G LTE CPE

Quick Start



Legal Information

Copyright @2022. All rights reserved.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of MeiG and its affiliates.

MeiG reserves the right to change or modify any information or specification contained in this manual without prior notice and without any liability.

Limitation of Liability

Due to the nature of wireless communications, transmission and reception of data can never be guaranteed. Data may be delayed, corrupted (i.e., have errors) or be totally lost.

MeiG shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using of this product, whether or not had been advised, knew or should have known of the possibility of such damages, including, but not limited to lost profits, interruption of business, cost of capital, cost of substitute facilities or product, or any downtime cost.

1. Introduction of Router

Your router is for indoor use only and multiple devices like computer, smart phone or landline phone can be connected to the router to access the Internet, make telephone calls and more.

The external antennas are optional.

When there is an external antenna and a normal antenna at the same time, the external antenna works.

External antenna name: F5340000100-01

Application Scenarios:


Scenario 1: 3G/4G mobile network service using a SIM card.



Scenario 2: Data service from Ethernet cord Internet connection (Ethernet Port).



Scenario 3: Data service from Ethernet cord and VoLTE voice using a SIM card.

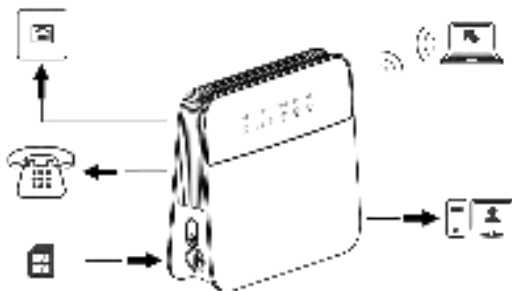

Appearance



- | | |
|-------------------|------------------|
| 1 SYS indicator | 8 LAN port |
| 2 RF indicator | 9 WAN port |
| 3 Wi-Fi indicator | 10 Power Input |
| 4 ETH indicator | 11 Power button |
| 5 NET indicator | 12 SIM card slot |
| 6 USB port | 13 WPS button |
| 7 Telephone port | 14 Reset button |

Important: Router does not support Micro/Mini SIM card or any other non-standard SIM cards.

2. Setup your Router

Insert a SIM card first and then connect power adapter to the power input of the router.

Press Power button to turn on/off the router, and it will search for available mobile networks automatically.

Do not insert or remove SIM card when the router is running, as this may affect performance or damage the SIM card.

The intuitive indicators display the router's status

Indicator	Status
SYS	Power indicator On: Device is powered on Off: Device is powered off
RF	More signal bars indicate stronger signal strength
WIFI	On: Wi-Fi is enabled Off: Wi-Fi is disabled Blinking: WPS connection set up in progress
ETH	On: Connect to Ethernet network or PC Off: Not connect to Ethernet network or PC Blinking: Data transfer
NET	Wireless Dialing indicator On: Registered to network Off: Not registered to network Blinking: Data transfer

3. Configuring

You can configure the router using the WebUI Settings page.

- 1) Launch the Internet browser, and enter **http://192.168.1.1** in the address bar.
- 2) Enter password and log in to the web management page.
The default password is **admin**.

You also can refer to the label on the backside of the router for the default IP address and password.

It's strongly suggested to change the default login password of the

WebUI to prevent unauthorized users from changing the router's settings.

4. Connect to Wi-Fi Network

You can connect your computer or mobile phone to the router's Wi-Fi network.

Default SSID: 4G-CPE-2.4G-XXXX & 4G-CPE-5G-XXXX

Default Password: xxxxxxxx (Please found it on your device label.)


It's strongly suggested to change the default SSID and password by accessing to the WebUI Wi-Fi management page to prevent unauthorized access to

your Wi-Fi network.

You need to reconnect to the router's Wi-Fi network after changing the Wi-Fi password.

5. Access the internet through the WAN port

You can connect the router's WAN port to the wall-mounted Ethernet port by Ethernet cable, and then choose the working mode to be Broadband mode and configure the PPoE/Static/DHCP parameters to access to internet.

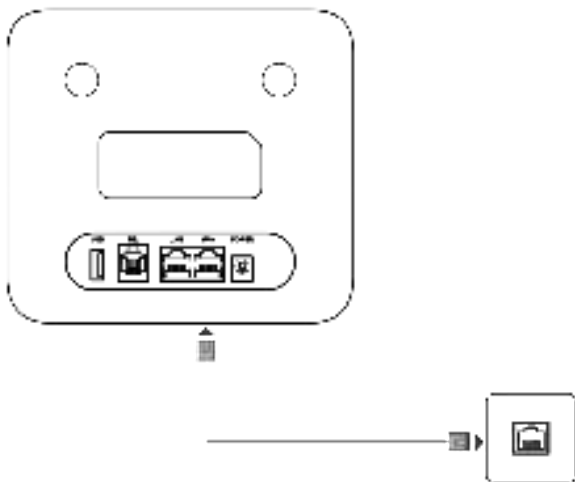

6. VoLTE & CS Domain Voice Call

The router supports both VoLTE and CS domain voice call services. To change the call mode select Settings > Phone and chose the desired option from the dropdown menu.

For best results, the “Auto” setting of network mode is recommended.

Please contact your network service provider for more detailed information.

7. FAQs & Troubleshooting

If you are expecting any issues with the router, **in most cases please try to restart the router or restore the router to factory settings.**

The illustrations in this guide are for reference purpose only and may not reflect the exact appearance of your product. Please contact your network service provider for more detailed information.

Questions	Solutions
How to restore factory settings?	When the router is power on, dick the reset button for approximately 3 seconds using a pointed object until the indicator starts to blink. Restoring factory settings will clear all customized

	settings.
How can I connect to the router by Wi-Fi Protected Setup (WPS) function?	<ol style="list-style-type: none"> 1. Ensure that Wi-Fi is enabled on the client. 2. Press the WPS button on the router to set up a WPS connection
How to deal with the content display issue of the WebUI?	Manually clear browser's cache, for example, open your browser and choose Internet Options >General > Browsing history>Delete, and re-launch the WebUI page.
Why the router does not work after I have finished configuring?	<ol style="list-style-type: none"> 1. Ensure that you have a working standard SIM card inserted properly. 2. Move the router to an open space free from obstructions and make sure there are available mobile networks. 3. If the problem persists, please contact your network service provider.
Why can't I access the router's WebUI?	<ol style="list-style-type: none"> 1. Ensure that your computer is connected to router through Wi-Fi or Ethernet cable. 2. Ensure that your computer is set to obtain an IP address and DNS server address automatically.

	<ol style="list-style-type: none"> 3. Restart your browser or try using another browser. 4. If the problem persists, restore the router to factory settings and try to access WebUI again.
--	--

8. Warning and Notice

Safety Precautions

This section contains important information about the operation

of your device. It also contains information about how to use the

device safely. Read this information carefully before using your device.

- Some electronic devices may be susceptible to electromagnetic interference. Locate the router away from any TV set, radio and other electronic equipment to avoid electromagnetic interference.
- The router may interfere with medical devices, such as hearing aids and pacemakers. Consult a physician or the manufacturer of the medical device before using the router.
- Please keep yourself at least 20 centimeters away from router.
- Do not use your router in dangerous environments such as oil terminals or chemical factories where there are explosive gases or explosive products being processed.

- Please use original accessories or accessories that are authorized by . Unauthorized accessories may affect the router performance, damage the router or cause danger to you.
- Do not attempt to dismantle the router. There are no user serviceable parts.
- Do not allow the router or accessories to come into contact with liquid or moisture at any time. Do not immerse the router in any liquid.
- Do not place objects on top of the router. This may lead to overheating of the device.
- The device must be placed in ventilation environment for use.
- Do not expose the router to direct sunlight or store it in hot areas. High temperature can shorten the life of electronic devices.
- Do not allow children to play with the router or charger.
- Keep the length of the cable between the router and the phone less than 10 meters.
- The router is for indoor use only. Do not use the router outside. Do not connect telephone extensions which run outside of the building. These can result in lightning damage to your unit.

Cleaning and Maintaining

- Use an antistatic cloth to clean the router. Do not use chemical or abrasive cleanser as these could damage the plastic case. Turn off your router before you clean it.
- Use the router within the temperature range of $0^{\circ}\text{C} \sim +45^{\circ}\text{C}$, and the storage temperature range is $-20^{\circ}\text{C} \sim +70^{\circ}\text{C}$. The humidity range is 5%~95%.
- Do not remove your SIM card unnecessarily. The SIM card may be easily lost or it can be damaged by static electricity.

RF Exposure Information

This device meets the government's requirements for exposure to radio waves.

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20 cm during normal operation.

FCC Regulations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two

conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with

the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or

more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



WARNING: Cancer and Reproductive Harm

www.P65Warnings.ca.gov