mm

00.


20.

Cannot start charging	1.The power supply does not meet requirements. 2.Unstable connection of power interface. 3.The charging distance is out of range. 4.There are other metal objects in the charging area.	Replace the adapter that match. Reinsert the power socket. Jusing within the specified distance. Remove metal foreign bodies	
Charging is slow	The temperature of product is too high	Keep reasonable space for heat dissipation Please wait until the temperature drops to room temperature before using the device	



	×					

GCteq吉成 Power freer• 用电更自由

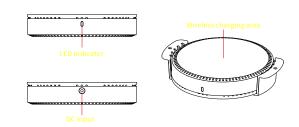

材质工艺要求:

材质: 70g普通书写纸 工艺: 单色双面印刷、风琴折 印刷要求: 色相正确、印迹牢固、套印准确、各色套印不漏杂色、套印误差≤0.1mm 说明书边角为直角、不做R角