 
 


Size: 297(W) x 105(H)mm

FRONT SIDE

BASS JAXX™ ACTIVE NOISE CANCELLING SMART CASE TRUE WIRELESS EARBUDS INSTRUCTION MANUAL Thank you for purchasing the Active Noise Cancelling Smart Case True Wireless Earbuds. This manual provides more information about this product, please read the instructions before using. <
--

BACK SIDE

Multifunction Touchscreen Smart Case  Lock Screen Swipe right to unlock  Music Control Song Name Display Pause / Play Music Previous song Next song  Volume Control Volume +/- adjustment  ANC Control ANC mode Transparent mode  Equalizer Normal/Rock/Pop/ Classic/Jazz  Timer 5min/10min/ 30min/60min  Screen Brightness Adjustment Screen brightness adjustment  Language Selection 16 system language selection  Lock Screen Wallpaper Selection 4 options  Find My Earphone Press the button and the earbud will make beep sound  Time/Date Setup Setup the system time and date for the smart case  Like Button Like shortcut button (While connected to the smartphone)	 Camera Control Camera shutter button (While connected to the smartphone and the Camera App's shutter can be triggered by Volume buttons)  Flash Light Screen turn to bright white  Phone Call Control Answer Call/ Cancel Call  Battery Low Smart Case battery low indication  Charging Smart Case battery charging indication  On/Off Control Double Click the Smart Case On/Off Button to access On/Off control Recharge Charging Case ⚠ For your safety, please always use appropriate 5V output charger/Adapter to charge the product. DO NOT USE Quick Charging USB Adapter to charge the product, as it might damage the product. 1. Use the USB Type-C charging cable provided with the packaging. 2. Connect the USB plug to a USB port on a wall adapter, then connect the USB Type-C plug to the USB Type-C charging port on the charging case to begin charging. 3. Charging icon and the battery level will be displayed on the screen during charging. 4. The battery level will be 100% when fully charged. NOTE: • You must select a qualified charger from a regular manufacturer. • You must charge the charging case and earbuds if it has been not used for more than 6 months.  USB Plug USB Type-C Plug ⚠ CAUTION: The USB Type-C charging cable included with this item is intended for use with this product. Only use the included USB Type-C charging cable to charge this product.	FAQ If the wireless earbuds cannot be paired with your device, please try the following: Ensure that your earbuds are in pairing mode or reconnection mode Ensure that Bluetooth search function of your mobile device is activated. If the wireless earbuds will not turn on: Make sure the earbuds are fully charged. Make sure the protective stickers are removed from the Earbuds Can I change the battery for the earbuds and the charging case? The wireless earbuds and the charging case use a built-in non-detachable battery which cannot be removed. If the charging case cannot be recharged: If you use a power outlet, ensure that the power supply is connected securely and the outlet works. ⚠ Safety instructions for the lithium battery and charging the product -The input voltage to the product is 5V 1A. -In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for charging the product. -Only charge the product at ambient temperatures between 10 °C/ 50 °F and 40 °C/104 °F. - Do not heat above 70 °C/158 °F, eg. Do not expose to sunlight or throw into fire. -Switch off the product after use. -Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product. -In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.  Item# EP-0719 Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in China FCC ID: 2ADM5-EP-0719 FCC ID: 2ADM5-EP-0719-C Keep all relevant information for future reference
---	---	---	---