

User Manual

User Manual

Table of Content

| | |
|--|----|
| 1. Preface | 4 |
| 2. Introduction..... | 5 |
| 2.1 Phone Display | 5 |
| 2.2 Key Function..... | 6 |
| 3. Getting Started | 8 |
| 3.1 Turning the phone on..... | 8 |
| 3.2 Charging the Battery..... | 8 |
| 3.3 Important Password..... | 9 |
| 3.4 Keypad Lock and Unlock..... | 9 |
| 3.5 Making an International Call | 9 |
| 4. Main Menu..... | 10 |
| Phonebook | 10 |
| Call History | 11 |
| Organizer..... | 11 |

User Manual

| | |
|---|----|
| Multimedia | 11 |
| Messages | 13 |
| File Manager..... | 13 |
| Settings..... | 14 |
| Fun & Games | 15 |
| Services..... | 15 |
| 5. Safety Information and Notices..... | 16 |
| 6. Frequently Asked Questions and Troubleshooting | 18 |
| 7. FCC Warning | 23 |

User Manual

1. Preface

Thank you for purchasing this cellular phone.

To guarantee your cellular phone works properly, please follow the instructions in this manual to prevent any possible incidents or malfunctions.

Follow all safety warnings to avoid injury or property damage.

Screen displays and illustrations in this user's manual are designed to help you operate your phone to its optimum performance.



We continuously strive to improve our products. Therefore, we reserve the rights to revise this user manual or withdraw it at any time without prior notice

User Manual

2. Introduction

3

2.1 Phone Display



5

User Manual

2.2 Key Function

| Key | Function |
|----------------|---|
| Call Key | Make or answer a call to Sim1 & Sim2. View Calls Logs in standby mode. |
| End/Power Key | Pressing and holding to turn the phone on/off. End a call or reject an incoming call. Return to the idle mode. |
| Left Soft Key | Menu key and OK key for functions |
| Right Soft Key | Access the Name list in idle mode. Return to the previous menu. |
| OK Key | Press to enter main menu in idle mode. After inputting numbers, press this key to do options. |
| Numeric key | Enter numbers, letters or characters. Select a submenu item labeled with the corresponding number. In idle mode, press and hold OK key to turn on/off torch |

User Manual

| | |
|---|---|
| | light. |
| * | Press to toggle between *, +, (pause character) P, and (wait character) W. Press to enter symbol when editing text. |
| # | Press to switch input modes when entering text. Press and hold to change sound profiles to Silent Mode and General mode. |



Note: “Press” in this manual, means to press and release the key; “press and hold” means to press and hold the key for at least 3 seconds.

User Manual

3. Getting Started

3.1 Turning the phone on

To turn the phone on, press and hold the Power key. If you have already enabled the Sim Lock function then enter the PIN code (the 4 to 8 digit secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator.

3.2 Charging the Battery

Ensure the battery is inserted in the handset. To charge the battery, plug in the charger connector at the left side of your phone (USB interface) and then plug the other end into an AC power socket.

The battery symbol indicates the charging status. While charging, the charge indicators will scroll. When all the scroll bars are steady, the battery is fully charged. It takes about 4 hours to fully charge the battery.

Disconnect the charger from the phone.

Disconnect the charger from the AC power socket.

User Manual



Note: If the battery is powerless, the battery icon will reappear after a few minutes of charging.

3.3 Important Password

Phone lock password is 1122.

3.4 Keypad Lock and Unlock

Go to Settings>Security Setting>Auto Keypad Lock to select the time for keypad lock.

In standby interface, if the time expires, the keypad will be locked automatically.

Lock: press LSK then * key in standby interface.

Unlock:press LSK and then press * key in standby interface.

3.5 Making an International Call

- Press the '*' Key twice until "+" appears on the screen.
- Enter the country code.
- Enter the area code (normally without the 0 before it) followed by the phone number.
- Press the Dial Key to call the number

User Manual

4. Main Menu

All function options about the mobile phone are listed as below with brief descriptions

| Phonebook | |
|------------------|---|
| Quick search | Typing the first letters to quick search the contacts |
| Search Contact | To search contact |
| Add number | To add New Contact |
| Delete | To delete the selected phonebook entry. |
| caller groups | Choose an contact number and add to contact group |

User Manual

| | |
|--|---------------------------------------|
| Settings | To check & change setting from here |
| Export Phonebook | Export all contacts into T-flash card |
| Import Phonebook | Import contacts from T-flash card |
| Call History | |
| Check call logs for missed, dial, received calls and perform functions like save , delete view etc | |

| |
|---|
| Organizer |
| To perform the features including BT, Alarm, Calendar, Calculator, World Clock, Stopwatch, Tasks, Currency converter, Unit converter, Torch |

| |
|-------------------|
| Multimedia |
|-------------------|

User Manual

| | |
|----------------|---|
| Camera | To take photo shoot |
| Videorecorder | To take video shoot |
| Image viewer | To view the saved image. |
| Audio Player | To play the music |
| Video Player | To play the recorded movie. |
| Sound recorder | To record the sound. |
| FM radio | To receive the FM broadcast. |
| Schedule FM | To record FM as scheduled |
| File manager | To manage the space of memory card, perform the corresponding operation on the selected file and folder |

User Manual

| Messages | |
|---------------|--|
| Write message | Create new SMS |
| Inbox | To view the received messages. |
| Outbox | To view the messages in sending or sent unsuccessfully.To view the sent messages. |
| Drafts | To save the messages that are not ready to send out in order to further edit, and then send. |
| Templates | To Templates |
| SMS Export | To export SMS into T-flash card |
| SMS Import | To import SMS from T-flash card |
| SMS Settings | To perform the setting related to SMS |

| File Manager |
|--------------|
|--------------|

User Manual

To view the files in Phone Memory and T-flash card

Settings

| | |
|---------------------|--|
| User profiles | To perform the setting related , ringtone settings General,Outdoor,Indoor,Silent,Headset,Bluetooth,Po wer saving |
| Phone settings | To perform the setting related to mobile phone such asTime and date, Auto power on/off, Language,Pref.input method,Greeting text on/off, |
| Display settings | To perform the settings like Wallpaper, Screen saver,Poweron display,Poweroff display, Show date & time, Contrast, LCD backlight |
| Dual SIM Setting | To enable or disable SIM1 or SIM2 |

User Manual

| | |
|--------------------------|---|
| Security settings | To perform the setting related to security Including Phone lock, Auto keypad lock,Change Password, Mobile tracker |
| Restore factory settings | Restore all settings as before. Default password:1122 |

| | |
|--|---------------------|
| Fun & Games | |
| Games/F1 race | Enter Games |
| Game Setting | Settings GamesSound |
| Enjoy the gaming experience with F1 race | |

| | |
|--|--|
| Services | |
| Begin to Network To settings (Home Page,Bookkmark,Input URL,Settings) Dsta Account,STK | |

User Manual

5. Safety Information and Notices

Before using the phone, please read the safety precautions carefully and let your children know these, so that you can use your phone correctly and safely.

| |
|---|
| Do not switch on your phone when phone use is prohibited or when phone use may cause interference or danger. |
| Do not use your phone while driving. |
| Follow the rules or regulations in hospitals and health care facilities. Switch off your phone near medical equipments |
| Switch off your phone in an aircraft. The phone may cause interference to control signals of the aircraft. |
| Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices. |
| Do not attempt to disassemble your phone or its accessories. Only qualified personnel are |
| allowed to service or repair the phone. |

User Manual

| |
|---|
| Do not place your phone or its accessories in containers with strong electromagnetic field. |
|---|

| |
|--|
| Do not place magnetic storage media near your phone. Radiation from the phone may delete the information stored on them. |
|--|

| |
|--|
| Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station. |
|--|

| |
|---|
| Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance. |
|---|

| |
|--|
| Use approved batteries and chargers only to avoid explosion. |
|--|

User Manual

6. Frequently Asked Questions and Troubleshooting

| Frequently Asked Questions | Cause and Solution |
|----------------------------|--|
| Fail to turn on | Press the power on key for over 1 second. |
| | Check if the battery is properly connected. Please remove and install it again, retry to turn on; |
| | Check if battery is appropriately charged |
| Fail to connect network | Weak signal. Please Try and move to a location with strong signal and try connecting to the network again; |
| | Please ensure that you are not beyond the network coverage of service providers; |

User Manual

| | |
|--------------------------------------|--|
| | Please ensure you have a valid SIM card. Please contact your network provider for further information. |
| Display information while turning on | Check if the SIM card (insert the SIM card) is installed correctly |
| | Handset lock password. If the handset lock is activated, you have to input handset password before using. |
| | Input PIN. Inputting PIN while turning on each time is activated, you have to input the PIN code. |
| | Input PUK code: Having input wrong PIN code for 3 times straight will lock the SIM card. You need to input the PUK code provided by your network provider. |
| Poor quality of calling | Please check if the sound volume is tuned improperly |

User Manual

| | |
|----------------------------|---|
| | <p>In an area with poor receiving condition, example: basement, the signal might be weak. Try reaching a location with stronger signal reception and call again.</p> |
| | <p>While using the mobile phone in the peak period of communication, like commute time, you may be unable to call because of line congestion.</p> |
| Standby duration shortened | <p>The standby duration is relative to the system setting of network. While the mobile phone is in an area with poor signal strength and can not receive the signal, the handset will continuously search for a base station. This will significantly reduce battery charge. It is recommended that you turn off your mobile in area with no signal reception to save battery. Need replacing the battery. Please change a new battery.</p> |

User Manual

| | |
|------------------|---|
| SIM Card Error | Dirt on the metal surface of an SIM card. Use clean cloth to wipe the metal touch point on an SIM card. |
| | The SIM card is not installed. |
| | The SIM card is damaged. Please contact your network service provider. |
| Fail to dial out | Please confirm if you press the dial key after dialing. |
| | Please confirm if calling is forbidden because of defaulting. |
| | Please confirm if the SIM is valid. |
| | Please confirm if the call barring is set. |
| | Please confirm if the fixed dial function is set. |

User Manual

| | |
|----------------------------|--|
| Callers cannot contact you | Please confirm if the mobile phone is on and connected with the network. |
| | Please confirm if calling is forbidden because of defaulting. |
| | Please confirm if the SIM card is valid. |
| | Please confirm if the call barring is set. |
| Fail to charge | Poor contact. Please check if the plug is connected well. |
| | Charge in the environment below 40℃ or above 55℃. Please change your charging environment. |
| | The battery or charger is damaged. You need to replace it. |
| Fail to set some functions | Wrong operation; |
| | The network provider does not support the function, or you have not applied for it. |

User Manual

7. FCC Warning

Specific Absorption Rate (SAR) information SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5mm from the body.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the

User Manual

equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

User Manual

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.