





PC

ANDREW.

Mobile

BTS

Operation

PSTN

Summary Alarm

AMR80

ANDREW.

Status

Mobile

BTS

Main

Fuse







PC

ANDREW.

Mobile

8

9

19



1

2

3

4

5

6

7

8

9

EXIT

0

ENTER

BTS

8

9

19

Operation



PSTN



Summary Alarm

ANDREW.

Status

Mobile

BTS

AMR80

Main

Fuse

ANDREW.

Status

Mobile

BTS

AMR90

Main

Fuse

ANDREW.

Status

Mobile

BTS

AMR19

Main

Fuse





PC

ANDREW.

Mobile

8

9

19



1

2

3

4

5

6

7

8

9

EXIT

0

ENTER

BTS

8

9

19

Operation

PSTN

Summary Alarm

ANDREW.

Status

AMR80

Mobile

BTS

Main

Fuse

ANDREW.

Status

AMR90

Mobile

BTS

Main

Fuse

PC

ANDREW.

Mobile

8

9

19

BTS

8

9

19

Operation

PSTN

Summary Alarm







PC

ANDREW.

Mobile

BTS

Operation

PSTN

Summary Alarm

AMR80

AMR90

AMR19

ANDREW.

Status

ANDREW.

Status

ANDREW.

Status

Mains

Fuse

Mains

Fuse

Mains


Fuse

24VDC

24VDC

24VDC



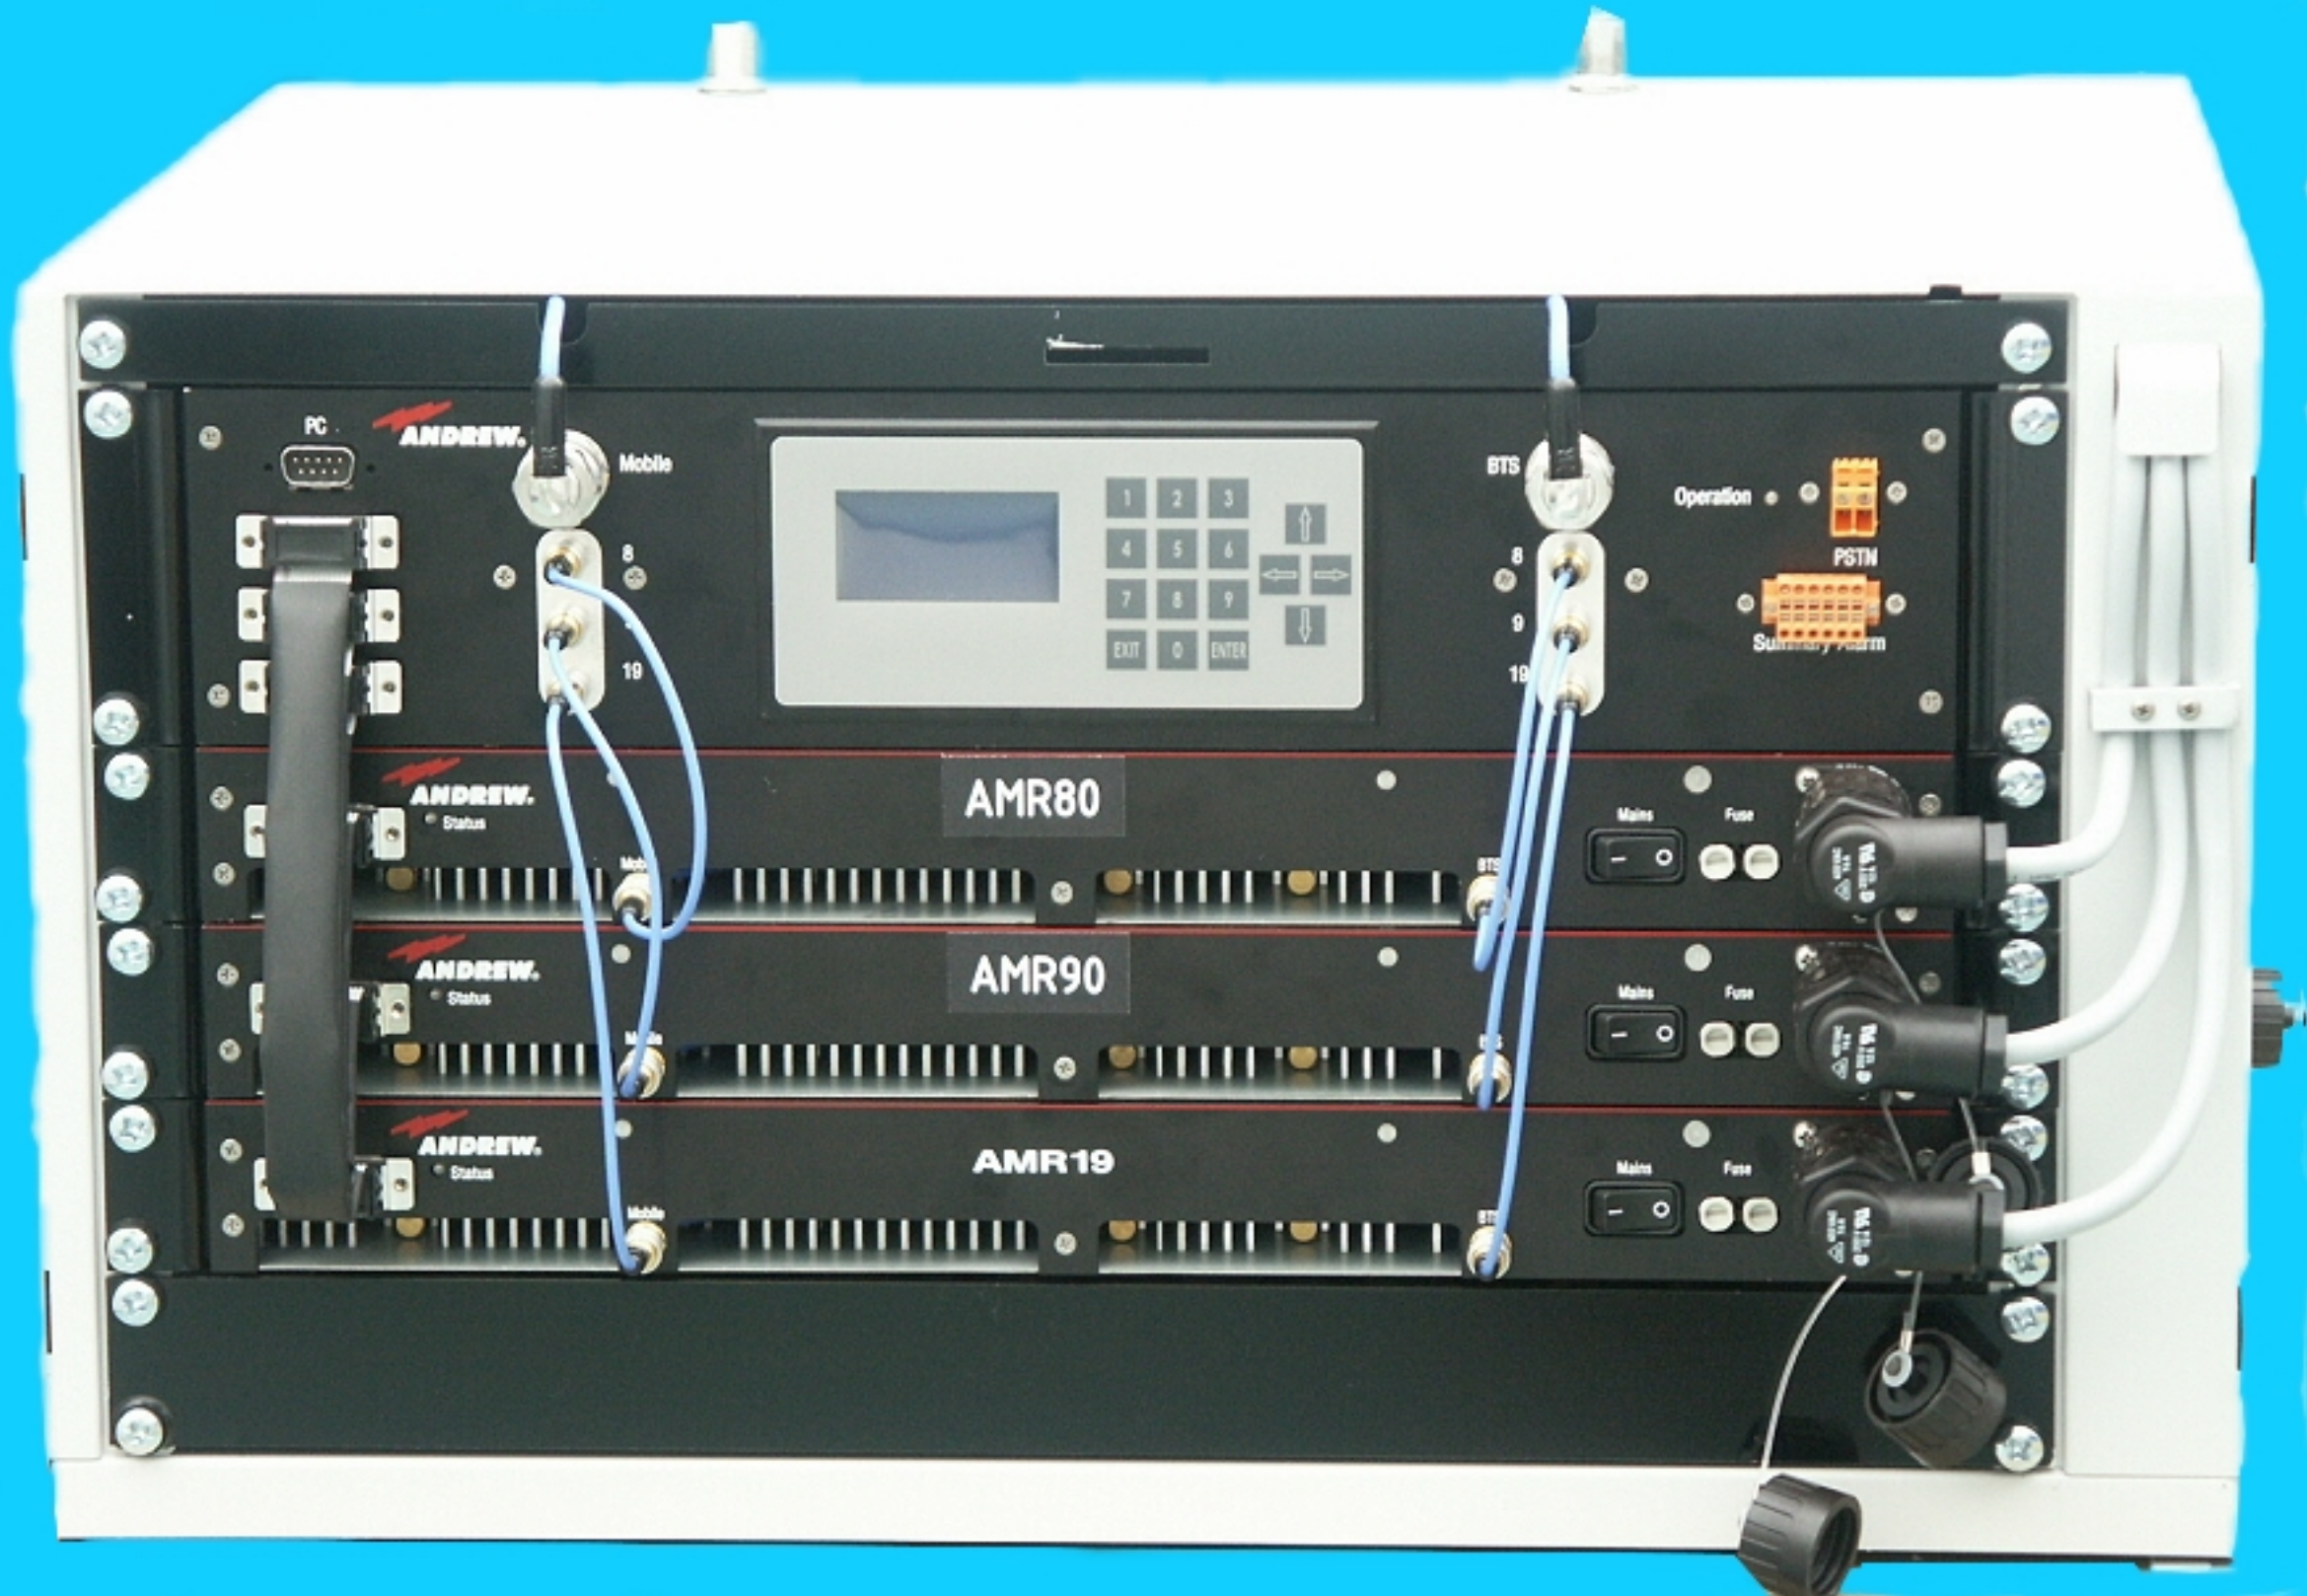

B0176A0A



