

**1 Preface**

Thanks for purchasing Gou U150 Ultra portable Bluetooth® speaker. Please take the time to follow the instructions in this user manual carefully. If you have any query, please call our national service hotline: 400-098-400.

**2 Warnings and Cautions**

- 1. To reduce the risk of fire or electric shock, be sure the electrical circuits are not overloaded.
- 2. To avoid risk of electronic shock, be sure not plug the adapter with hands.
- 3. Unplug the power cable if your device is smoking or abnormal and seek professional help from your nearest service center; be sure not detach the device yourself.
- 4. To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Liquid can cause a failure and/or fire hazard.
- 5. The power cable and audio cable can not be twisted or dragged in case of short circuit.

**3 FCC Warnings**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

**6 Do not place any naked flame sources, such as lighted candles, on or near the apparatus.**

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
 - Increase the separation between the equipment and receiver.  
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
 - Consult the dealer or an experienced radio/TV technician for help.  
**FCC RF warning statement:** The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure condition without restriction.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

The transmitter must not be co-located or operating in conjunction with any other antenna or transmitters.

**7 Operation Steps**

**How to connect your U150 with your notebook pc by Bluetooth®?**

1. In the case of your notebook with the Bluetooth® function:  
Step 1: Be sure your speaker has Bluetooth® mode.  
Step 2: Turn on your speaker and it will be in Bluetooth® mode automatically and ready for connecting. The blue indicator flashes.  
Step 3: Open the Bluetooth® of your mobile, search the "Gou U150" device and connect to it. Usually you need to input password for most Bluetooth playback devices, but due to the Bluetooth version varies, sometimes, you need to input the default password "0000" (four zero) if required.
- Step 4: Blue light remains steadily to indicate successfully connected.
- Step 5: Run the music player of your mobile, and enjoy the loud but clear sound from your U150.

**How to play music with AUX-in?**

- Step 1: Your U150 comes with a standard 3.5mm Aux in Jack for connecting with other non-Bluetooth audio devices, e.g. mobile phones/iPad/iPod players, pc, tablet pc and etc.
- Step 2: Turn on the Gou U150 speaker and back on.
- Step 3: Start the Bluetooth® searching function of your notebook, blue light flashes when searching the Audio-in devices.
- Step 4: The blue indicator light remains steadily on after connecting.
- Step 5: You can play the audio music of the notebook by the speaker.

**2. In the case of your notebook without Bluetooth® function.**

Please buy the Bluetooth® adaptor additionally. After installing please start the Bluetooth® from the "Control Panel" or the shortcut of your pc desktop. Then proceed for connecting, and the instruction steps are the same as the first case.

**How to pair your speaker with two playback devices?**

Your speaker supports to pair two playback devices at the same time, just follow the step 1 to pair two playback devices and reconnect the device you want to listen.

- Step 1: Turn the Gou U150 speaker off and back on.
- Step 2: Make sure your speaker is discoverable
- Step 3: Make sure your speaker battery has sufficient power.

**Speaker will not turn on?**

- Make sure your speaker has sufficient power.


**Paired Bluetooth device will not connect?**

**4 Standard Accessories**



Gou U150 Bluetooth® speaker  
Micro USB charging cable  
3.5mm Audio cable  
User Manual

**5 Structure Introduction**

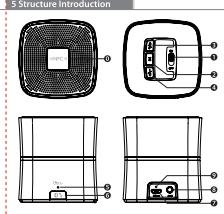

**6 Power on/off:**

- Play/Pause button. In Bluetooth® mode, short press is to Pause. The long press is to turn off the device.
- Previous track button. In Bluetooth® mode: short press is for previous track, long press is for increasing volume. Note: the button is invalid in the AUX mode.
- Next track. In Bluetooth® mode: short press is for next track, long press is for decreasing volume, the button is invalid in the AUX mode.
- Microphone hole.
- Bluetooth® disconnection button and Answer/Reject call. In Bluetooth® mode, press and hold for 3 seconds to disconnect Bluetooth® device. In AUX mode, short press for disconnect, answer the call, and long press for 3 seconds for rejecting call. In AUX mode, short press is invalid and long press for 3 seconds for ending the call.
- Microphone hole.
- Blue indicator flashes: Status of waiting for connecting. Blue indicator remains: Connected to Bluetooth® source or steadily on: Connected to AUX source.
- Low power indicator flashes: Battery voltage lower than 3.3v. Red light: Red indicator is on when charging, and off when fully charged.
- Red charging indicator light: Red indicator is on when charging, and off when fully charged.

**7 Indicator Instruction**

Predator Color	U150 working status
Blue indicator flashes	Status of waiting for connecting
Blue indicator remains	Connected to Bluetooth® source or steadily on
Low power indicator flashes	Battery voltage lower than 3.3v. Red light
Red charging indicator light	Red indicator is on when charging, and off when fully charged.

**Limited Warranty**

Your Gou U150 Bluetooth® speaker is covered by a limited warranty. It is backed by 1 year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired or replaced free of charge during the warranty period.

◆ The warranty applies to the original purchase. Proof of original purchase is required.

◆ The warranty does not cover the damage caused by misuse, abuse or improper settings.

◆ In no event shall Gouji be responsible for any direct, incidental, consequential or other damages of any kind.

**8 Poor sound quality from AUX source?**

- If your device requires a pass code, make sure to input "0000" four zeros.
- Make sure the Gou U150 speaker is on and back on.
- Remove the Gou U150 speaker from the pairing list on your Bluetooth device pairing list (consult the device owner's manual for assistance). Then pair the device and the speaker again.

**Poor sound quality from a Bluetooth device?**

- Your Bluetooth device may be out of range, move closer and try again.
- Move your Bluetooth device and/or Gou U150 speaker away from any device that generates electromagnetic interference, such as another Bluetooth device, cordless phone, microwave oven or wireless router.
- Try to turn off Wi-Fi to improve audio quality.
- Make sure your speaker file is not poor quality.
- Turn your Bluetooth speaker off and back on.

**1. Your speaker will power off automatically after 10 minutes if you do not pair it with playback devices in order to save energy. You need to power on speaker again when you want to use it.**

**2. Bluetooth® compatibility mode: Gou U150 speaker can connect up to four Bluetooth® devices with the different brands and models. Use one individual Bluetooth device to have compatibility problem with the U150. If you face writer assistance, please contact our technical customer service: 0066-751-5122071.**

**3. If your speaker paired with over 8 playback devices already, these will be over 20 seconds delay for search and switch new playback devices. Then your speaker will power off automatically. You need to power on speaker again when you want to use it.**

**4. Make sure your connected device is on and playing.**

**5. Make sure your speaker is in AUX in mode.**

**6. Make sure the audio cable is correctly inserted.**

**7. Increase the volume level on the device and speaker.**

**9 Specifications**

<b>Product specification</b>	
Channel	1.0 Channel
Bluetooth®-chipset	CSR
Speaker	Digital Amplifier
Size	Full range 0.45m² 2D
Weight	164.5 x W94.5 x H70.1mm
Weight	261g

**10 Statement**

**The Gou trademark and logo are registered trademarks of Gou Technology (Shenzhen)Co.,Ltd. All Rights Reserved. All other trademarks, logos or service marks are the property of their respective owners.**

**11 Contact us**

**Gou Technology (Shenzhen)Co.,Ltd**  
Add:14c, Block A, FirstWorld plaza, No.7002 West Hongli Road, Futian District, Shenzhen, China  
Tel:0755-8235 9000 Fax:0755-751 8323 5000  
E-mail: sales@gouji.com Website: www.gouji.net