

WiFi

REPEATER

Mobile phone setup

2.4G / 5G

1

Plug in your wifi extender

The 3 lights on the right will be on except the "Extender".

Abnormal:  
Press "reset" hole on the bottom of the product for 8s with paperclip, or contact seller

2

Connect your extender SSID

Both 2.4G and 5G are available, choose 5G to setting

\*NOTE:  
You can not surf the Internet until you finish all the setting steps, pls continue.

3

Sign in to management page  
(Google Chrome&Mozilla Firefox recommended)

\*NOTE:  
Pls make sure that you have connected the SSID(wifi-5g-xxxx) of the wifi extender successfully, most of the PC client will recognize and Sign in to the management page automatically.  
If not, pls enter 192.168.188.1 on the new browser.

4

Enter the default password:admin

5

Scan and select your host router SSID

6

Enter the password of your host router

\*NOTE:  
Pls make sure of the right password(special characters not allowed, like "%")

7

Set your Extender SSID and password

8

Check details and make a note of the Wireless Info

\*NOTE:  
After check, click "Start Connect" and wait 30-60s

9

When you finished setting, pls wait 30-40s until extender light is on.

Please wait 34 seconds

10

The proper position of WiFi Extender:  
Flexible adjustment between B-D

\*NOTE:  
A-B: The WiFi signal is strong enough, there is no need to extend  
B-D: The range of middle level WiFi signal, WiFi Extender can receive router signal well and extend it further  
D-B: The WiFi signals too weak to be received by WiFi Extender

11

Reconnect your extender wifi

Reconnect the extender SSID, then get access to Internet.

WiFi

REPEATER

PC setup step

2.4G / 5G

1

Plug in your wifi extender

The 3 lights on the right will be on except the "Extender".

Abnormal:  
Press "reset" hole on the bottom of the product for 8s with paperclip, or contact seller

2

Connect your extender SSID

Both 2.4G and 5G are available, choose 5G to setting

\*NOTE:  
You can not surf the Internet until you finish all the setting steps, pls continue

3

Sign in to management page  
(Google Chrome&Mozilla Firefox recommended)

\*NOTE:  
Pls make sure that you have connected the SSID(wifi-5g-xxxx) of the wifi extender successfully, most of the PC client will recognize and Sign in to the management page automatically.  
If not, pls enter 192.168.188.1 on the new browser.

4

Enter the default password:admin

5

Scan and select your host router SSID

6

Enter the password of your host router

\*NOTE:  
Pls make sure of the right password(special characters not allowed, like "%")

7

Set your Extender SSID and password

8

Check details and make a note of the Wireless Info

\*NOTE:  
After check, click "Start Connect" and wait 30-60s

9

When you finished setting, pls wait 30-40s until extender light is on.

Please wait 34 seconds

10

The proper position of WiFi Extender:  
Flexible adjustment between B-D

\*NOTE:  
A-B: The WiFi signal is strong enough, there is no need to extend  
B-D: The range of middle level WiFi signal, WiFi Extender can receive router signal well and extend it further  
D-B: The WiFi signals too weak to be received by WiFi Extender

11

Reconnect your extender wifi

Reconnect the extender SSID, then get access to Internet.

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.