


Card Beacon | User Manual

Turning on/off and maintenance

Device may be turned on/off on demand using micro switch, which is the only physical switch in this product. This prevents device from discharging when not used. When turned on Card Beacon works constantly and is ready to be used in 'out of the box' manner. They are ready to perform since programmed and assembled.

In case of possible malfunctioning users are advised to contact technical support to get proper replacements (email: support@kontakt.io). The manufacturer and devices' names are mentioned on the product label on the beacons' casings.

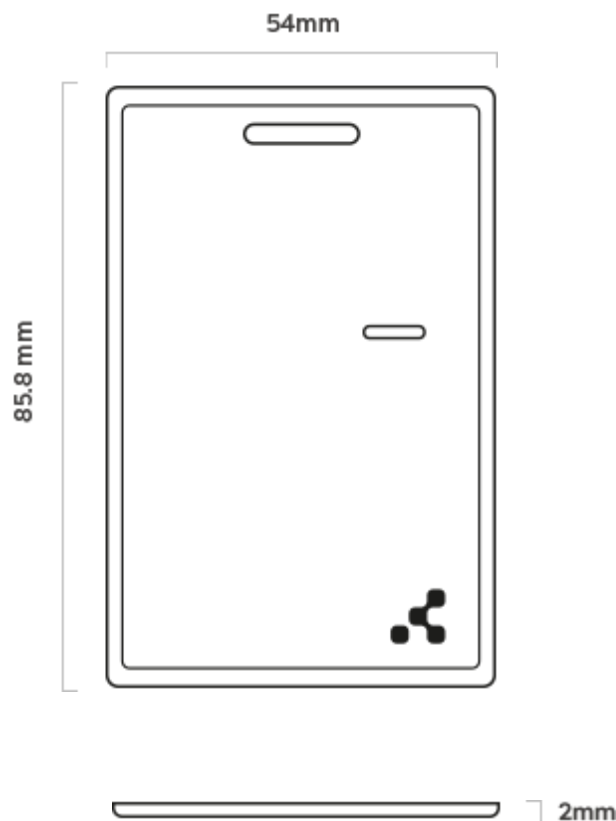

Installation

Slip a lanyard through the hole, put it inside your belongings, or stick your Card Beacon to the wall for the most low profile look a beacon can possibly have.

Features

- Two technologies in one device: BLE and built-in non editable RFID and/or NFC tag
- Power Saving Mode: Card Beacons broadcast less frequently when they don't move (thanks to motion sensor) or simply switch them off when you don't use them

WARNING

Opening Card Beacons or fixing them is strictly forbidden.

Kontakt Card Beacons contain electronic elements and batteries which should be properly disposed. If you ever want to utilise beacons, please contact manufacturer first.

Switching the original battery with one of a different type might cause a risk of explosion.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.