



Sport Active Wireless Earbuds

Operation Manual HY-SPAC

FCC ID: 2AANZHYSAC
BT ID: D031134
MADE IN CHINA

Thank you for purchasing the HYPE® Sport Active Wireless Earbuds. Please read all instructions carefully before using and retain this manual for future use and reference.

PACKAGE CONTENTS

- Wireless Earbuds
- USB Charging Cable
- Operation Manual

KEY FEATURES

- Compatible with all Bluetooth®-enabled devices
- Built-in rechargeable battery
- Volume control

SAFETY INSTRUCTIONS

Keep the unit away from heat sources, direct sunlight, humidity, water and any other liquids.

Do not operate the unit if it has been exposed to water, moisture or any other liquids to prevent against electric shock, explosion and/or injury to yourself and damage to the unit.

Do not use the unit if it has been dropped or damaged in any way.

Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.

Do not puncture or harm the exterior surface of the product in any way.

Keep the unit free from dust, lint, etc.


Do not use this unit for anything other than its intended use or purpose. Doing so may damage the device.

This product is not a toy. Keep out of reach of children.

Do not use the earbuds at excessive levels as this may damage hearing.

1

Do not expose batteries, battery pack, or batteries to installed to excessive heat, such as direct sunlight, or open flame.

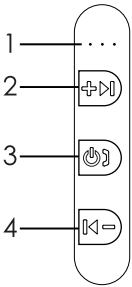

CONTROLS

1. Microphone
2. Next song/Volume up
3. Multi-function Button, ON/OFF, Answer, end, reject call
4. Next song/Volume down

CHARGING THE EARBUDS

The earbuds come with a built-in rechargeable battery. Before using it for the first time, we recommend you charge the battery fully. Only use the supplied USB cable to charge the headphones.

Connect the USB cable to a computer USB port and the USB plug to the charging port of the earbuds. The red LED light will illuminate while the earbuds are charging.

A full charge of the battery takes around 1 hour. When the battery is fully charged, the LED light will turn off. Disconnect the earbuds at this point. The earbuds will then be ready for use.

When the battery is low, the LED will flash red and emit three tones every 20 seconds. When this occurs, please recharge the earbuds.

2

When using your earbuds with an iPhone, the top right corner will indicate your earbud's battery life.

VOICE PROMPT

The earbuds will notify you of status by beep sound when applied "Power On," "Power Off," and "Pairing Successful".

TURNING EARBUDS ON/OFF

Power On: Press and hold the multifunction button for 3 seconds until the LED flashes red.

Power Off: Press and hold the multifunction button for 3 seconds until the red & Blue LED stops flashing.

In order to save power, the earbuds will automatically turn off if not paired with a device after 5 minutes.

PAIRING THE EARBUDS

1. Ensure the earbuds are turned off. If they are not, please turn off the earbuds first before pairing.
2. Press and hold the multifunction for 5 seconds until the red and blue LED flash alternative. This will indicate your earbuds are now in pairing mode.
3. Place the earbuds and the Bluetooth device to which you would like to pair it within the operating distance. We recommend keeping the two devices no further than 3 feet apart.
4. Ensure Bluetooth is enabled on your phone or music device. Refer to the manufacturer's instructions for how to enable Bluetooth on your device.
5. Once you have activated Bluetooth on your device, select the earbuds "HY-SPAC" from the list of available Bluetooth devices.
6. If required, enter the PIN code "0000" and confirm the entry.
7. Please note, pairing mode on the earbuds will last for two minutes. If no devices are paired after two minutes, the earbuds will automatically return to standby mode.
8. If pairing is unsuccessful, turn off the earbuds first and repair following the aforementioned steps. Once you have paired the earbuds with a device, the earbuds will remember this device and will pair automatically when the device's Bluetooth is activated and in range. You do not need to re-pair any previously connected devices.

3

Your earbuds can pair up to two multi-point devices. You can reconnect a previously paired device without going through the pairing or PIN process on up to two devices.

During use, the battery life of your earbuds is visible on your iPhone or iPad screen.

LISTENING TO MUSIC

Once the earbuds are paired to your device, you can stream music wirelessly to the earbuds. Select the track you wish to listen to on your device to listen via earbuds. Should you encounter any problems while streaming, please refer to your device's user manual.

USING FOR PHONE CALL

Answering a call

Press the multifunction button shortly to answer the incoming call.

Reject an incoming call

Press and hold the multifunction button for 2 seconds to reject the incoming call.

Ending a call

Press the multifunction button shortly to end a call.

Call-waiting

- If there is an incoming call while a call is in progress, press the multifunction button shortly to accept the waiting call and end current call.
 - If there is an incoming call while a call is in progress, press and hold the multifunction button for 3 seconds to accept the incoming call and place the current call on hold.
- *The same operation could be performed in case of Multi-connection.

Volume adjusting

Press the Volume Up and Volume Down button to adjust the volume

MANUAL KEY FUNCTIONS

Your earbuds are equipped with a few shortcut keys. Please note the following functions.

1. Increase Volume - Press the Vol + Button once

4

2. Decrease Volume - Press the Vol - Button once
3. Play/Pause - Press the Multifunction Button
4. Next Track - Press and hold the Vol + Button
5. Previous Track - Press and hold the Vol - Button

CARE AND MAINTENANCE

- Do not expose the earbuds to liquid, moisture, or humidity to avoid damage to the product's internal circuitry.
- Do not use abrasive cleaning solvents to clean the unit.
- Do not expose the earbuds to extremely high or low temperatures as this will shorten the life of the electronic device, destroy the battery, and/or distort certain plastic parts.
- Do not dispose of the earbuds in fire as they may explode or combust.
- Do not expose the earbuds to contact with sharp objects as this will cause scratches and damage.
- Do not let the earbuds fall from high places, as doing so may damage the internal circuitry.
- Do not attempt to disassemble the earbuds.

SPECIFICATIONS

| | |
|--------------------|-------------------------|
| Bluetooth Version: | 4.2 |
| Operation Range: | Up to 33 ft (10 Meters) |
| Talk Time: | Up to 2 hours |
| Play Time: | Up to 3 hours |
| Standby Time: | Up to 75 hours |
| Battery Capacity: | 60mAh |
| Charging Time: | Up to 1.5 hours |

5

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC INSTRUCTIONS FOR A CLASS B DIGITAL DEVICE OR PERIPHERAL

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

6