

尺寸：70\*95mm

材质：80g书写纸

双面印刷

红线为分割线（不打印显示）



# MINISO

## PRODUCT MANUAL


### Wireless Earbud X36

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE  
PRODUCT AND KEEP IT IN A SAFE PLACE.

# CATALOGUE

|                                     |    |
|-------------------------------------|----|
| 01 How to wear headphones correctly | 5  |
| 02 Product Introduction             | 9  |
| 03 Touch Operation                  | 12 |
| 04 Item list                        | 21 |
| 05 Warranty Statement               | 24 |


# Welcome to MINISO Wireless Earphones

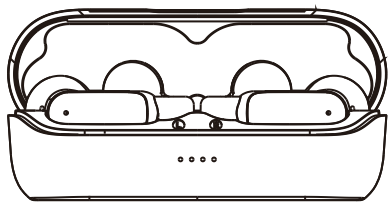


## Take out and pair it

When using for the first time, take out the left and right earphones at the same time. When the white light and red light of the earphones flash alternately, the earphones will enter the automatic pairing mode.


## How to wear headphones correctly

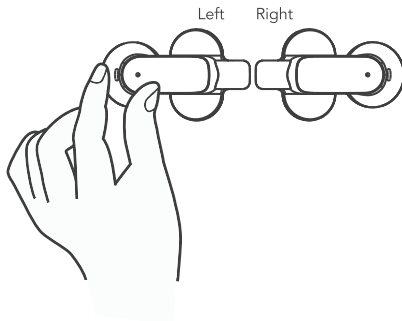


1

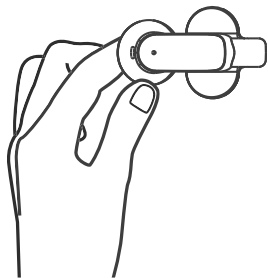

2

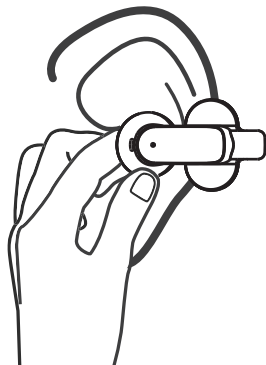


3

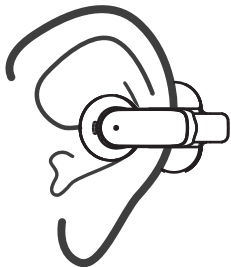

4

## Product Description


Bluetooth LED  
Display light


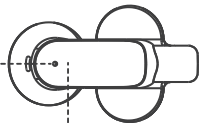


Multi function key  
touch position



   Charging Contacts





## Specification of Product

Model of Product: X36

Version: V5.4

Effective Distance: Approx. 10m

Speaker Diameter:  $\phi 13\text{mm}$

Impedance:  $32\Omega$

Frequency Respinse: 20Hz-20KHz

Microphone Sensitivity:  $-42\text{dB}\pm 3\text{dB}$

Earphone Input:  $5\text{V}\approx 50\text{mA}$

Charging Case Input:  $5\text{V}\approx 400\text{mA}$

Charging Case Output:  $5\text{V}\approx 100\text{mA}$

Earphone Battery Capacity: 50mAh

Charging Case Battery Capacity: 400mAh


Duration: Approx. 5.5 H (Earphone)

Earphone Charging Time: Approx. 1.5 H

Charging Time of the Charging Case: Approx. 2 H

## Touch Operation


### Connect with Bluetooth device

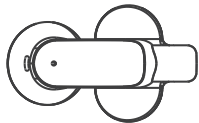

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the Bluetooth pairing name of the headset "MINISO-X36". Click the pairing name to pair.



## Indicator Light Description

 

· When the headset is turned on: the white light and the red light flash alternately

· When the headset is turned off: the red light quickly flashes and then goes out

· Pairing status: white light and red light flash alternately


· Connection successful: no light

· Headphone Charging: The Charging case indicator light is always white, and the headset red light is always on. The headphone indicator light turns off when fully charged, and the Charging case indicator light goes out at the same time.

· Charging of the Charging case:  
The white indicator light of the charging compartment flashes in a stepped manner; When the first white light on the left is constantly on, the battery level of the charging compartment is about 20% -30%, When the second white light on the left is constantly on, the battery level of the charging compartment is about 45% -55%, When the third white light on the left is constantly on, the battery level of the charging compartment is about 70% -80%, When the fourth white light on the left is constantly on, it indicates that the charging compartment is approaching saturation, After the charging compartment is fully charged, the charging compartment indicator light goes out.





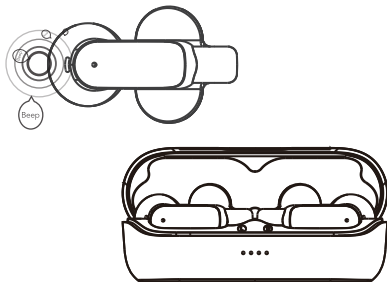

#### Power On

Auto power on: The Earphone are taken out of the charging case, the Earphone will be powered on, with the prompt sound of "Du".

Manual power-on: Long press for 3 seconds, the Earphone will be powered on, with the prompt sound of "Du".


#### Power Off

Auto power off: Put the Earphone in the charging case, the Earphone will be powered off, with the prompt sound of "Du".

Manual power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt sound of "Du".

Note: After turning on the device, if it is not paired and connected to the Bluetooth device for 3 minutes, it will automatically shut down; Exceeded the effective connection distance and did not connect to the Bluetooth device. After 3 minutes, it will automatically shut down with a beep sound.

## Once Press

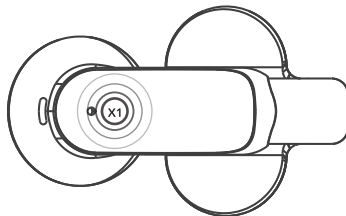

#### Music mode




Play/Pause

#### Phone mode



Call Answer/End

# Double Press

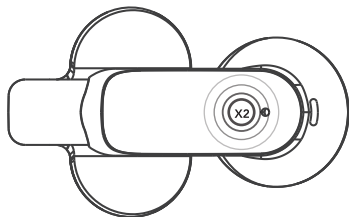

## Music mode




Double press the right ear:  
Volume up



Double press the left ear:  
Volume decreases

# Long Press

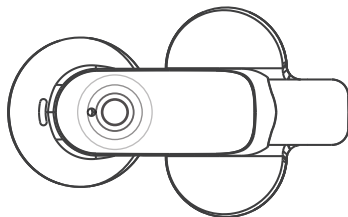

## Wake up voice assistant




When using both ears, press and hold the left ear multi-function button for 2 seconds to activate the voice assistant. When using one earphone, press and hold the left (or right) earphone for 2 seconds to activate the voice assistant

## Phone mode



Press and hold the left (or right) ear multi-function button for two seconds: call rejection

# Triple Press

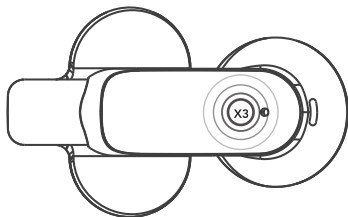

## Music mode




Triple press on the left ear:  
Previous song



Triple press on the right ear:  
next song

# Clear Bluetooth pairing history


When both ears cannot be paired, you need to clear **all** connected devices and click the left and right earphones 5 times at the same time.

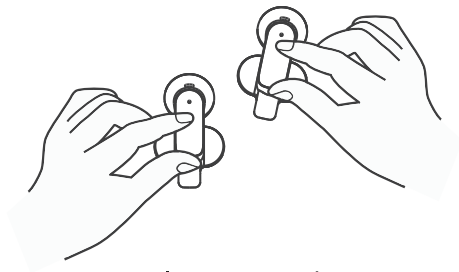

## Wireless pairing mode

1. When there is no pairing record for the left and right earphones, the left and right earphones will automatically pair after they are turned on. After successful pairing, there will be two beeps.
2. When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"

# Switch between game mode and music mode (Binaural operation)

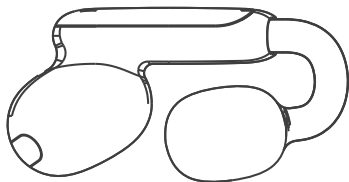

## Game mode



Press and hold the multi-function button on the right ear for 2 seconds

## Music mode




Press and hold again for 2 seconds


Note 1: When using one earphone, you cannot switch between game mode and music mode.

Note 2: The factory setting defaults to music mode

 
## Item list




Headphones \*1

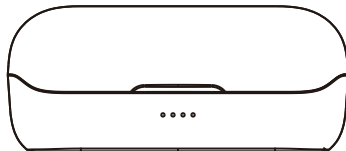

Charging case \*1

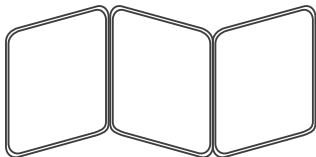

**Instruction \*1**

 

**Charging cable \*1**

## FCC ID: 2BHJR-X36

### FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### \*RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## US REP

Company name: REP America LLC  
 Address: 1942 Broadway St. STE 314C, Boulder,  
 CO 80302, United States  
 Contact Person: Ben Xu  
 Email: d.zeng@rep-europe.de  
 ContactPhone: (719) 201-3314

## Warranty statement

### MINISO product warranty card

|                        |                |         |               |  |
|------------------------|----------------|---------|---------------|--|
| Product number         |                |         | SN number     |  |
| User info              | name           |         | Purchase date |  |
|                        | telephone      |         |               |  |
|                        | address        |         |               |  |
|                        | Invoice number |         |               |  |
| Sales unit information | name           | (stamp) |               |  |
|                        | address        |         |               |  |
|                        | telephone      |         |               |  |

## The above guarantee does not apply to the following situations

1. The validity period of the three guarantees has exceeded;
2. Altering of the warranty cards and product code do not match the product itself;
3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;
4. Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
5. Zippers and tower buckles are damaged due to excessive force;
6. Off-line or tear caused by overloading;
7. Any damage caused by sharp objects;
8. Products with signs of burn damage or water logging;
9. Damage caused by unauthorized dismantling and modification;
10. Aging, discoloration, wear, cracking and other losses that occur during normal use of the product.
11. If the product's original logo or label is changed or damaged, this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any discrepancies.

## MINISO Product service policy

If you encounter a problem, please contact our customer service to solve it.

After-sales email: [7@hifi-earphone.com](mailto:7@hifi-earphone.com)



## Warranty Policy

### Disclaimer:

This manual does not come with any form of warranty, position expression or other implication. The products, specifications and information mentioned in this manual are for reference only, and the content will be updated on the website at any time without prior notice.

### Warranty statement:

The following guarantee is made for the products attached to this document: If the product is damaged due to quality defects under normal use within twelve (12) months from the date of your purchase (the "Warranty Period"), and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue to be covered by the warranty for the remaining warranty period (a minimum of not less than 30 days). The purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, the warranty period shall be calculated as thirteen (13) months from the product production date.

If you want to apply for warranty, please call the product service hotline first and follow our instructions. When applying for a warranty, you are required to provide a valid sales invoice that is accurate, complete and clearly filled out.

# Guidelines for safe and effective use

Note: Please read this information first before using your Bluetooth headset. If the user makes modifications or modifications to this Bluetooth headset without permission, the user will lose the right to continue to enjoy the services included in the device

## ① Electromagnetic interference:

**Electronic devices:** To avoid the effects of electromagnetic interference or configuration incompatibility, please turn off your Bluetooth device in accordance with regulations in places with clear instructions.

**Civil Aviation:** After boarding the plane, please turn off your Bluetooth headset according to the flight attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

## ② Safety matters:

**Placement:** It is recommended that when you are not using the Bluetooth headset, place it in a place where it will not be squeezed. Squeezing may cause damage to the product or personal injury.

**Children:** Do not let children play with Bluetooth headsets. Some of the small parts are detachable and may be swallowed and cause danger.

# Important safety tips

● Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product.

● This product contains a built-in rechargeable battery. It is prohibited to hit, squeeze, puncture, or short-circuit the battery. If there are abnormal phenomena such as excessive temperature, deformation, bulging, or leakage, please stop using it. Do not expose the battery to open flames or sunlight. Do not use the battery after it has been immersed in water or in high-temperature or high-pressure environments such as the sun, heaters, or stoves. After using the earphones, do not place the earphones in a humid, dusty, oily smoke, steam, direct sunlight or other high-temperature and high-pressure environment to avoid damage to the earphones and battery. The battery can be charged and discharged for a limited number of times and will eventually age. If the battery is used abnormally, it can be replaced with a new one. However, do not replace the battery by yourself. If the battery is not replaced properly, there is a risk of explosion. It can only be replaced by an after-sales service provider of the same or equivalent type. battery usage.


● After the product is used and scrapped, do not throw the product into a fire. The waste should be disposed of in strict accordance with the garbage classification. Please use this product reasonably and correctly to avoid causing certain injuries and environmental damage.

● During the use of headphones, due to long distances, obstacles in the middle, or a series of interferences such as other radio signals, Bluetooth signals, WIFI signals, etc., the headphones are used when listening to music, watching videos, playing games, etc., there will be occasional lags, voice out-of-sync or disconnection. If this happens, please reconnect the headphones or stay away from interference.

● When charging, please use a charging device with an output voltage of DC 5V/1A. You must choose a charging device from a regular manufacturer that has obtained CCC safety certification. Do not use a fast-charging charger to avoid excessive battery load, which may cause the battery to be damaged. Do not charge continuously for longer than the specified charging time. Do not use it while charging to avoid damage.



# Enjoy the company of MINISO

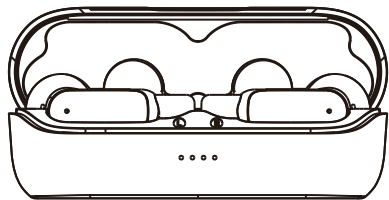

Copyright©2024 MINISO Group affiliated  
companies and its licensors. All rights reserved

Creating sound  
to live with