


产品概述

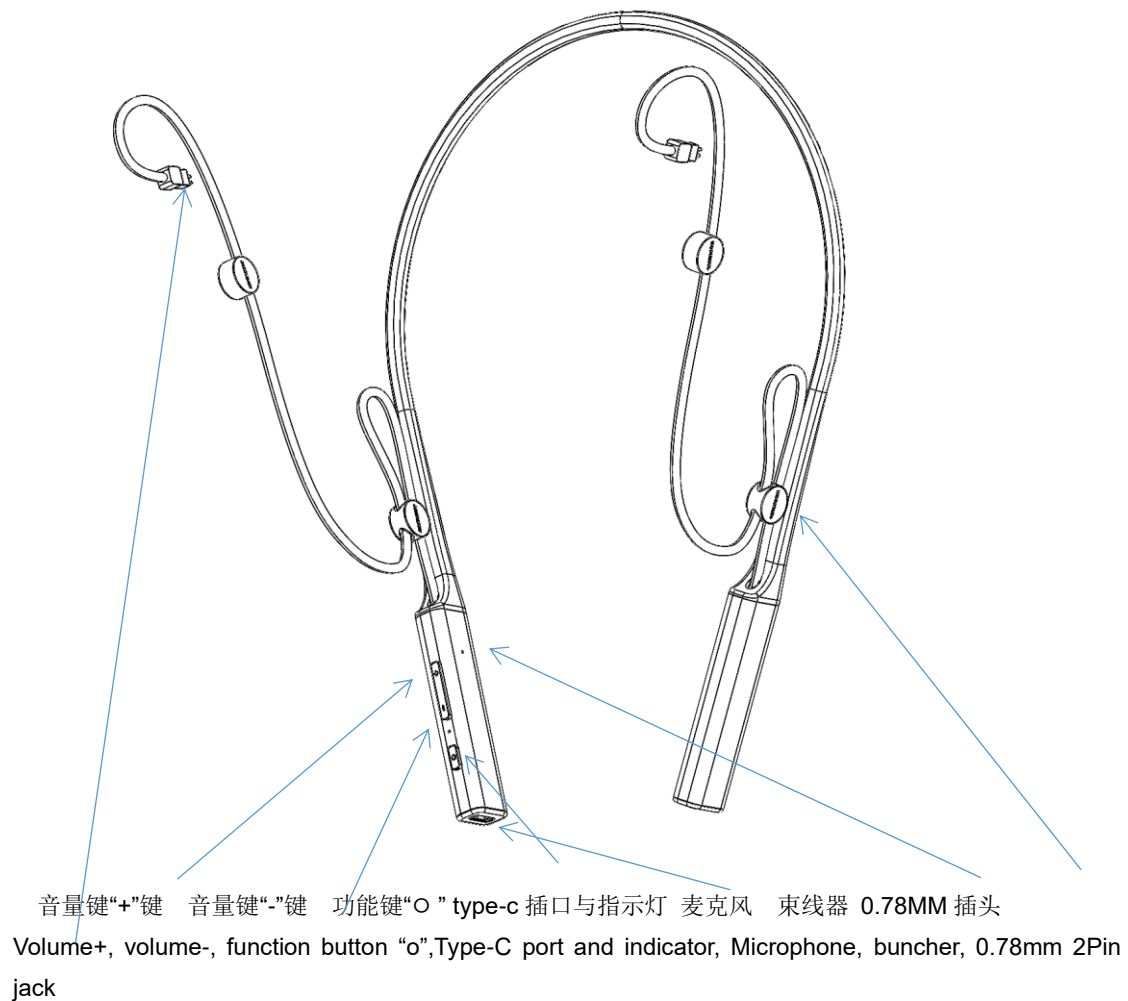

开/关机

- 1: 开机: 长按“o”键, 指示灯显示白灯并常亮 2 秒, 同时听到提示音“power on”即为开机成功。
- 2: 关机: 在开机状态下, 长按“o”键, 指示灯显示橘色并常亮 1 秒, 同时听到提示音“power off”, 即为关机成功。

Turn on/Turn off

- 1: Turn on: Long press the button “o”, the indicator will show white for 2s, meanwhile, you will hear the prompt “power on”
- 2: Turn off: Long press the button “o” when it turns on, the indicator shows orange for 1s, at the same time, you will hear the prompt “power off”

连接设备

- 1: 开机成功后, 进入配对模式并同时听到提示音“paring”。指示灯为呼吸模式, 指示灯为橘灯、白灯交替闪烁, 直到提示“Paring failed”灯光熄灭。配对时间 2 分钟, 2 分钟后熄灭
- 2: 手机/平板/电脑等电子设备开启蓝牙功能并搜索新设备, 与名为【LittleWhite】的蓝牙设备进行配对。当看到指示灯快闪两次, 耳机里传出“Connected”即配对成功。

注意: 若 5 分钟内没有设备与其配对, 自动关机。

- 1: After turning on, the device enters pairing mode and you will hear the prompt “paring”, the indicator will

alternately flash orange and white till the light of "pairing failed" disappears. Pairing time last for 2 minutes, and the indicator goes out after 2 minutes.

2: Turn on the Bluetooth function of mobile phones/tablets/computers and other devices and search for new devices, and pairing with the Bluetooth device "LittleWhite". You will hear the prompt "connected" after the indicator flashes twice.

Tips: If no device is paired within 5 minutes, it will automatically turn off.

自动回连

耳机关机且手机已有连接记录，开机后进入配对模式 10 秒内自动连接上次配对设备。

Automatic reconnection

When it is turned off and had been connected with device, it will automatically connect the previous paired device within 10s after turning on.

超距离断开自动回连

已连手机，离开有效通信范围会断开连接，在 5 分钟内，重新进入有效通信范围时会自动回连手机。

若耳机不能与设备自动回连，需在设备的蓝牙界面手动连接。

Over-distance disconnection automatic reconnection

The connected smartphone will be disconnected if beyond the effective working distance, and the smartphone will be automatically re-connected when it backs the effective working distance within 5 minutes.

It needs to be connected manually in the Bluetooth list if the device can't be automatically re-connected.

断开当前配对设备

在确认配对成功的状态下，同时长按"+" "-"键 4 秒。成功断开连接后，随后进入配对模式，断开后指示灯为橘灯、白灯交替闪烁，直到提示"Paring falied"灯光熄灭。

Disconnect the paired device

Long press the "+" and "-" for 4s when it's paired successfully. It will be entering the pairing mode after disconnecting, the indicator alternately flashes the orange and white till the light of "pairing failed" disappears.

恢复出厂设置

打开手机蓝牙已配对设备列表，删除已配对设备 "LittleWhite"，连续四次点击"O"键，清除与手机配对信息，指示灯显示白灯长亮一秒，即为恢复出厂设置完成。之后进配对模式，橘灯、白灯交替闪烁，直到提示"Paring falied"灯光熄灭。

提示：由于蓝牙信号的连接特性，在 2.4GHZ 的电磁信号干扰密集的地方，可能偶尔有间歇性断联或无声的情况。

Restore factory settings

Open the Bluetooth paired device list, delete the paired LittleWhite, then click "o" for four times to clean the pairing information, the indicator will show white for 1s to restore factory settings. Then it will enter the pairing mode, the indicator alternately flashes orange and white till the light of "pairing failed" disappears.

Tips: Due to the connection characteristics of Bluetooth signal, there may be intermittent disconnection or silence occasionally in place with dense electromagnetic signal interference at 2.4GHZ.

充电

在电量低于 20%时，橘灯每 10 秒快闪一次，且在每次低电量开机时“Battery low”提示音一次。

注意：使用时进入低电量状态也只提示一次。

充电需要连接连接电源，橘充电时橘灯呼吸 60 秒

充电完成，白灯长亮。

低电量，橘灯每 10 秒快闪一次。

Charging

When the power is lower than 20%, the orange indicator flashes every 10s, and the prompt of “battery low” will be heard under low battery when turning it on!

Tips: It only shows once for low battery when using.

The orange indicator breathes for 60s when charging

The white indicator is on after fully charging

The orange indicator flashes every 10s for low battery.

功能描述

1: 播放/暂停音乐，已经连接手机设备并播放音频时，按“○”键。

加大音量减少音量，播放音乐时，长按“+”或“-”键。

上一曲下一曲，播放音乐时，双击“+”或“-”键。

2: 接听，来电时，单击“○”键可接听电话。

拒接，来电时，双击“○”键可拒接电话。

挂断，通话中，单击“○”键可挂断电话。

3: 非通话状态下，双击“○”键启动 siri。

siri 状态下，单击“○”键关闭 siri

Function introduction

1: Play/pause. Press the button "o" when the mobile phone device is connected, long press “+” and “-” for adjusting the volume

Double click “+” or “-” for “previous/next song”

2: Answer, Click “o” to answer a call

Reject, double click “o” to reject a call

Hang up, click the "o" to hang up a call

3: Double click to call Siri under non-calling

Click “o” to close Siri

产品参数

产品型号: LittleWhite

蓝牙版本: 5.2

支持协议: A2DP/AVRCP/HFP/HSP

音频编解码协议: SBC/AAC/aptX/aptX-HD/aptX-Adaptive/LHDC

充电端口 Type-C

工作距离: 15 米 (无障碍空旷环境)

Specifications

Model: LittleWhite

Bluetooth version: 5.2

Protocol: A2DP/AVRCP/HFP/HSP

Codec protocol: SBC/AAC/aptX/ aptX-HD/ aptX-Adaptive/LHDC

Charging port: Type-C

Working distance: 15m (barrier-free open environment)

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.