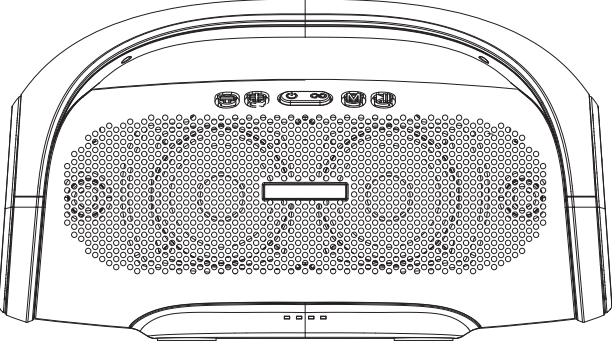
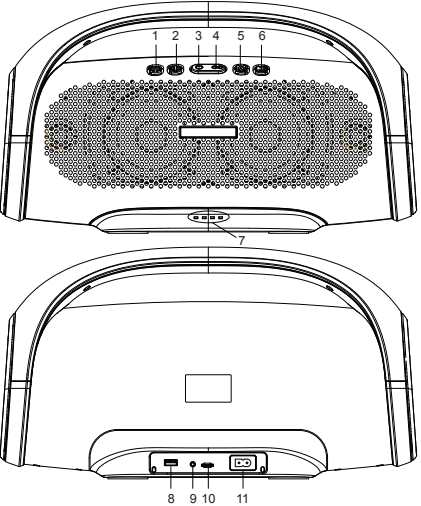



<div><div><div>FOL</div><div>Protable Wireless Speaker System</div><div>Model: FS-R206</div><div>Operation Manual</div></div><div></div></div>	<div>DECRPTION OF PLAYBACK PANEL</div> <div></div> <div>Use of each key</div> <div><div>1. "-": Briefly press the previous song. In FM mode, press this button briefly to point to the previous channel; Pressing them within a few seconds decreases the volume.</div><div>2. "+": Short press the next song, and in FM mode, use this button to short press the next channel; Press it for a few seconds and they will turn up the volume.</div><div>3. "⏻": Press in a few seconds to open or close.</div><div>4. "🔗": Short press to start pairing TWS, press for a few seconds to disconnect TWS, and long press to disconnect Bluetooth.</div></div>	<div><div>5. M: Press this button to directly enter the Bluetooth mode, then press to enter the USB-SD-FM-Line mode, and then press to return to the Bluetooth mode. In any mode, inserting a USB flash drive will be a priority. If the USB flash drive and TF card are inserted at the same time, they will be inserted later and play first.</div><div>6. ►  : Short press Continue/Stop. In FM mode, short press Mute. Long press will automatically search the channel. In the process of channel search, short press will stop the search.</div><div>7. Battery indicator</div><div>8. USB: usb input.</div><div>10.TF: TF card input</div><div>11.Power input 100-240V</div></div> <div>Bluetooth connectivity</div> <div><div>1. Turn on the power switch to automatically enter the bluetooth mode.</div><div>2. Switch on the Wireless Bluetooth connection function of Mobile phone and searching, while the Mobile phone shows “CNON-XXL”,click the connect directly. Mobile phone connection do not need password,if need password, please input “0000” to go on pariring. After successpairing, the speaker will send out a voice of prompt. it is success pairing between mobile phone and wireless Bluetooth connection speaker.</div></div>	<div><div>3. Play the music of your mobile phone directly and will give out beautiful voice from speaker.</div></div> <div>SPECIFICATIONS</div> <div><div>Speaker Size: 4"x2+0.5"x2</div><div>Frequency Response: 40Hz - 20KHz</div><div>S/N Ratio:≥78dB</div><div>Output Power: 30Wx2</div><div>Power: 100-240V 50/60Hz</div><div>Battery Capacity:14.8V 3000mAh</div></div> <div>Attachment</div> <div><div><div>Audio cable</div><div>1 pc</div></div><div><div>Power cord</div><div>1 pc</div></div><div><div>Instruction manual</div><div>1 pc</div></div><div><div>Warranty Card</div><div>2 pcs</div></div></div>
---	--	--	--

<div>Important Safety</div> <div></div> <div><div><div>⚡</div><div>The lightning fash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of the device that may be of sufficient magnitude to constitute a risk of electric shock to persons.</div><div><b>Warning:</b> To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.</div></div><div><div><div>⚠</div><div><b>WARNING:</b> To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.</div><div><b>WARNING:</b> Where the mains plug/appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.</div><div><b>WARNING:</b> The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like. Read these instructions before operation. Keep these instructions for future reference. Follow all instructions for installation, use and maintenance of the device. To clean the device, disconnect power first. Clean only with soft and dry cloth. To ensure compatibility, only use accessories recommended by the manufacturer. When the device is suddenly moved from cold to warm surroundings, condensation may form in the housing of the device. Before use, leave the device in the warm environment until the moisture</div></div></div></div>	<div>evaporates. Keep the device away from heat sources, such as a radiator, heater, oven, amplifier, naked flames or direct sunlight. No naked flame sources, such as lighted candles, should be placed on the apparatus. Never block any ventilation openings. Install in accordance with the manufacturer's instructions. Do not expose the device to sand or dust, or cover it with items, such as newspapers, tablecloths, or curtains. Do not operate the device in an enclosed cabinet. Leave sufficient free space around the device for adequate ventilation. Do not attempt to repair or service the device yourself. Opening or removing the cabinet may expose you to electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel. Do not use the device if any abnormality occurs. If any smoke or odor becomes apparent, contact your dealer immediately. Do not try to repair the device yourself. Avoid using dropped or damaged appliances. If the device is dropped and the housing is damaged, the internal components may not function normally. Stop use and contact your dealer for repair. Continued use of the device may cause fire or electric shock. To reduce the risk of electric shock, do not touch any connector with wet hands. Never remove the housing of the device. Never lubricate any part of the device. Never place the device on top of any other electrical equipment.</div> <div><input type="checkbox"/> This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.</div> <div><b>Notice Modification</b> Any modification (such as removing the speaker grill) to the device, without prior authorization from the manufacturer, may void your warranty and authority to operate the device.</div>	<div>FCC Statement</div> <div><b>Warning:</b> Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</div> <div><div>NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</div><div><div>• Reorient or relocate the receiving antenna.</div><div>• Increase the separation between the equipment and receiver.</div><div>• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.</div><div>• Consult the dealer or an experienced radio/TV technician for help.</div></div><div>The device must not be co-located or operating in conjunction with any other antenna or transmitter.</div></div>	
---	--	--	--