



# MG-X PRO

ERGONOMIC • WIRELESS • UNIVERSAL

## Thank you for purchasing this NACON® product.

This product has been designed to enhance your gaming experience. Please keep this user manual in a safe place for future reference.

### I **Warranty**

To access the declaration of conformity, please go to:  
[www.nacongaming.com](http://www.nacongaming.com)

### I **Product features**

Nacon MG-X Pro controller for Android phones  
Asymmetrical joysticks  
Built-in battery, rechargeable via USB-C  
20 hours of battery life  
Compatible with Android 6.0 and later  
Bluetooth connection to your smartphone (Bluetooth 4.2+BLE)  
Universal compatibility up to 6.7"  
Maximum opening size 163 mm

### I **Package contents**

Nacon MG-X Pro controller for Android phones  
80 cm USB-C cable  
Quick IB  
Quick start Guide  
Garantie  
Precautions for use  
Regulatory compliance information

## Control elements



## Turning the controller on/off

To turn on the controller, simply press the Nexus button, and the controller will connect to the last phone it was synced with.

To turn off the controller, simply hold down the Home button for 6 seconds.

*Please note: the controller turns off after 15 minutes of inactivity to save battery power.*

## Syncing your Android phone with the Nacon MG-X Pro controller

Go to the Bluetooth menu on your phone and start a Bluetooth device search.

Press the Nexus button on your controller, and the player indication LED should start flashing steadily.

Press and hold the Bluetooth button on the lower right-hand side for 3 seconds to initiate pairing. The player indicator LED should start flashing rapidly.

On your phone, you should see the controller appear under the name 'Nacon MG-X Pro', select it and wait until the controller is in the list of paired devices.

## Low battery indicator

When the battery is low, the battery LED flashes red slowly.

When the battery is very low, the battery LED flashes red quickly.

## Recharging the controller

The wireless controller is equipped with an internal battery. To charge this battery, take the USB-C cable that comes with the controller and plug it into the charging socket/port (located below the D-pad). Then plug the other end into one of the free USB ports on your PC. The Red LED will stop flashing. Once recharged, the LED will turn green and turn off when the cable is unplugged.

## I Compatibility

The Nacon MG-X Pro controller allows you to play on Microsoft's cloud gaming service. An Xbox Game Pass subscription is required to access the gaming service.

The Nacon MG-X Pro controller is compatible with Android games that support controllers.

*Warning: This controller is not compatible with Apple products.*

## I Positioning your phone

When using your phone with the Nacon MG-X Pro controller, please place your phone in the dedicated slot to secure your device.

*Please note: If your phone has a case, it may keep your phone from correctly fitting into the dedicated slot. In this case, to avoid dropping your phone, it is best that you remove your phone case.*

## Recycling



Do not dispose of this product with the household waste. Dispose of your old electrical appliance at a suitable collection centre. Recycling is important and helps protect the environment by reducing waste. EU and Turkey only.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

## I Important precautions

1/ This product is designed for indoor use only. Do not expose it to direct sunlight or bad weather.

2/ Do not expose the product to splashes, rain, drips or moisture. Do not immerse it in liquid.

3/ Do not expose it to dust, high levels of humidity, extreme temperatures or mechanical shocks.

4/ Do not use and do not open if the equipment is damaged. Do not attempt to repair it.

5/ When cleaning the outside, only use a soft, clean, damp cloth. Detergents can damage the finish and get inside the product.

6/ Never carry the product by holding it by the cables.

7/ This product is not intended for use by people (including children) suffering from a physical, sensory or mental disability, or by users without the necessary and relevant

experience or knowledge (unless they have been given advice and instructions beforehand on how to use the device from a person responsible for the user). Do not leave the product unattended, do not leave this product within the reach of children.

Not suitable for children under the age of 7 (the cable can get wrapped around their neck).

## I Precautions for use regarding the battery

- If your product has a built-in, non-replaceable battery, do not attempt to open the product or remove the battery, as you may damage the product and/or injure yourself.
- If your product has a built-in replaceable battery, only use the type of battery supplied by Nacon/RIG. Used batteries should be removed promptly and taken to appropriate collection centres.

**RECYCLING:** *The product battery should be recycled or disposed of in the proper manner. Contact your local recycling centre for instructions on battery removal and disposal.*

When not in use

When the controller is not used for an extended period of time, it is recommended that you fully charge it at least once a year in order to maintain its functionality.

### **WARNING: Risk of fire, explosion and burns.**

- Do not leave your charged battery for an extended period without the product being used
- Prevent metal objects such as keys or coins from coming into contact with a battery or its holder.
- Do not attempt to open or damage the battery. It may contain corrosive products which are dangerous if they come into contact with eyes or skin and are toxic if ingested.
- Never put a battery in your mouth. If ingested, contact a doctor or poison control centre.
- If the product contained in the battery comes into contact with your clothes, skin or eyes, please wash thoroughly with clear water and contact your doctor immediately.
- Always keep batteries out of the reach of children.
- Never throw a battery into a fire or oven; crushing or cutting a battery may cause an explosion;
- A battery should not be subjected to extremely high or low temperature, low air pressure at high altitude during use, storage or transportation, as this may cause an explosion or leakage of flammable liquid or gas

The battery has a limited lifespan. Battery charge duration gradually increases with repeated usage and age. Battery life also varies depending on the storage method, usage state, environment and other factors.

Charge in an environments where the temperature range is between 10°C-30°C. Charging may not be as effective when performed in other environments.

Battery duration may vary depending on the usage condition and environmental factors.

## I Ergonomics

Keeping your hand in the same position for a prolonged period of time can result in pain. If this happens repeatedly, please consult your doctor.

As a precaution, take a 15-minute break every hour.

## **| Technical specifications**

- Dimensions: 185 x 94 x 35 mm
- Cable length: 80 cm
- Consumption: 5V --- 500mA
- --- : DC power supply
- Battery life: 20 hours
- Charging time: >2 hours
- Battery capacity 600mA
- The maximum operating temperature of the controller is 35°C
- Information on the emission power of the product:
  - Frequency band: (TBC ~ TBC) GHz
  - Maximum radio frequency transmission power: TBC dBm lever

## **| Technical Helpline Information**

**Email:** [support@nacongaming.com](mailto:support@nacongaming.com)

**Website:** [www.nacongaming.com](http://www.nacongaming.com)

## **| Legal Notices**

Windows™ 10 is registered trademark of Microsoft Corporation.



WWW.NACONGAMING.COM

 @NaconGaming  Nacongaming  Nacon International