



Smart Air Fryer User Manual X1S



Please read all the instructions before using and keep it for future reference.

V1.01



CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	01
KNOWING YOUR AIR FRYER	03
AIR FRYER	03
GETTING STARTED	04
USING YOUR AIR FRYER	05
OVERHEAT PROTECTION	12
COOKING TIPS	12
USER GUIDE FOR AIDOT APP	13
APP Downloading and Installation	13
APP Registration and Login	13
CONNECTION MODE	14
MAINTENANCE AND CARE	14
IMPORTANT:	14
PACKING LIST	16
TROUBLESHOOTING GUIDE	17
WARRANTY POLICY	18
The Guaranteed conditions	18
The Guarantee does not cover	18
After sales service	18

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions prior to using the air fryer and its accessories.
- To eliminate a choking hazard for young children, discard all packaging materials immediately upon unpacking.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Take inventory of all contents to ensure you have all parts needed to properly and safely operate your air fryer.
- NEVER leave the air fryer unattended while in use.
- NEVER use outlet below counter.
- DO NOT let cord hang over edges of tables or counters or touch hot surfaces, including stoves and other heating air fryers.
- Keep the appliance and its cord out of reach of children.
- DO NOT allow the appliance to be used by children. Close supervision is necessary when used near children.
- DO NOT use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or becoming entangled and to reduce the risk of people tripping over a longer cord.
- DO NOT place any object directly onto the heating elements and DO NOT cover any part of the air fryer with metal foil. This will cause the air fryer to overheat or cause a fire.
- To protect against electrical shock DO NOT immerse cord, plugs, or main unit housing in water or other liquid.
- DO NOT use the air fryer with damage to the power cord or plug. Regularly inspect the air fryer and power cord. If the air fryer malfunctions or has been damaged in any way, immediately stop use and call Customer Service.
- DO NOT cover the air intake vents or air outlet vents while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.
- DO NOT insert anything in the intake and ventilation slots and DO NOT obstruct them.
- DO NOT use accessory and attachments not recommended or sold by the Designated supplier.
- DO NOT place items on top of surface while unit is operating except for authorized recommended accessories.
- Before placing any accessories into the air fryer ensure they are clean and dry.
- Intended for countertop use only. DO NOT place the air fryer near the edge of a countertop. Ensure the surface is level, clean and dry.
- This air fryer is for household use only, DO NOT use outdoors. DO NOT use in moving vehicles or boats.
- DO NOT use this air fryer for anything other than its intended use. Misuse may cause injury.
- DO NOT store any materials, other than supplied accessories, in this air fryer when not in use.
- When using this air fryer, provide adequate space above and on all sides for air circulation.

- A fire may occur if the air fryer is covered or touching flammable material, including curtains, draperies, walls, or the like when in operation. DO NOT place anything on the air fryer during operation.
- DO NOT use the unit without the pot installed. Ensure food residue are removed and the tray is cleaned before each use.
- DO NOT use the air fryer without the Sear Plate, wire rack, or air fry basket installed.
- DO NOT spray any type of aerosol spray or flavoring inside the air fryer while cooking.
- Use caution when inserting and removing anything from the air fryer, especially when hot.
- Voltages can vary, affecting the performance of your product. To prevent possible illness, use an external thermometer to check that your food is cooked to the temperatures recommended. Prevent food contact with heating elements. Excessive food loads may cause personal injury or property damage or affect the safe use of the air fryer.
- DO NOT place any of the following materials in the air fryer: paper, cardboard, plastic, roasting bags and the like.
- Extreme caution should be exercised when using containers constructed of any materials other than metal or glass.
- DO NOT touch hot surfaces. Air fryer surfaces, especially the Sear Plate, are hot during and after operation. To prevent burns or personal injury, Always use protective hot pads or insulated air fryer mitts and use available handles and knobs.
- Spilled food can cause serious burns. Extreme caution must be used when the air fryer contains hot food. Improper use may result in personal injury.
- Please refer to the Cleaning & Maintenance section for regular maintenance of the air fryer.
- Cleaning and user maintenance shall not be made by children.
- Press the power button to turn air fryer off and allow to cool completely before cleaning, moving and flipping for storage.
- Unplug from outlet when not in use. To unplug, grasp the plug by the body and pull from the outlet. Never unplug by grasping and pulling the flexible cord.
- DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, causing a risk of electrical shock.
- DO NOT use the air fryer as a source of heat or for drying. on the plug blade. The entire supply cord is not suitable for replacement. If damaged, please contact us for service.
- DO NOT place appliance on a stovetop or hot surfaces or near gas or electric burner or in a heated air fryer.
- This appliance has important markings.



Indicates to read and review instructions to understand operation and use of product.



Indicates the presence of a hazard that can cause personal injury, death or substantial property damage if the warning included with this symbol is ignored.



Take care to avoid contact with hot surface. Always use hand protection to avoid burns.




For indoor and household use only.

SAVE THESE INSTRUCTIONS


KNOWING YOUR AIR FRYER

AIR FRYER

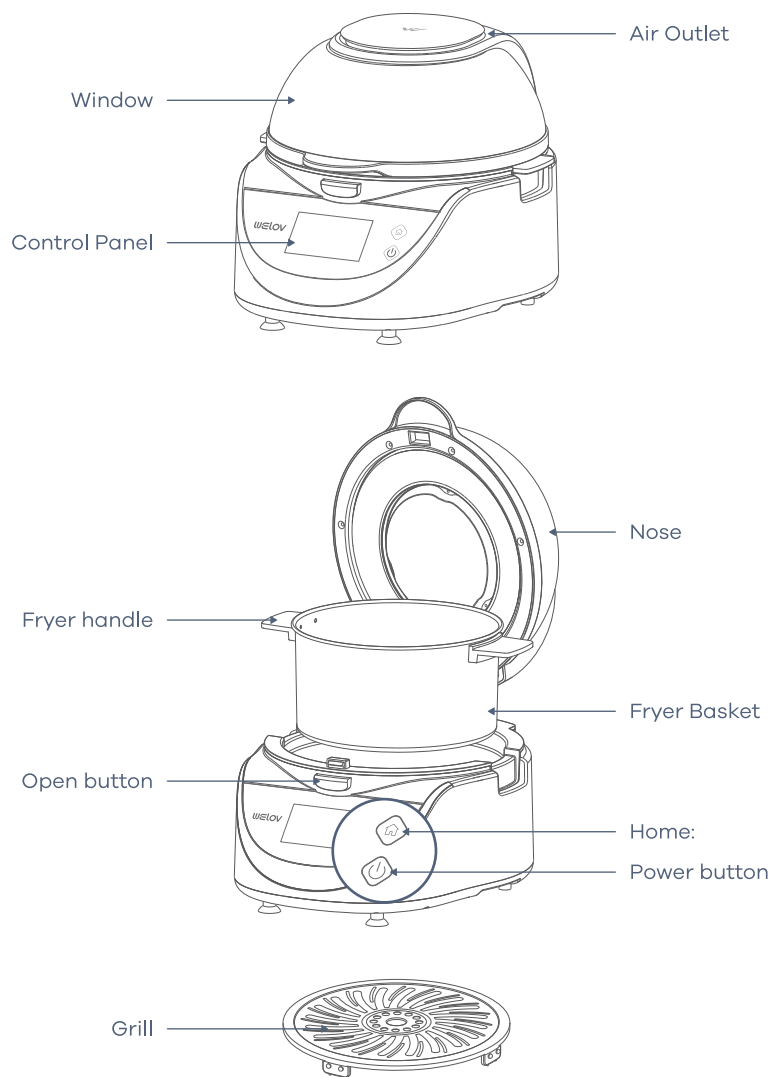


GETTING STARTED


- 1 Remove all the packaging materials, stickers and labels from the air fryer.
- 2 Draw out the **Fryer Basket**; wash the **Fryer Basket** and the **Crisper Plate** in warm, soapy water or in a dishwasher, then rinse and dry thoroughly.

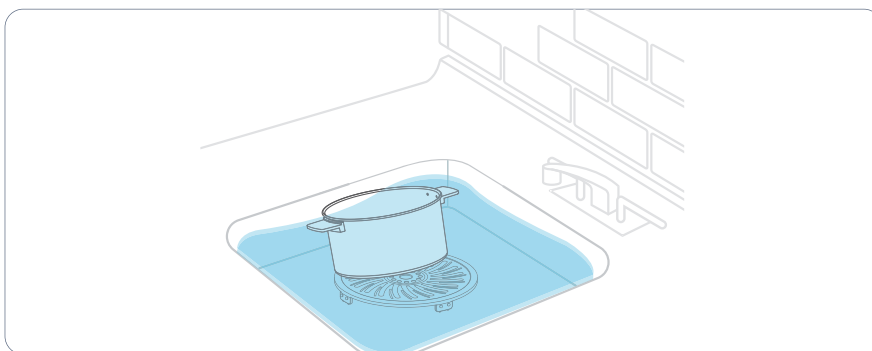

- 3 Place the **Crisper Plate** into the **Fryer Basket**, then push back the **Fryer Basket** into the air fryer.

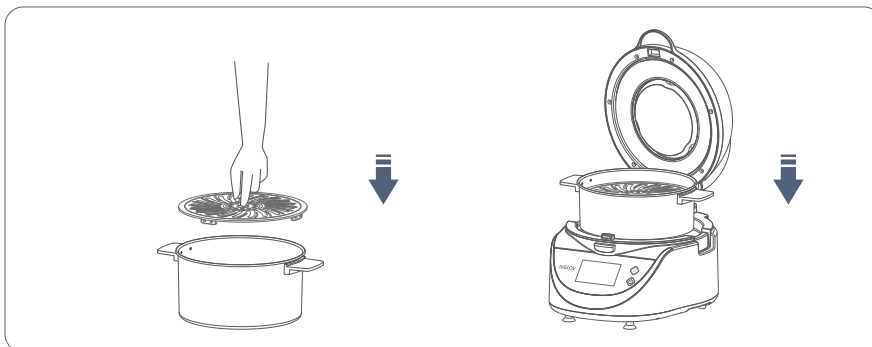

- 4 Place the air fryer on a stable, level and heat-resistant surface. Keep it away from places that can be damaged by steam.

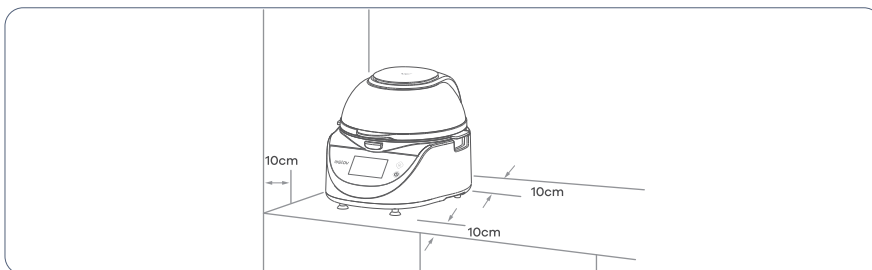

Note:

This product must be placed at a distance of more than 85cm from the ground. During normal use, air must be circulated around the product. The top of the product should be kept open, and no obstructions should be placed. The left and right walls should be left with a gap of more than 10cm, and the rear wall should be kept. A gap of more than 10cm, do not block the ventilation openings, keep the use environment clean, and prevent cockroaches and other reptiles from entering the cavity.


- ❶ Do not block the exhaust port, otherwise it may cause product failure, please maintain it frequently to avoid garbage and dust blocking the exhaust port.
- ❷ Please do not place the product in a place with high temperature and humidity, such as a gas stove, a live area or beside a sink, etc.
- ❸ The product must be placed flat.
- ❹ If the indoor humidity is too high, this product cannot be used.
- ❺ Do not let the lid of the product bear excessive pressure.

USING YOUR AIR FRYER

POWERING ON

Step 1:

Plug the air fryer into the outlet and you will hear a "beep". The button and the screen will light up, and the text pop-up window will pop out after the screen animation. After a countdown of 3 seconds, it will automatically enter the Home interface;

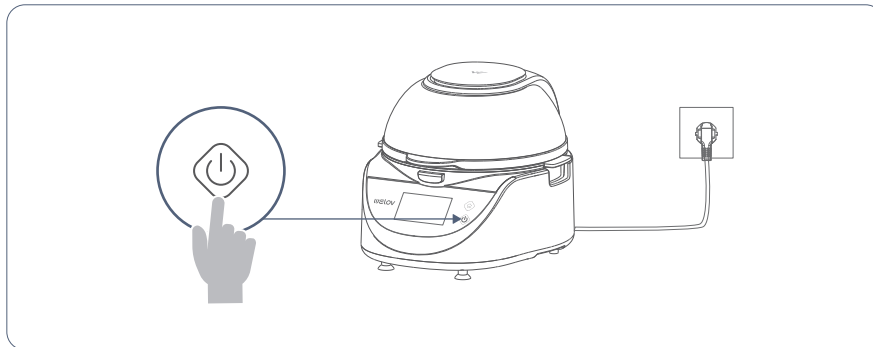**Step 2:**

According to your needs, choose the functions you need;

Note:

- Click to return to the Home interface.
- By default, long press for more than 3s to power off, and click to power on when power off.
- In the non-working state, if there is no operation for 3 minutes, it will enter the standby mode.

PREHEATING

Step 1:

Enter the **AUTO** interface, click the **PREHEAT** button, the machine beep 1 times and starts to start;



Step 2:

The default preheat temperature is 400°F; the default preheat time is 3MIN. Customize the temperature and time according to your needs.



Note:

- For the first use, We strongly recommend selecting the Preheat program to preheat your air fryer for 30 minutes in a ventilated space to remove strange odors.
- For daily use, we recommend preheating your air fryer for 3-8 minutes before each cooking.

Step 3:

When there are only 2 seconds left in the preheating time, the air fryer will beep 3 times, and then a pop-up window will indicate that the preheating is complete.

SELECTING PROGRAMS

HOME

Step 1:

You can choose your favorite recipes from **Meat/Potatoes/Seafood/Vegetables/Desserts** to cook.




Tip:

You can also quickly search for your favorite recipes for cooking according to the search box in the upper right corner.

Step 2:

Click on **Meat**, choose your favorite recipe, click **Start**.

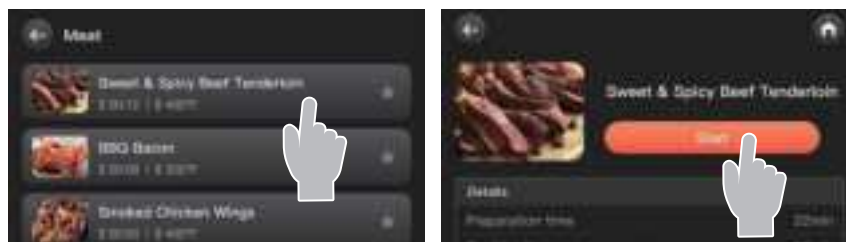

Tip:

For a more delicious taste of the food, please read the recipe steps carefully before clicking Start.

Step 3:

- 1 Click **Make** to execute the current step and enter the current step interface.
- 2 Click **||** current step paused, click **■** stop current step, click **✓** Go to the next production step



Note:

- Click the "Next step" button to browse the next step, click the "Previous step" button to return to the previous step, when it is in the first step, the "Previous step" button is grayed out and cannot be clicked, and when it is in the last step, the "Next step" button is grayed out can't clic.
- Step A/B, A represents the first step in the recipe/B represents the total steps of the recipe.
- Click **🏠** to return to the Home interface.
- Click the floating box **03:00 | 400°F** to enter the operation page of the current step. If there is no operation step, there will be no floating box.
- There is a "Current Step" prompt above the current execution step.

Step 4:

The current step is completed, click the **✓** button to enter the next step operation interface.

Step 5:

Repeat step 3 until the recipe is completed, click OK to return to the Home interface.

Tip:

- The recipe is finished, please use it carefully so as not to get burned.
- For more delicious taste of food, please take out the basket and shake the food when necessary.

Step 6:

- 1 When not in use for a long time or going out, please turn off the power first. After turning it off, unplug the power cord, otherwise failure or danger may occur.
- 2 After use, it is necessary to clean the fryer and grill to prevent the remaining powder residue, oil stains, etc. from smoking or catching fire during the next baking.
- 3 After cleaning, be sure to dry all parts, especially the heating coil.

AUTE

Step 1:

You can select the program you want from **DEFROST/DEHYDRATE/PIZZA/BACON/ CAKE/CHICKEN/STEAK/FRIES/FISH/PREHEAT** and refer to the above steps for cooking.



Step 2:


Refer to the table below for the default temperatures and times for the 10 preset programs.

ICON	PROGRAM	DEFAULT TEMPERATURE	DEFAULT TIME
	DEFROST	300°F	5min
	DEHYDRATE	130°F	60min
	PIZZA	365°F	9min
	BACON	400°F	8min
	CAKE	320°F	25min
	CHICKEN	400°F	15min
	STEAK	355°F	13min
	FRIES	400°F	15min
	FISH	400°F	15min
	PREHEAT	400°F	3min

Note:

When the built-in menu is entered, the default temperature and time are displayed, and the temperature and time can be adjusted according to personal habits, food status or ambient temperature.



OPERATE

- 1 Click the  button page of the main menu to enter the operation page.
- 2 Use the fine-tuning **Time** round button/ + - button to customize the increase/decrease time.
Use the fine-tuning **Temp** knob / + - button to customize the increase/decrease temperature.

**Tip:**


- When you enter the operation page for the first time after startup, the default values are 105°F and 00:00 in the temperature and time columns.
- Increase/decrease the temperature by 5°F at a time with the temperature adjustment + - arrows.
Adjust the temperature by 5°F increase/decrease by the round knob.
- Adjust the time by the round button / + - arrow as follows: more than 1 minute - within 10 minutes, once every half a minute, more than ten minutes, once every 1 minute.
- Temperature minimum 105°F, maximum 400°F, time minimum 0 minutes, maximum 60 minutes.

Favorites

- 1 Find the recipe you like in **Home**, click the  to save, the  will light up, Click again to unfavorite.
- 2 Click the **Favorite** button, you can see the favorite recipe, or you can cancel the favorite and the recipe disappears.

Tip:


Favorites can save up to 50 recipes, and there will be a pop-up prompt when the number of favorites exceeds 50.

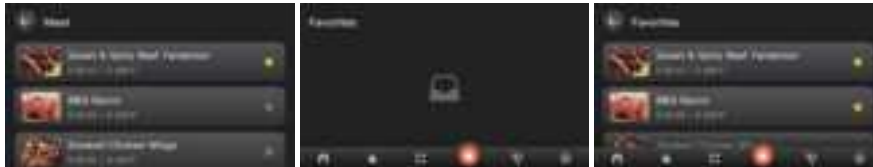

WIFI

Click  Enter the Distribution network interface.

- ① If there is no AiDot, you can download AiDot through the operation guide of the **Distribution Network** interface or refer to the third part of the manual to download AiDot.
- ② If you have downloaded AiDot before, you can scan the code to connect to the machine directly.

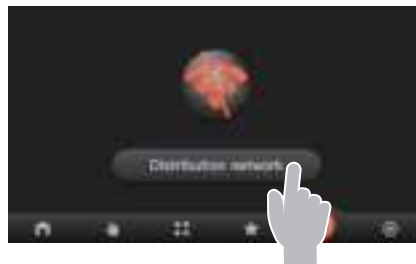

SERVICES

Click , You can view the four parts of User Manual/Warning/Settings/After-sales.



User Manual

Click Start to go to the next page to start reading the software manual.

Warning

Precautions, please read all the contents before using the machine for the first time.

Settings

Contains three parts

- ① Device Information: Display the basic information of the device.
- ② Unbind the device: you can reconnect to other apps and control the device.
- ③ Restore factory settings: Clear all data and restore the device to the original state.

After-sales

It contains after-sales service terms and after-sales emails.

Tip:


- You are happy, we are happy! If you have some good suggestions, you can let me know through our mailbox.
- Our dedicated and friendly customer care team will work at full stretch to put a smile back on your face and restore your confidence in Welov.

OVERHEAT PROTECTION


When the temperature of the air fryer reaches 440°F , the thermal protector inside the air fryer will automatically power off and the fryer will stop working. Please contact our after-sales service in time.

COOKING TIPS

- ① Ensure that the height of the food does not exceed the height of the fryer basket.

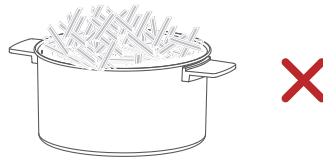

- ② Do not put paper or plastic containers that are not heat-resistant into the air fryer.

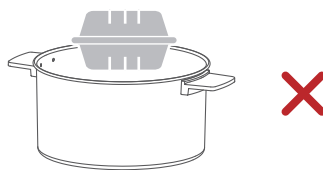

- ③ It is recommended to check the food through the window during the cooking process and pull out the basket to shake the food if necessary.



- ④ For more tips and directions, check out the online recipes in AiDot App!

USER GUIDE FOR AIDOT APP

APP Downloading and Installation

Option 1:

Search for **AiDot** from **App Store/Google Play**, then download and install it on your mobile device.

Option 2:

Scan the QR codes below to download and install.



For Ios/Android

APP Registration and Login

Start the **ADot** APP and register with a valid email address for the first time to log in.

Note:

For a successful connection, please allow **AiDot** APP to use your WLAN & Cellular Data when running it.

CONNECTION MODE

IMPORTANT:

For the air fryer:

Make sure the air fryer has been plugged into a socket and powered on.

For WiFi network:

- ❶ Before connecting, please turn on location service/GPS on your phone and grant all the permissions required by **AiDot** APP.
- ❷ Make sure your mobile device is connected to a 2.4GHz WiFi.
- ❸ Make sure you've entered the correct WiFi name and password when connecting.
- ❹ Make sure the air fryer, your phone and your router are close enough when connecting.

CONNECTION STEPS

- 1.1 Enter the Air Fryer **Distribution network** interface.
- 1.2 Start the **AiDot** APP and tap **Add Device**.
- 1.3 Choose to add **Manually**.
- 1.4 Select **Appliance**, find the **air fryer**, then select the model.
- 1.5 Scan the QR code of the distribution network in the air fryer.
- 1.6 After entering, click **Next**.
- 1.7 Turn on **WiFi**, **Bluetooth** and **location access** on your mobile device.
- 1.8 Confirm that the WiFi and password are correct.
- 1.9 click **Next**.
- 2.0 click **Connect**.
- 2.1 The connection is successful, and the icon shows that the device is online.

Status

You can check the machine status through the APP.


Menus

Recipes can be viewed online.


MAINTENANCE AND CARE

IMPORTANT:

- ❶ Before cleaning, unplug your air fryer and wait until it cools completely. You may draw out the fryer basket for faster cooling.

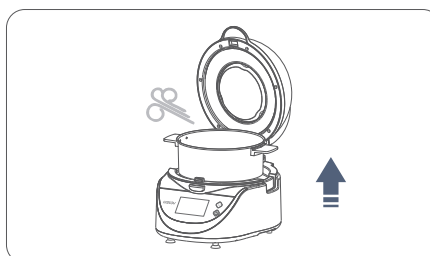


- ② Do not immerse the whole air fryer in water or any other liquid.

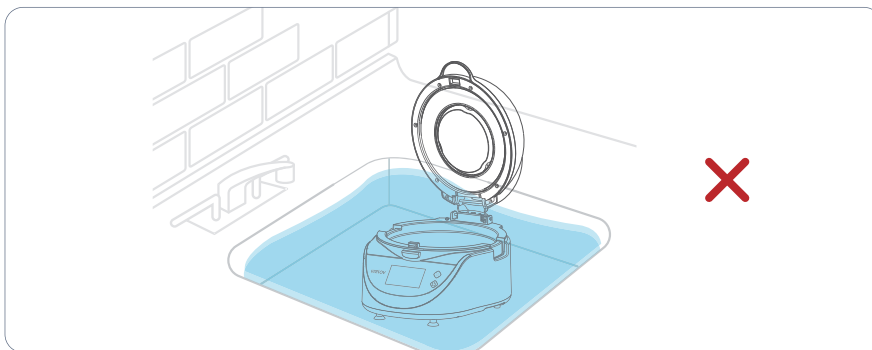

- ③ After cleaning, always remember to dry all the parts, especially the heating coil.




- ④ Use a clean and damp cloth to wipe the exterior of the air fryer.

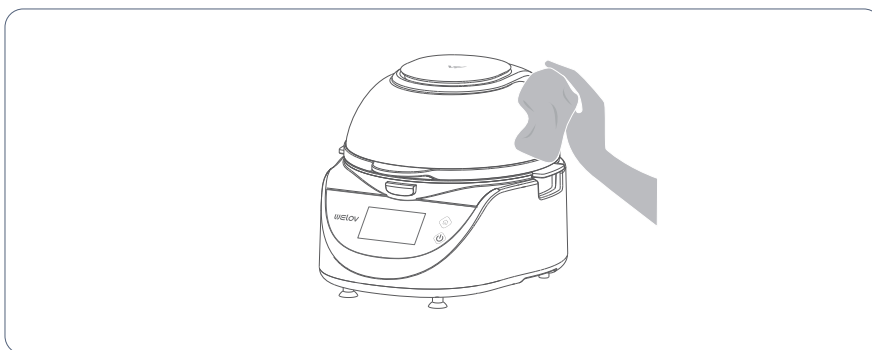


- ⑤ Dishwasher safe. Do not use metal utensils or abrasive cleaning materials to clean the nonstick coating.



- ⑥ Clean the food residue stuck on the basket and the plate by soaking in warm and soapy water.

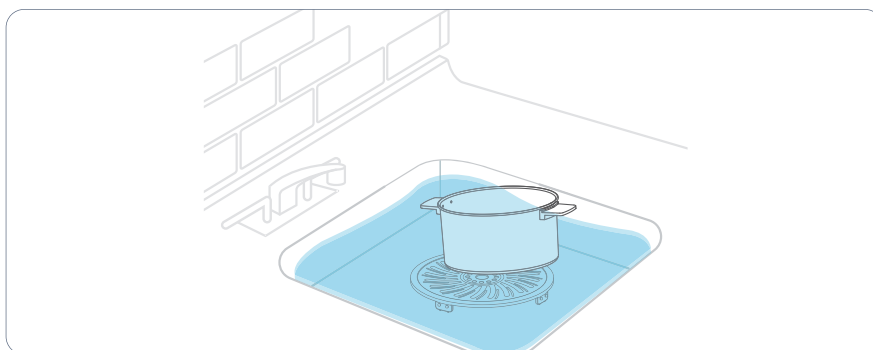

PACKING LIST

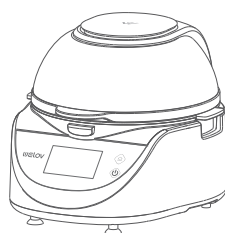

Air Fryers



Nonstick Crisper Plate



User Manual

TROUBLESHOOTING GUIDE

Fault Phenomeno	Cause Analysis	Solution
product not working	Power not plugged in	Insert the power plug into a grounded outlet
	bad power board	After-sales maintenance
no fried food	Too much food on the grill	If there are too many ingredients, put them on the grill in batches
	The set temperature is too low	Adjust the temperature to the desired
	Cooking time is too short	Increase cooking time
Fried food is not crispy	No traditional fried ingredients	Appropriate fried snacks can be used.if there is no fried food, lightly brush a layer of oil on the surface.
Unable to put the grill into the fryer smoothly	There is an object interfering inside the fryer	Install the grill correctly adjust the height of the food and place the food according to the specified capacity
	Too much food on the grill to close the lid	
white smoke	cooking greasy food	There will be a lot of smoke leakage when roasting greasy food, which is a normal phenomenon
	There is still grease residue left in the fryer from the last bake	Be sure to clean the fryer after each bake
Control panel displays abnormally	Damaged control panel	Please contact the after-sales service unit for processing
	Damaged circuit board electronic components	
touch failure	Damaged circuit board electronic components	Please contact the after-sales service unit for processing
	Damaged electronic screen	
	Poor internal wire contact	

WARRANTY POLICY

Your appliance has the benefit of our guarantee which covers the product for 18 months from the date of original purchase. This gives you the reassurance that if within that time, your appliance is proven to be defective because of either workmanship or materials, we will at our discretion either repair or replace your appliance. The appliance must be correctly installed, located, and operated in accordance with the instructions contained in the user manual. The guarantor disclaims any liability for accidental or consequential damage.

The Guaranteed conditions

- Documentary proof of the original purchase date is provided.
- The appliance has been installed and operated correctly and in accordance with our operating and maintenance instructions.
- The appliance is used only on the electricity supply on the rating plate.
- The appliance has only been used for normal domestic purposes.
- The appliance has not been altered, serviced, dismantled or otherwise interfered with by any person.
- Any parts removed during repair work or any product that has been replaced become our property.
- The guarantee is not transferrable if the product is resold.

The Guarantee does not cover

- Accidental damage, misuse, or abuse.
- Replacement of any consumable item or accessories.
- Repairs or replacements are required as a result of authorized repairs or inexperienced installation that fails to meet the requirements contained in the user guide or instruction book.
- Repairs to products used in commercial or non-residential household premises.

After sales service

Please keep your purchase receipt or other proof of purchase in a safe place as you will need to show us this document if your product requires attention within the guarantee periods. Please also record your product details below, which will allow you to access our services more quickly and help us identify your product.
Model number S/N number Purchased from Date of Purchase.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CONFORMS TO UL STD.1026&CERTIFIED TO CSA STD.C22.2
NO.60335-1&60335-2-9&CAN ICES-003(B)/NMB-003(B)

Welov Life Limited
6/F., Manulife Place, 348 Kwun Tong Road, Kowloon, Hong Kong

welovhome.com

FCC Warning

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☒ Reorient or relocate the receiving antenna.
- ☒ Increase the separation between the equipment and receiver.
- ☒ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☒ Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC warning

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with FCC's and IC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.

Cet appareil est conforme aux limites d'exposition au rayonnement RF stipulées par la FCC et l'IC pour une utilisation dans un environnement non contrôlé. Les antennes utilisées pour cet émetteur doivent être installées et doivent fonctionner à au moins 20 cm de distance des utilisateurs et ne doivent pas être placées près d'autres antennes ou émetteurs ou fonctionner avec ceux-ci. Les installateurs doivent s'assurer qu'une distance de 20 cm sépare l'appareil (à l'exception du combiné) des utilisateurs



CUSTOMER SUPPORT

support@welov.com
www.welovhome.com

骑马钉

材质：封面200g铜版纸 封面过哑膜，内页80g书写纸

折叠尺寸：140*200mm

展开尺寸：280*400mm

印刷方式：专色+四色双面印刷



pantone 8761c

***这页不印刷**