Phone: (858) 678 1400 Fax: (858) 546-0364 E-mail: tcb@tuvam.com



This picture shows the EUT dis-assembled into its main parts. The 4 main components are (starting from the left) the satellite antenna, PCB, bottom housing, stand. The PCB is sandwiched between the main antenna and bottom housing.





