
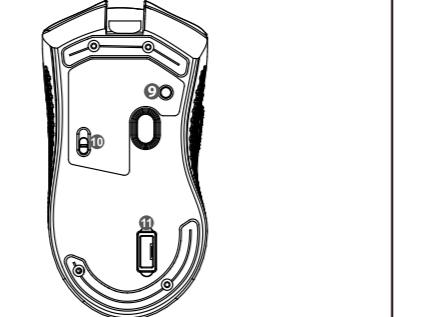


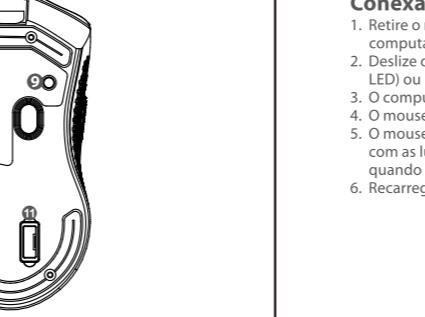

<p>US UK</p> <p>Dear user</p> <p>Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules.</p> <ol style="list-style-type: none"> Within warranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty. <p>1</p>	<p>Button Instructions</p> <ol style="list-style-type: none"> Left mouse button. Right mouse button. Scroll wheel and middle button. Forward button. Backward button. DPI+ button (defaulted to speed up the cursor). DPI- button (defaulted to slow down the cursor). Report rate button (125Hz/250Hz/500Hz/1000Hz). User profile switch button. Power switch button (ECO/Without LED light's up/OFF/ON/With LED light). USB receiver storage room. <p>2</p>  <p>3</p>	<p>Basic Operation:</p> <p>How to Connect the Mouse with a Computer</p> <ol style="list-style-type: none"> Take out the USB to USB C cable in the package and connect the mouse with your computer. Slide the power switch on the bottom of the mouse to OFF. (Mouse is workable whatever the power switch is ECO/OFF/ON) The computer will recognize and configure the mouse automatically. The mouse will be ready for use when the configuration is finished. The LED of the LOGO and the lower edge will light on then if the power switch on the bottom of the mouse to ON. The mouse is under recharging whatever the power switch is put ECO/OFF/ON. It may take about four hours for the mouse to be fully recharged. <p>Wireless Connection</p> <ol style="list-style-type: none"> Take out the USB receiver in the package and plug it into any available USB port on your computer. Slide the power switch on the bottom of the mouse to On (with LED) or ECO (without LED). The computer will recognize and configure the keyboard automatically. The mouse will be ready for use when the configuration is finished. The mouse can work about 9 hours in ECO mode, and about 2 hours under all LED light's on (ON mode). The scroll wheel light will flash when battery is low. Recharge the keyboard when the battery is low. <p>4</p>	<p>How to Select DPI</p> <p>How to Connect the Mouse with a Computer</p> <ol style="list-style-type: none"> The two buttons on the top of mouse are set to DPI+ / DPI as default. <p>How to Recharge the Battery</p> <p>When the battery is low, please recharge the mouse by USB type C cable, in time. Take out the USB to USB C cable and connect the mouse and any USB power output port. While the battery is under recharging, the scroll wheel lights up and flash firstly in red (if the battery is very low), then in yellow and finally lights steadily on in green when the battery is fully recharged. The battery can be recharged for more than 300 cycle times. And you can use the mouse while it is under recharging.</p> <p>Note: Slide the power switch on the bottom of the mouse to OFF for long term storage.</p> <p>CAUTION: DO NOT CHARGE THE MOUSE BY WALL PLUG, INPUT VOLTAGE MAX 7V.</p> <p>How to Reconnect the Mouse with the USB Receiver</p> <p>The mouse may lost connection with the USB receiver for some occasional reasons such as strong magnet, violent vibration. So you need to reconnect the mouse with the USB receiver. In this case, unplug the receiver and plug it back again. Slide the power switch on the bottom of the mouse to ON, press and hold the Left, Middle and Right button at the same time till the scroll wheel lights up and flash in yellow. It will flash for about twenty seconds and then change back to the previous light effect. The reconnection will be completed and you can use the mouse then.</p> <p>5</p>	<p>Auto Sleep and Smart Shutdown</p> <p>The mouse will be in first stage power save mode in 30 seconds if there is no operation under 125Hz, it will be into second stage power save mode in 10 minutes if there is no operation under 1000Hz. You can wake it up by clicking any mouse button except the DPI+ and DPI- buttons.</p> <p>Built-in Li-thion battery 1 unit.</p> <p>FAQ</p> <ol style="list-style-type: none"> If the mouse is not responding, please check whether the mouse is plugged correctly in the corresponding computers USB port, or try another USB ports. If the mouse is moving slowly, jumping or with delay, please try another surface. Dark, dirty, un-flat, bright surfaces may affect the performance of mouse. Mouse pad strongly recommended. <p>Low Battery Indication</p> <p>The scroll wheel light will flash in Red when battery is low.</p> <p>Storage for the Nano USB Receiver</p> <p>The nano USB receiver can be stored in the storage room on the bottom of the mouse.</p> <p>Software Instructions</p> <p>Please download the software on www.redragonzone.com for this mouse. You can get more functions and settings after software installation.</p> <ol style="list-style-type: none"> The DPI value can be set from 100 to 16000 DPI. Continuous keystroke function: Set number of clicks and delay time. 9 of the mouse buttons can be remapped to various actions. Polling rate: 125Hz/250Hz/500Hz/1000Hz. As default, working mode 1 was set to 125Hz and working mode 2 was set to 1000Hz. Backlight mode adjustment. <p>6</p>	<p>FCC Statement</p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:</p> <ul style="list-style-type: none"> - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help. <p>This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Battery of ion de lítio embutida, 1 unidade.</p> <p>Dúvidas frequentes</p> <ol style="list-style-type: none"> Se o mouse não estiver respondendo, verifique se o mouse está conectado corretamente na porta USB correspondente do computador ou experimente usar outra porta USB. Se o mouse estiver lento, pulando ou com movimentos intermitentes, experimente outra superfície. Superfícies escuras, sujas, irregulares ou brilhantes podem afetar o desempenho do mouse. É recomendado o uso de um mouse pad. <p>7</p>
<p>BATTERY SAFETY GUIDELINES</p> <p>DO NOT replace the battery with a different model.</p> <p>DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material.</p> <p>DO NOT touch the battery if material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes.</p> <p>DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other standard operating condition.</p> <p>DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations.</p> <p>DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful.</p> <p>CAUTION</p> <p>Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.</p> <p>Cet appareil contient des émetteurs / récepteurs exempts de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne doit pas causer d'interférences. (2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.</p> <p>This device contains licence-exempt transmitter(s)/receiver(s) that comply with RSS (RSS) of Innovation, Science and Economic Development Canada (licence-exempt RSS).</p> <p>Operate the device according to following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device.</p> <p>8</p>	<p>PT</p> <p>Prezado usuário,</p> <p>Obrigado por escolher a marca REDRAGON. Para proteger seus direitos e oferecer o melhor atendimento ao cliente, pedimos que você observe as regras da nossa garantia. Dentro do período da garantia, os reparos são garantidos nos casos de falha devido a problemas no circuito elétrico. Danos causados pelas desmontagens, por impactos violentos, imersão em água, ligação em correntes ou voltagens incorretas e danos causados por desastres naturais, como incêndios, inundações ou terremotos, não estão incluídos.</p> <p>2. Peças que sofreram desgaste (como pés) e a substituição de peças avulsas não estão incluídas em nossa garantia.</p> <p>9</p>  <p>10</p> <p>11</p> <p>12</p> <p>13</p> <p>14</p>	<p>Descrição dos botões</p> <ol style="list-style-type: none"> Botão esquerdo do mouse. Botão esquerdo do mouse. Botão da roda e botão do meio. Botão de avanço. Botão de aumento do DPI (o valor padrão aumenta a velocidade do cursor). Botão de diminuição do DPI (o valor padrão reduz a velocidade do cursor). Botão de redução da taxa de leitura (125 Hz/250 Hz/500 Hz/1000 Hz). Botão de troca de perfil de usuário. Botão de energia (ECO sem luzes de LED/DESLIGADO/LIGADO (com luzes de LED). Espaço de armazenamento do receptor USB. <p>13</p>	<p>Operação básica:</p> <p>Como conectar o mouse a um computador</p> <p>Conexão com fio</p> <ol style="list-style-type: none"> Retire o cabo USB C da embalagem e conecte o mouse ao computador. Deslize o interruptor de energia na parte inferior do mouse para a posição OFF (desligado). O mouse funcionará independentemente da posição do interruptor, seja ECO/ON/Off. O computador vai reconhecer e configurar o mouse automaticamente. O mouse estará pronto para uso quando a configuração estiver concluída. O LED do LOGOTIPO e a borda inferior acenderão se o interruptor de energia na parte inferior do mouse estiver na posição ON. O mouse ficará carregando, independentemente do interruptor de energia estar em ECO/ON. São necessárias cerca de quatro horas até que o mouse esteja totalmente carregado. <p>Conexão sem fio</p> <ol style="list-style-type: none"> Retire o receptor USB da embalagem e conecte em qualquer porta USB disponível do computador. Utilize o interruptor de energia na parte inferior do mouse para a posição On (com LED ou ECO sem LED). O computador vai reconhecer e configurar o teclado automaticamente. O mouse estará pronto para uso quando a configuração estiver concluída. O mouse poderá funcionar por cerca de 9 horas no modo ECO e por cerca de 2 horas com as luzes de todos os LEDs acesa (modo ON). A luz da roda de rolemento piscará quando a bateria estiver fraca. Recarregue o teclado quando a bateria estiver fraca. <p>CUIDADO: NÃO CARREGUE O MOUSE LIGANDO O PLUGUE NA TOMADA DA PAREDE. VOLTAGEM MÁXIMA 7 V.</p> <p>Como reconectar o mouse ao receptor USB</p> <p>O mouse pode perder o conexão com o receptor USB em condições eventuais, como campo magnético forte ou vibração violenta. Por isso poderá ser necessário reconectar o mouse ao receptor USB. Nesse caso desconecte o receptor e conecte novamente. Deslize o interruptor de energia na parte inferior do mouse para a posição ON (ligado), pressione e segure o botão esquerdo, do meio e da direita ao mesmo tempo até que a roda acenda a piscar em amarelo. Ela piscará por cerca de 20 segundos e depois voltará ao efeito luminoso anterior. A reconexão estará concluída e você poderá usar o mouse.</p> <p>Instruções do software</p> <p>Baixe o software em www.redragonzone.com para o mouse. Você terá mais funções após a instalação do software.</p> <ol style="list-style-type: none"> O valor em DPI pode ser definido entre 100 e 16000 DPI. Função de pressionamento constante: define o número de cliques e a duração do intervalo. Movimento dos botões do mouse podem ser redefinidos com diversas ações. Velocidade de leitura: 125 Hz/250 Hz/500 Hz/1000 Hz. Por padrão, o modo de funcionamento 1 foi definido com 125 Hz e o modo de funcionamento 2 foi definido com 1000 Hz. Ajuste do modo de iluminação de fundo. <p>15</p>		