

Voiture télécommandée / RC car / Coche RC

CROSSLANDER® BUMPER



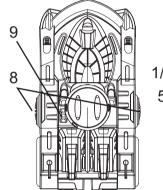

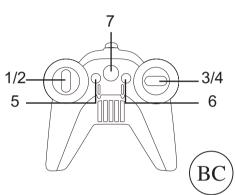



Lexibook®

ENGLISH

SAFETY INSTRUCTIONS

PLEASE READ BEFORE OPERATING THIS EQUIPMENT.

Before using the unit, be sure to read all operating instructions carefully. Please note that these are general precautions and may not pertain to your may not pertain to your unit.

- 1. Read this Instruction Manual before you attempt to connect or operate the appliance

- 2. Keep these instructions in good condition. Heed all warnings. Follow all instructions.

 3. Save this Instruction Manual for future reference.

 4. The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. Dry location use only.
- 5. No naked flame source, such as candles, should be placed on the product.
- Northlated harms source, such as calculas, should be placed on the product.
 Northlation should not be impeded by covering the ventilation openings.
 Only use accessories, which are specified by the manufacturer.
 Use replacement parts, which are specified by the manufacturer.
- 9. Install the unit in accordance with the manufacturer's instructions.
- Install the unit in accordance with the manufacturer's instructions.
 Place the unit where there is good ventilation. Place the system on a flat, hard and stable surface.
 Do not expose to temperatures above above 40°C / 104°F. Allow at least 10 cm / 4 inches clearance from the rear and the top of the unit and 5 cm / 2 inches from each side.
 Press the players buttons gently. Pressing them too hard can damage the player.
 Dispose of used batteries in an environmentally responsible manner.

- Always ensure that the product is unplugged from the electrical outlet before moving or cleaning.

 Clean it with dry cloth only.
- Turn off the product during lightning, storms or when it will not be used for long periods of time. 15. This product has no user-serviceable parts. Do not attempt to repair this product yourself. Only qualified service personnel should perform servicing. Take the product to the electronics repair shop of your choice for inspection and repair.
 16. NEVER let anyone, especially children, push anything into holes, slots or any other openings in the

- unit's casing as this could result in a fatal electric shock.

 17. Don't mount this product on a wall or ceiling.

 18. Do not leave the unit unattended when it is in use.

 19. Keep minimum distances around the apparatus for sufficient ventilation.
- 20. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers table-cloths curtains etc
- 21. The use of apparatus in moderate climates.

CONTENTS

When unpacking, ensure that the following elements are included:

2 x Crosslander® Bumper 2 x Remote control 2 x rechargeable batteries 2 x USB charging cables

WARNING: All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

POWER SUPPLY

Your RC car operates with the 3.7V === 500mAh rechargeable battery, which can be charged with the USB charging cable (included).

The remote operates with 2 x 1.5V === AA/LR6 batteries (not included).

- Charging the car:
 1. Check that the unit is switched off.
 2. Using a screwdriver, open the battery door located at the rear of the unit (see
- figure 1).

 3. Delicately remove the rechargeable battery from the compartment. Unplug it by pinching both sides of the connector.

 4. Insert the small end of the USB charging cable (included) into the battery connector.

- 5. Connect the other end of the USB cable into the USB port of your
- Connect the other end of the USB cable into the USB port of your powered computer.
 The LED indicator on the USB port lights up when the battery is charging.
 Once loading is complete the LED light will turn off.

The toy is only to be connected to equipment bearing the following symbol. \Box

or **(S) Note:** If connected with an adaptor, please only use the adaptor for toys and it should be with this

Note: Please note that the USB cable can be used for battery charging only and not for data transfer. WARNING: The toy is not to be connected to more than the recommended number of transformers or

Warning: Disconnect the adapter if the game is not used for a long period of time to prevent overheating. When the game is powered by an adapter, do not play outside. Check the state of the adapter and

ing. When the game is powered by an adapter, do not play outside. Check the state of the adapter and the connection cords regularly. If their condition is deteriorating, do not use the adapter until it has been repaired. The toy shall only be used with a transformer for toys. The adapter is not a toy. The device should be disconnected from the power supply to be cleaned if liquids are used for cleaning. The toy is not intended for children under 3 years old. Misuse of transformer can cause electrical shock.

Parental advisory: transformer and adaptor for toys are not intended to be used as a toy. The usage must be under parental advice.

WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided

- **Installing batteries in the remote:**1. Using a screwdriver, open the battery door located at the rear of the
- unit. 2. Insert 2 x 1.5V ___ AA/LR6 batteries observing the polarity markings inside the battery compartment.
 3. Close the battery compartment and tighten the screw.

WARNING

Danger of explosion if battery is incorrectly replaced. Please only replace it with the same or equivalent

- Danger of explosion if pattery is incurred in replaced. It was a sunlight, fire or anything similar.

 The battery should not be exposed to high temperatures, such as sunlight, fire or anything similar.

 The normal function of the product may be disturbed by strong electromagnetic interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.

 WARNING: Malfunction or loss of memory may be caused by strong frequency interference or electrostatic discharge. Should any abnormal function occur, switch it off and then on again, or unplug the USB cable, or remove the batteries and insert them again.

Non-rechargeable batteries are not to be recharged. Rechargeable batteries are to be removed from the toy before being charged. Rechargeable batteries are only to be charged under adult supervision. Different types of batteries or new and used batteries are not to be mixed. Only batteries of the same or equivalent type as recommended are to be used. Batteries are to be inserted with the correct polarity. Exhausted batteries are to be removed from the toy. The supply terminals are not to be short circuited. Do not throw batteries into a fire. Remove the batteries if you are not going to use the game for a long period of time. Battery shall not be exposed to excessive heat such as sunshine, fire or the like.


PRODUCT DESCRIPTION 9. Car Switch On/Off

1. Move forward 4. Move to the left 7. Power* / Music 2 Move backward 5 Left Trim Switch


GETTING STARTED

When you first use the product, open the battery compartment at the rear of the unit with a screwdriver, take the battery out and charge it, following the steps indicated in the "Power supply" section. Once it's charged, plug back the battery inside the car, and close the compartment.

Remote use Install the batteries in the remote, as indicated in the "Power supply" section.

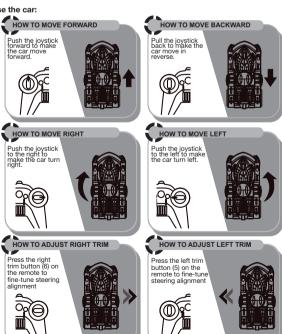

 Note: Fine-tuning the steering alignment involves making small adjustments to ensure that the RC car travels straight when the steering control is centered. For example, if the car veers slightly to the left when the control is centered, using the left trim button allows you to correct this deviation, resulting





2408MHz – 2478MHz -40.13 dBm Frequency range

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired expertise.

FCC NOTICE

(2) This device must accept any interference received, including interference that may cause undesired operation.
Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help.

MAINTENANCE AND WARRANTY

Only use a soft, slightly damp cloth to clean the unit. Do not use detergent. Do not to expose the unit to direct sunlight or any other heat source. Do not immerse the unit in water. Do not dismantle or drop the unit. Do not try to twist or bend the unit.

Note: Please keep this instruction manual, it contains important information.

This product is covered by our 3 months warranty.

For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposition to heat and humidity, etc.). It is recommended to keep the packaging for any further reference. In a bid to keep improving our services, we could implement modification on the colours and the details of the product shown on the packaging.

WARNING! Not suitable for children under 3 years. Choking Hazard - Small parts.

* 100 ALON (*)

* Activated by long press (3 secs.)

Reference: RC2_09
Designed and developed in Europe – Made in China, Shantou.
©Lexibook®

Lexibook S.A. 6 avenue des Andes Bâtiment 11 91940 Les Ulis

Lexibook America Inc. Unit 8-9, 4th Floor C/O Pramex International
Kenning Industrial Building
19 Wang Hoi Road
Kowloon Bay, Kowloon, Hong Kong
Tolking Technology
1251 Avenue of the Americas,
3rd Fl, New York,
NY 10020, USA

For after-sales service, please contact us at savcomfr@lexibook.com www.lexibook.com

Environmental Protection:
Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).

RC2_09_IM2274_349_V04.indd 1 3/7/2024 10:47 AM 420(w) x 297(h) mm Design Code: 349

