

**SHARP**

**SHARP CORPORATION**

**INFORMATION AND COMMUNICATION SYSTEMS GROUP**

492 Minosho-cho, Yamatokoriyama-shi, Nara, 639-1186 Japan

Tel +81-743-53-5521 Fax +81-743-54-2856

# **802.11g Mini PCI User Manual**

## **T60H713**

|                                                    |                                     |
|----------------------------------------------------|-------------------------------------|
| Chapter 1 About the Wireless MINI PCI .....        | 3                                   |
| 1-1 Features .....                                 | 3                                   |
| 1-2 Applications.....                              | 3                                   |
| 1-3 Product Kit .....                              | <b>Error! Bookmark not defined.</b> |
| Chapter 2 Network Configuring and Planning .....   | 4                                   |
| 2-1 Network Topology.....                          | 4                                   |
| 2-2 Roaming .....                                  | 6                                   |
| Chapter 3 Installation .....                       | 7                                   |
| 3-1 System Requirements ....                       | <b>Error! Bookmark not defined.</b> |
| 3-2 Inserting the Wireless Card .....              | 7                                   |
| 3-3 Installation and Uninstall Process .....       | 7                                   |
| Chapter 4 Wireless Utility and Configuration ..... | 14                                  |
| 4-1 Windows 98/ME/2000 Wireless Utility.....       | 14                                  |
| 4-2 Windows XP Wireless Utility.....               | 18                                  |
| Appendix A Troubleshooting .....                   | 24                                  |
| Appendix B Glossary .....                          | 25                                  |
| Appendix C Specifications for Wireless Card.....   | <b>Error!</b>                       |
| <b>Bookmark not defined.</b>                       |                                     |

## **Chapter 1 About the Wireless MINI PCI**

Windows 98/2000/ME/XP will automatically recognize the wireless MINI PCI and initiate the installation process. Upon successful installation, the wireless MINI PCI will communicate seamlessly with other IEEE 802.11g wireless products.

### **1-1 Features**

1. Supports up to 54 Mbps data rate.
2. Supports point-to-point and point-to-multipoint access provides increased flexibility.
3. Seamless connectivity to wired Ethernet and PC network LAN offers quick, trouble-free integration with existing networks.
4. Direct Sequence Spread Spectrum (DSSS) technology provides secure wireless connection.
5. Wireless connections eliminate the hassle and cost of cabling.
6. Supports a wide range of LAN (Local Area Network) Network Operating Systems (NOS)  
including Windows 98/2000/XP
8. Omni - directional antenna provides wide range of reception.
9. Greater flexibility to locate or move networked PC

### **1-2 Applications**

This wireless MINI PCI offer a fast, reliable, cost-effective solution for wireless client access to the network. Refer below for examples :


- Remote access to corporate network information
- E-mail, file transfer and terminal emulation
- Difficult-to-wire environments
- Historic or older buildings without Ethernet wiring.
- Buildings with asbestos insulation
- Open areas where wiring is difficult to employ
- Re-layout frequently environments
- Retailers, manufacturers or other organizations that frequently rearrange the workplace or relocate
- Temporary LANs for special projects or peak time usage
- Trade shows, exhibitions and construction sites that employ temporary networks.
- Retailers, airline and shipping companies that need additional workstations for a peak period and auditors that require workgroups at customer sites.
- Access to database for mobile workers
- Medical, technical and retail specialists that require roaming access to a database or other network resources.
- Perfect for users that need a small, easy-to-install network that deploys rapidly.

## Chapter 2 Network Configuring and Planning

The wireless MINI PCI supports legacy Ethernet LAN network configuration options as defined by the IEEE 802.11g. The wireless MINI PCI can be configured as:

- . Ad-Hoc mode for no Access Point wireless environment.
- . Infrastructure mode for wireless environment with Access Point.

### 2-1 Network Topology

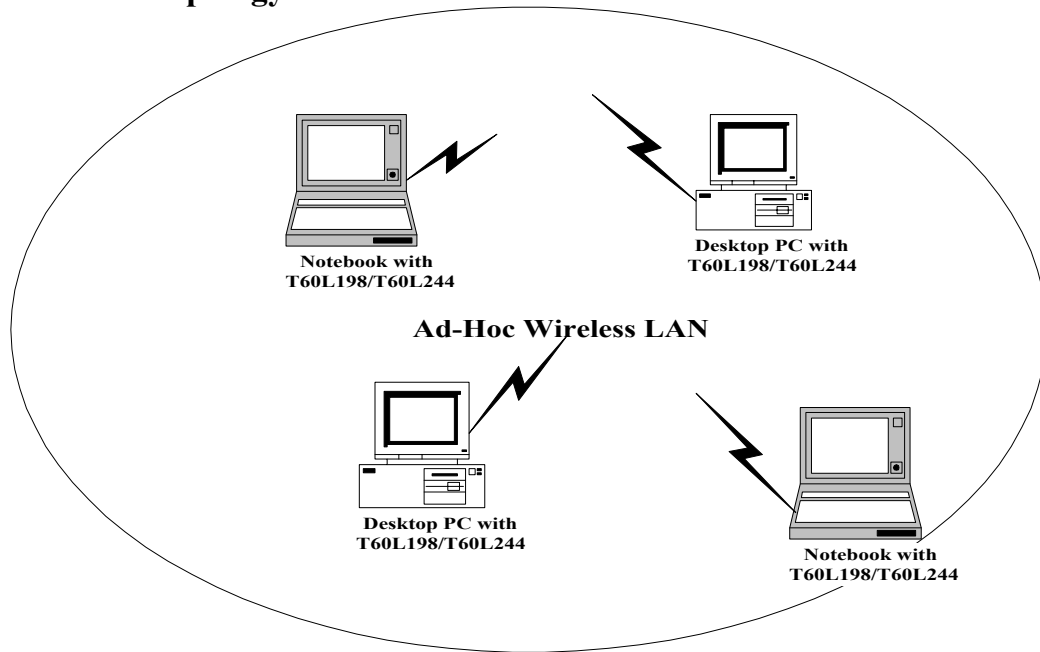

**Fig.1 Ad-Hoc Wireless LAN**

An Ad-Hoc wireless LAN is a group of computers. Each computer equipped with a wireless MINI PCI that configure to same radio channel in order to communicate with others. Ad-Hoc wireless LAN configurations are appropriate for branch level departments or SOHO operations.


# SHARP

SHARP CORPORATION

INFORMATION AND COMMUNICATION SYSTEMS GROUP

492 Minosho-cho, Yamatokoriyama-shi, Nara, 639-1186 Japan

Tel +81-743-53-5521 Fax +81-743-54-2856

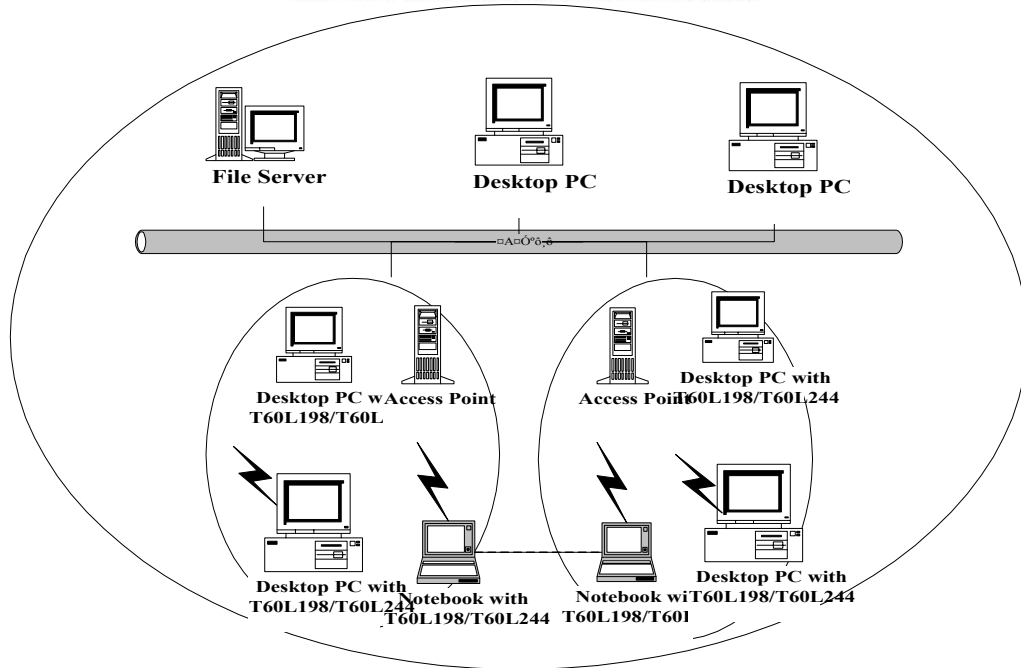


**Fig.2 Infrastructure Wireless LAN Configuration**

A group of wireless users and an Access Point compose a Basic Service Set (BSS). Wireless clients can talk to any computer in both wired and wireless LAN network via the Access Point.

## 2-2 Roaming

Infrastructure mode also supports roaming capabilities for mobile users. More than one BSS can be configured as an Extended Service Set (ESS). The continuous network allows users to roam freely within ESS. All wireless MINI PCI and Access Point within one ESS must be configured with the same ESSID in order to utilize roaming function. Properly Access Point positioning with a clear radio signal can greatly enhance wireless performance.

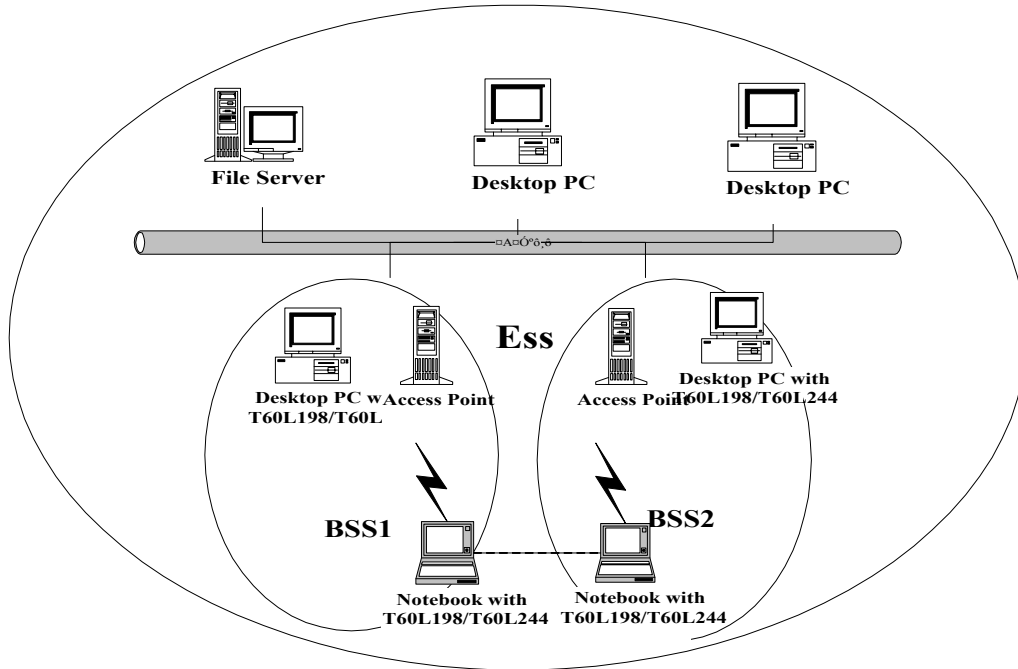

**Fig.4 Roaming in an Extended Service Set (ESS)**

## Chapter 3 Installation


### 3-1 Inserting the Wireless MINI PCI

1. Locate an available Type II PCMCIA slot.
2. With the MINI PCI pin connector facing the MINI PCI slot, you must insert the card into the slot.
3. After properly inserting the wireless card, you can continue with wireless driver and utility installation.

### 3-2 Installation and Uninstall Process

#### Install AMBIT Wireless LAN (Windows 98/2K/XP)

- ③ Execute the program 'Setup.exe' in the CD. Windows displays the dialog as below. Press 'Next' button to continue.

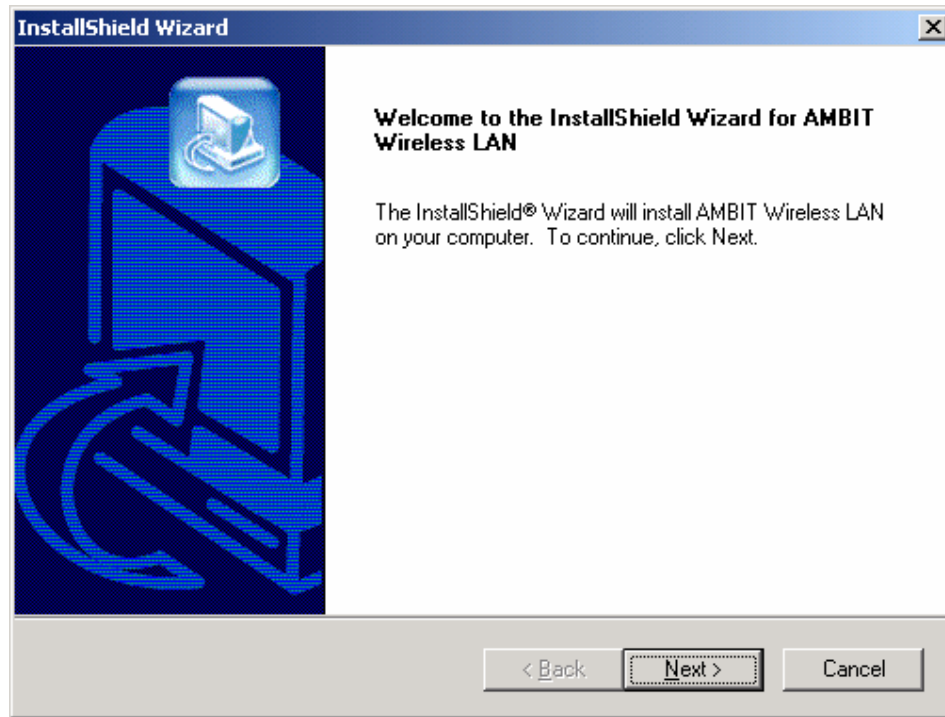

- ③ It displays a License Agreement dialog. Press 'Next' to continue.


# SHARP

SHARP CORPORATION


INFORMATION AND COMMUNICATION SYSTEMS GROUP

492 Minosho-cho, Yamatokoriyama-shi, Nara, 639-1186 Japan

Tel +81-743-53-5521 Fax +81-743-54-2856

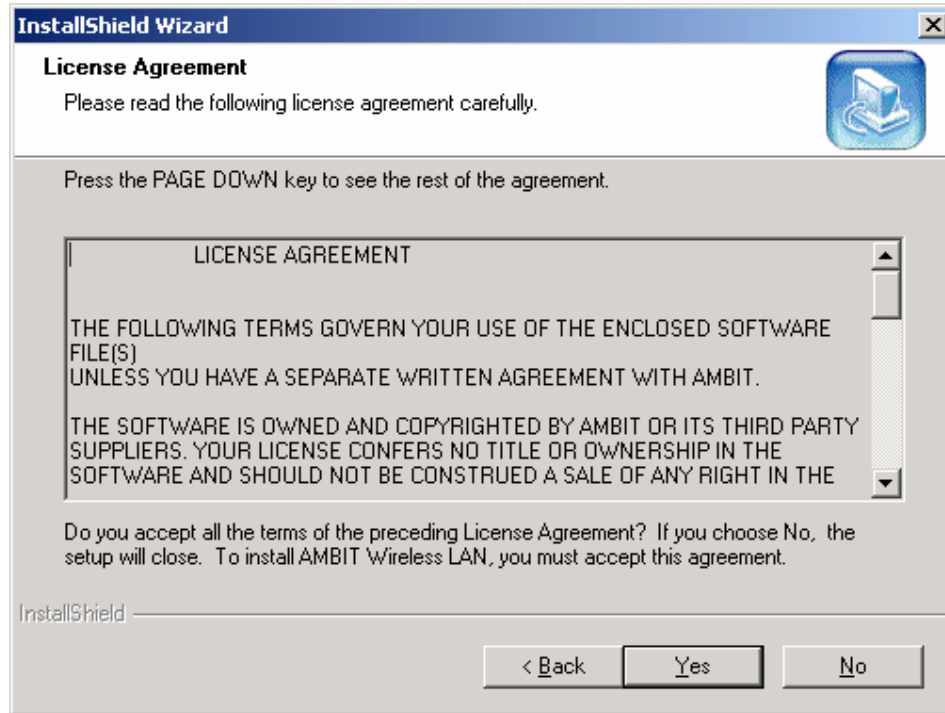

- ③ Select the destination folder that you want to place the files.

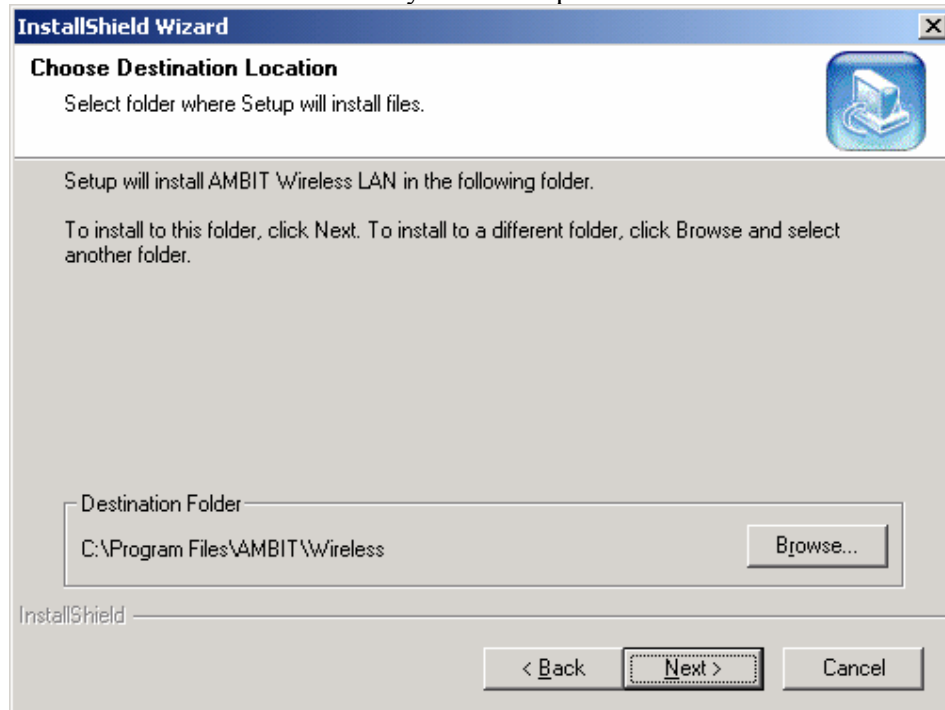

- ③ Wait for the install program to do the installation.




# SHARP

SHARP CORPORATION


INFORMATION AND COMMUNICATION SYSTEMS GROUP

492 Minosho-cho, Yamatokoriyama-shi, Nara, 639-1186 Japan

Tel +81-743-53-5521 Fax +81-743-54-2856

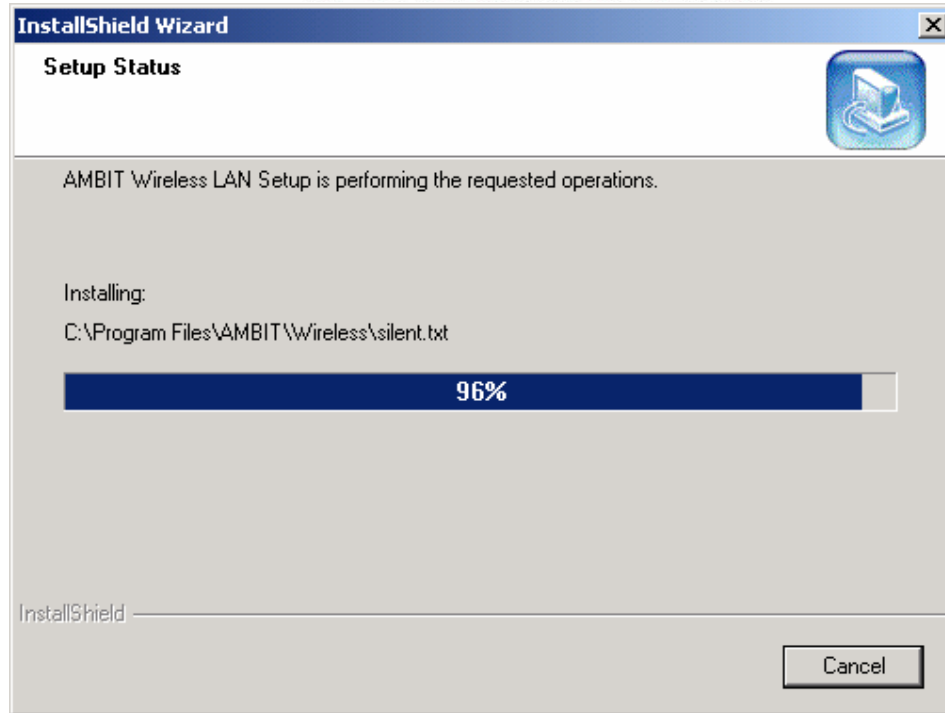

- ③ Congratulations! AMBIT Wireless LAN has been installed successfully.  
Please click 'Finish' to go to the next step.

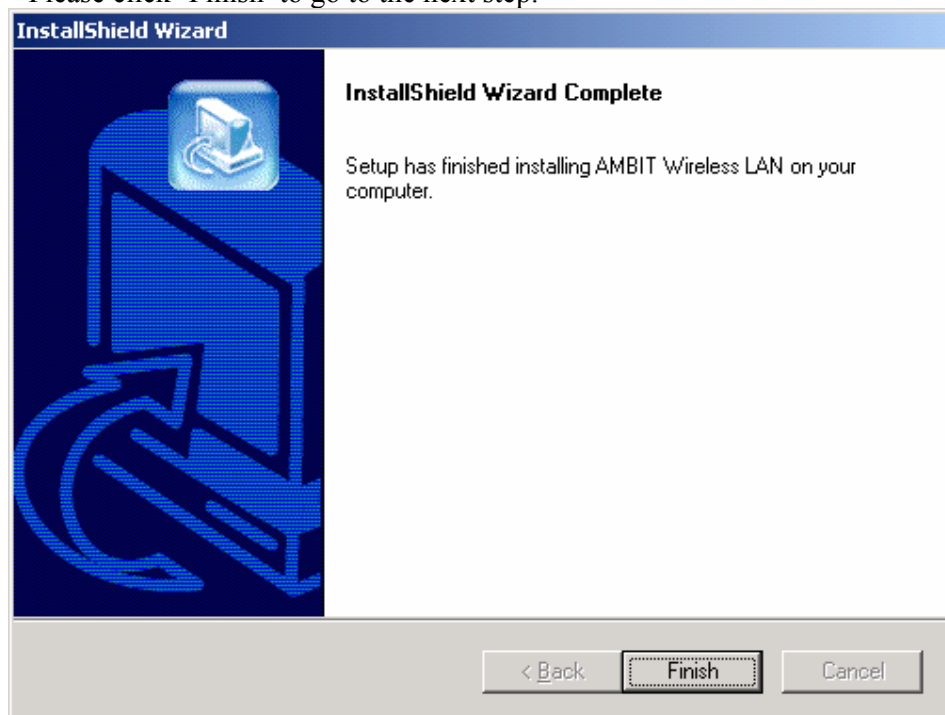

- ③ Please remove any disks from any drives before your click 'Finish'.  
Then click 'Finish' to complete setup.


# SHARP

SHARP CORPORATION

INFORMATION AND COMMUNICATION SYSTEMS GROUP


492 Minosho-cho, Yamatokoriyama-shi, Nara, 639-1186 Japan

Tel +81-743-53-5521 Fax +81-743-54-2856

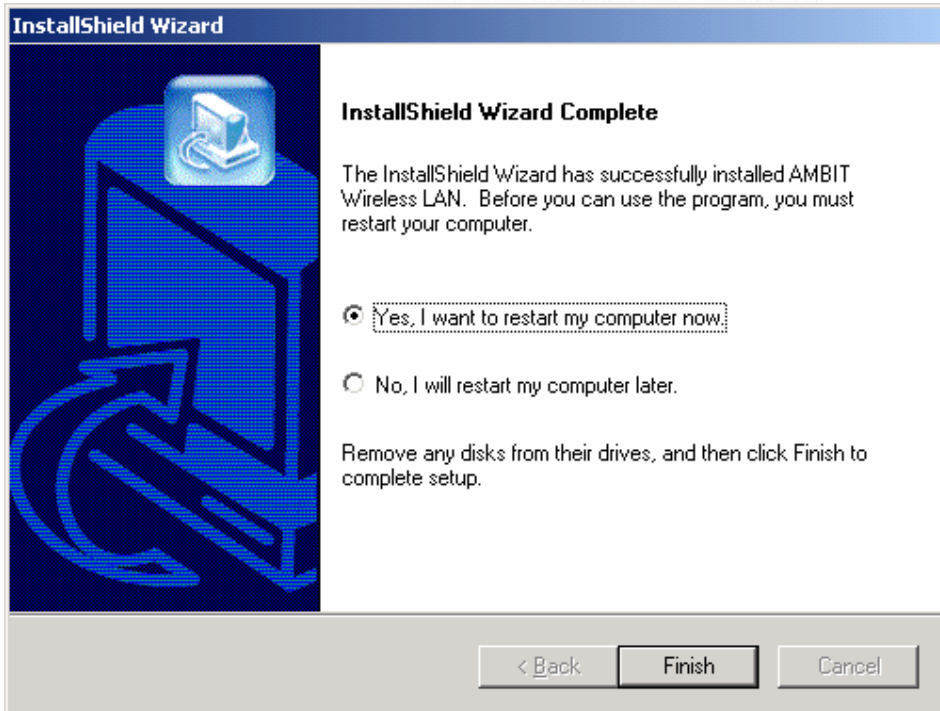


## Uninstall Wireless LAN (Windows 98/2K/ME/XP)


- ③ One can remove the AMBIT Wireless LAN via the Add/Remove Programs' in the 'Control Panel'. Select AMBIT Wireless LAN' and click Add/Remove' button, the dialog as below displays.

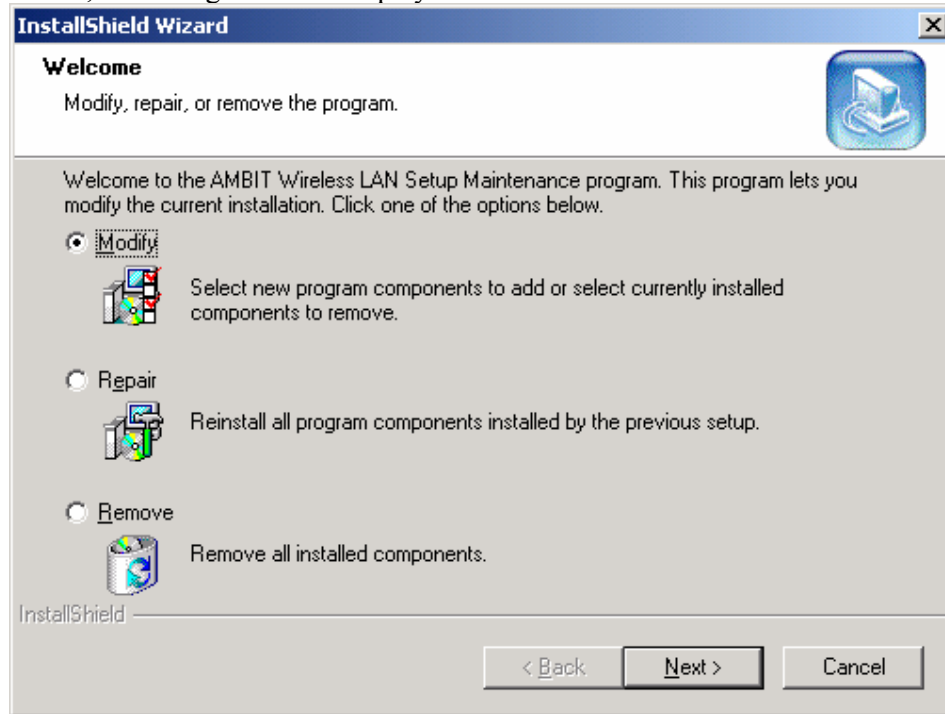


- ③ Select 'Remove' and then click the 'Next' button to perform the un-installation. Click 'OK' button if you really want to remove the AMBIT Wireless LAN.

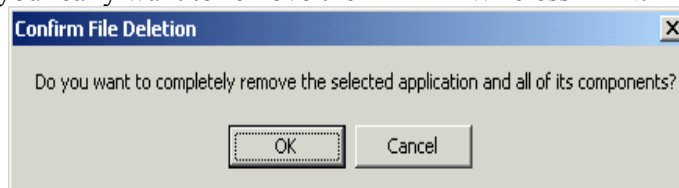

- ③ Wait for the un-installation to do its work.

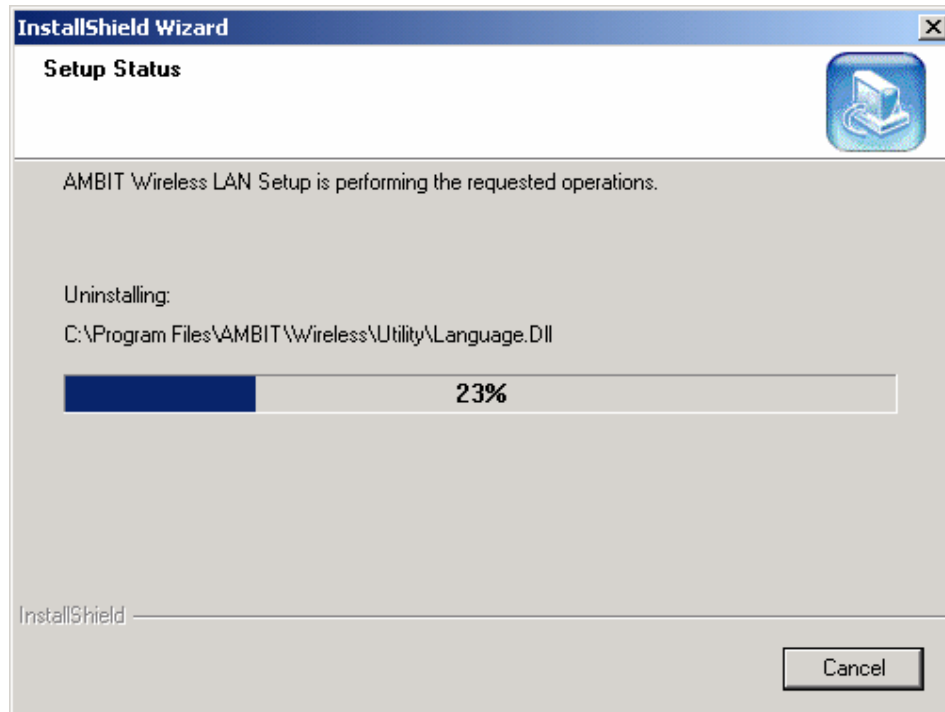

- ③ Click 'Finish' to complete the un-Installation.

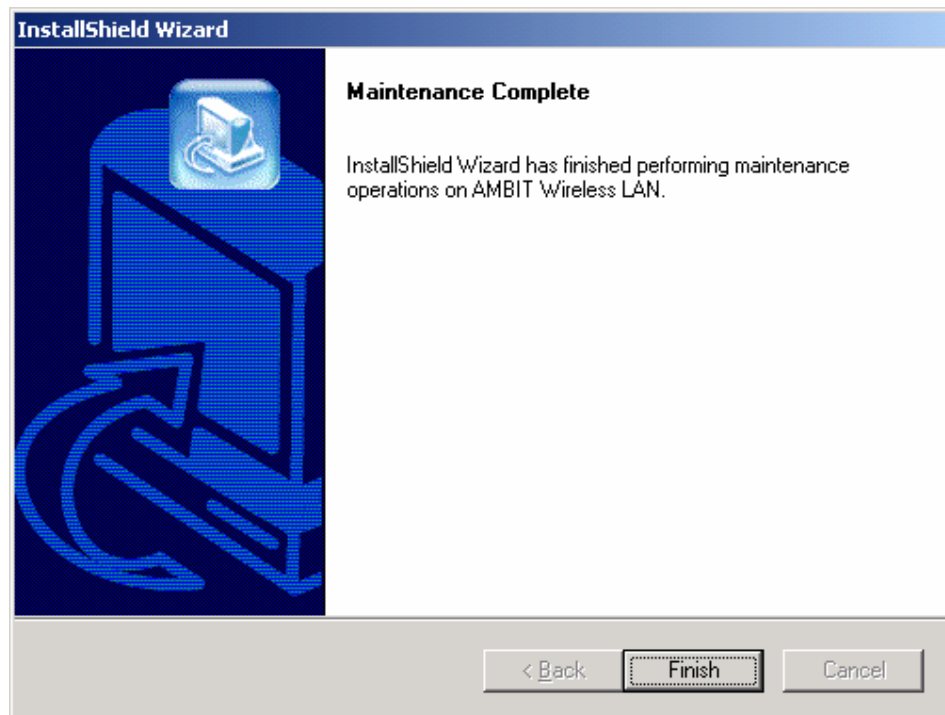

- 5 If you want to restart your computer now. Please remove any disks from any drives before your click 'Finish'. Then click 'Finish' to complete uninstallation.


# SHARP

SHARP CORPORATION

INFORMATION AND COMMUNICATION SYSTEMS GROUP

492 Minosho-cho, Yamatokoriyama-shi, Nara, 639-1186 Japan

Tel +81-743-53-5521 Fax +81-743-54-2856

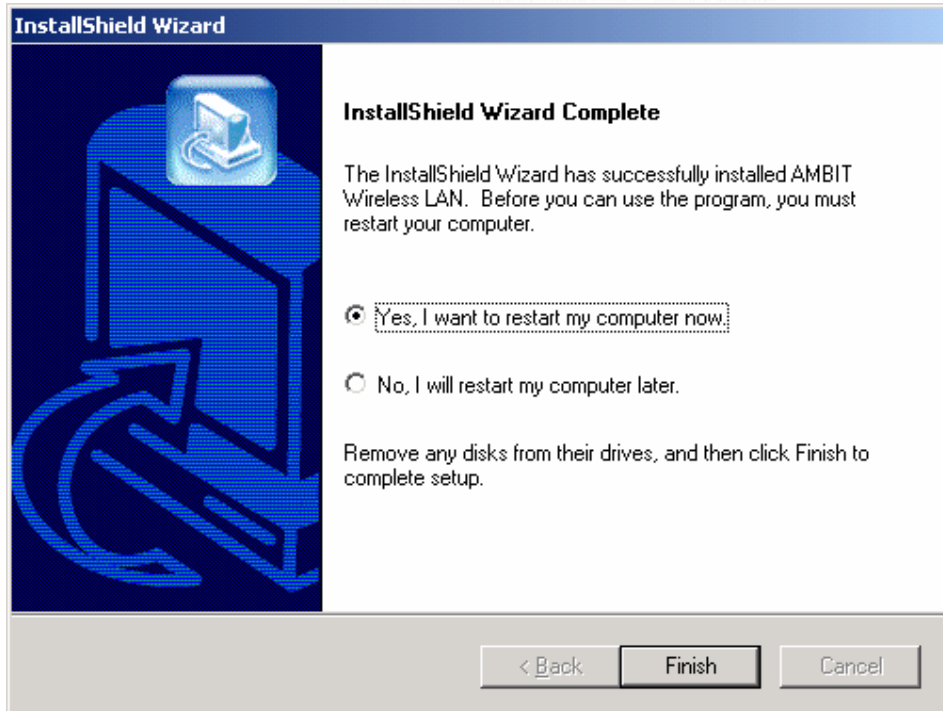

## Chapter 4 Wireless Utility and Configuration

The following sections describe the Wireless Network Configuration Utility. This utility provides quick access and friendly interface to configure the card setup.

### 4-1 Windows 98/2000 Wireless Utility

After installation is completed, a Wireless LAN Utility icon will appear in Desktop screen. Click it, then you will see the screen below. If you cannot find the icon, you can select “Start” ->”Program”-> Wireless LAN Configuration Utility” Icon.

#### Card Status

The screenshot shows the 'Wireless LAN Utility for Windows' window. The title bar includes the Sharp logo and the text 'Wireless LAN Utility for Windows'. Below the title bar is the 'AMBIT' logo and a dropdown menu for 'Wireless LAN Adapter' set to '[18] LAN-Express IEEE 802.11 PC Card Adapter'. The interface has four tabs: 'Card Status' (selected), 'Card Configuration', 'Site Survey', and 'About'. The 'Card Status' tab displays the following information:

- Connecting Information:**
  - ESSID: MIS (with a 'Rescan' button)
  - BSSID: 00:D0:59:FD:FD:F0
  - Throughput(bytes/sec): Tx: 0, Rx: 62413
  - Current Channel: 6
  - Current Tx Rate: 11 MBits/sec
- Card Information:**
  - MAC Address: 00:D0:59:3C:05:DA
  - Frequency Domain: FCC
  - Firmware Version: 1.03.06
- Link Quality:** 42 % (represented by a yellow bar)
- Signal Strength:** 67 % (represented by a green bar)
- WEP:** OFF (with a key icon)
- Buttons:** 'Disable Radio' and 'Hide'

You can see the AP information that your card connected. In this page you also can find which channel and TX rate is used now, and Firmware Version, MAC Address and Frequency Domain.

**ESSID:** An acronym for Extended Service Set Identifier, ESSID is the unique name shared among all clients and Access Points in a wireless network. The ESSID must be identical for all clients or Access Points participating in the same network. The ESSID is case sensitive and must not exceed 32 characters. Press ‘Scan’ it will scan the specific ESSID that your profile set. If your profile set the ESSID to be ANY, then while you press ‘Scan’, it will scan AP in the nearby area and choose the stronger one. From Link Quality and Signal Strength, you can tell the wireless transmission quality.

#### Card Configuration

# SHARP

SHARP CORPORATION

INFORMATION AND COMMUNICATION SYSTEMS GROUP

492 Minosho-cho, Yamatokoriyama-shi, Nara, 639-1186 Japan

Tel +81-743-53-5521 Fax +81-743-54-2856

If you have no idea how to fill in these columns, then you can choose the Profile Name: **Default** to connect AP nearby. Since it is a default setting and it cannot be changed the contents of these columns.

Wireless LAN Utility for Windows

**AMBIT** Wireless LAN Adapter: [8] LAN-Express IEEE 802.11 PC Card Adapter

Card Status Card Configuration Site Survey About

Profile Name: **DEFAULT**

Transmission Rate: Fully Auto

ESSID: [ ] Scan

Power Saving: ☒ Disable ☐ Enable

Network Type: ☒ Infrastructure ☐ Ad.Hoc Channel: 3

Wired Equivalent Privacy(WEP)

WEP Function: Disable

Key Format: ASCII Mode

Key Index: Key 1

WEP Key 1: [ ]

WEP Key 2: [ ]

WEP Key 3: [ ]

WEP Key 4: [ ]

Delete Undo Apply

WEP OFF Link Quality: 7 % Signal Strength: 46 % Disable Radio Hide

If you want to change this Card configuration, then select Profile Name as **PROFILE1**, then you can start changing these columns.

There are two network types:

**Ad-Hoc:** This mode is used for a simple peer-to-peer network. It offers file sharing between wireless clients without a wireless Access Point (AP).

**Infrastructure:** This mode allows a wireless LAN to be integrated into an existing wired network through an AP. Infrastructure type networks also permit roaming between Access Points while maintaining connection to all network resources. Infrastructure mode provides additional features, such as WEP security, power saving and extended range.

**ESSID:** You can either choose specific AP or connect to any AP in the nearby area.

**Power Save:** enable it, so it will be triggered when your computer system is inactive.

**WEP Key:** Wired Equivalent Privacy, WEP is an encryption scheme used to protect your wireless data communications. WEP uses a combination of 40-bit keys, 128-bit keys to provide data encryption for your wireless network. AP and wireless card should use the same WEP key in order to communication.

**KEY Format:** You can choose to enter ASCII Characters (0~9, a~z, A~Z) or Hexadecimal number (0~9, a~f, A~F)

**Default Key:** The current KEY you choose.

**KEY1~4:** If you choose 40-bit keys, then you must enter 5 ASCII Characters or 10



# SHARP

SHARP CORPORATION

INFORMATION AND COMMUNICATION SYSTEMS GROUP


492 Minosho-cho, Yamatokoriyama-shi, Nara, 639-1186 Japan

Tel +81-743-53-5521 Fax +81-743-54-2856

Hexadecimal numbers. If you choose 128-bit keys, then you must enter 13 ASCII Characters or 26 Hexadecimal numbers.

## Site Survey

Use the Site Survey Tool. You can identify each AP or Adapter Card current usage channel, with WEP key or not, Network Type and their signal strength.

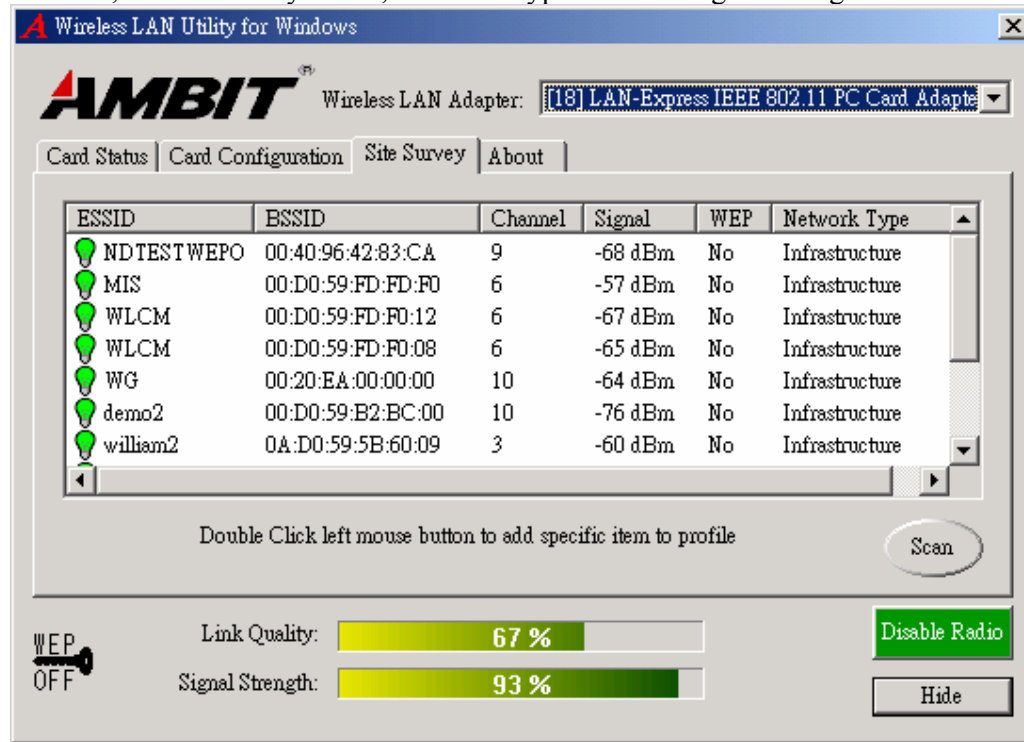

## About

You will find the Network Driver, Configuration driver and NIC Firmware at About.



# SHARP

SHARP CORPORATION

INFORMATION AND COMMUNICATION SYSTEMS GROUP

492 Minosho-cho, Yamatokoriyama-shi, Nara, 639-1186 Japan

Tel +81-743-53-5521 Fax +81-743-54-2856

Wireless LAN Utility for Windows

**AMBIT** Wireless LAN Adapter: [18] LAN-Express IEEE 802.11 PC Card Adapter

Card Status | Card Configuration | Site Survey | About

Network Driver

Version: 1.07.29 Date: Feb 7 2002

Configuration Utility

Version: 0.1.0.0 Date: Mar 27 2002

NIC Firmware

Version: 1.03.06 Address: 00:D0:59:3C:05:DA

WEP OFF

Link Quality: 50 %

Signal Strength: 88 %

Disable Radio

Hide


## 4-2 Windows XP Wireless Utility

1. To configure the wireless card setting, you can select Start\Settings\Network Connection in the Windows XP. Choose the wireless network connection, then you will see below screen. From this screen, you can see wireless connection status and wireless signal level.




- ③ Select 'Properties' in the above screen. The following windows will show up.

In 'General' page, Wireless LAN card information and networking protocol have been displayed. Extra networking protocol can be installed in this page.

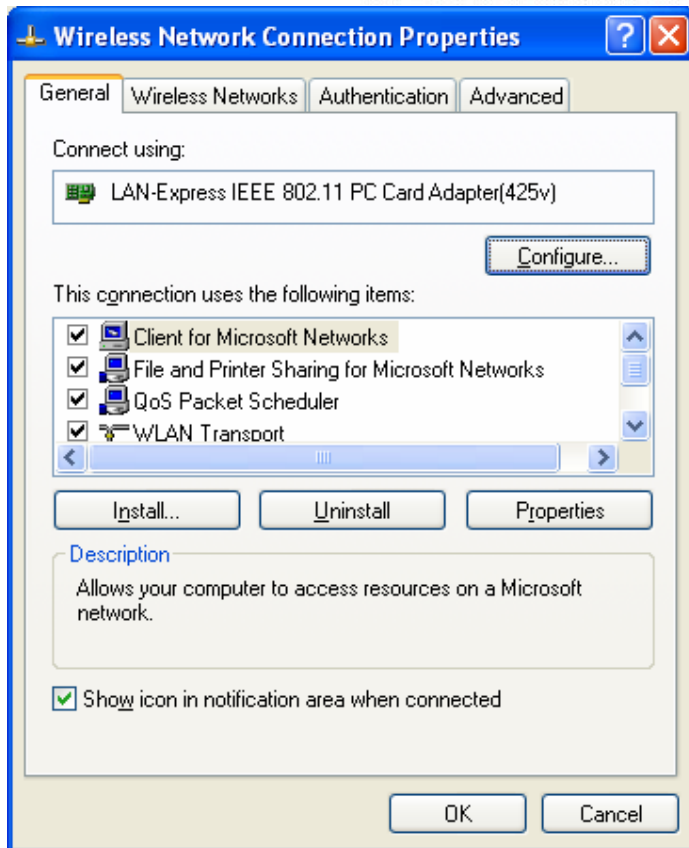

3. Select Wireless Networks page, you can see available wireless networks in your nearby area. You can add your preferred wireless Access Point to your list, so your wireless card will search for specific wireless networks.

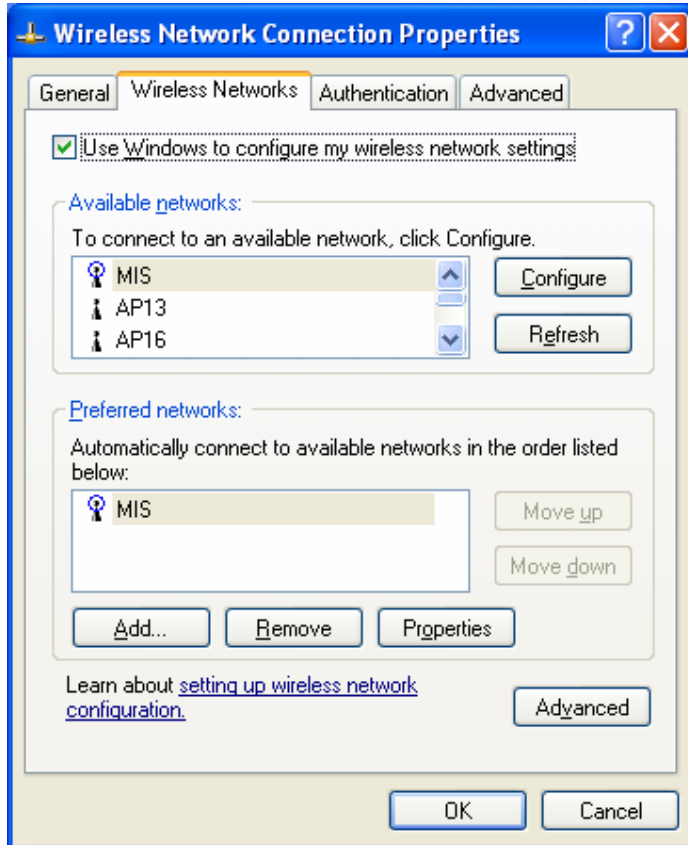

## Configure

To connect to an existing access point (infrastructure) network, under Available networks, click the network name, and then click 'Configure' to setup wireless security and data encryption.

## Refresh


To update the list of available networks that are within range of your computer, click Refresh.

## Add

To connect to an access point (infrastructure) network that you know is available but that does not appear under Available networks, under Preferred networks, click Add. In Wireless Network Properties, specify the network name (Service Set Identifier).

## Remove

To remove a wireless network from the list of preferred networks.

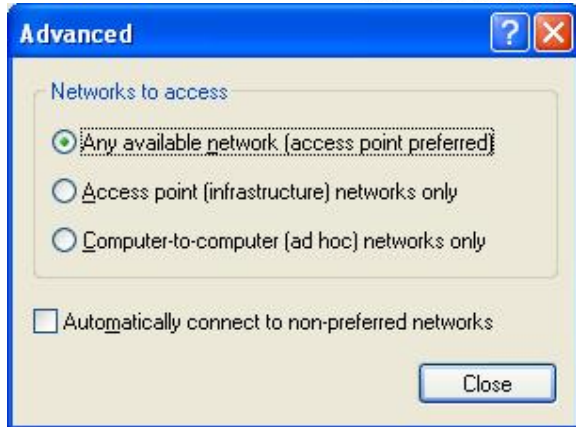

## Advanced


\*If your network are configuring to a computer-to-computer (ad hoc) network, select computer-to-computer (ad hoc) network only’.

\*If you want to connect to a computer-to-computer and access point (infrastructure) networks are within range of your computer, click Access point (infrastructure)network only’.

\*If you want to connect to a computer-to-computer (ad hoc) network and both computer-to-computer and access point (infrastructure) networks are within range of your computer, click ‘Any available network (access point preferred)’.

To automatically connect to available networks that do not appear in the Preferred networks list, click Advanced, and then select the Automatically connect to non-preferred networks check box.

Define your network name (SSID) in the following windows, so you can join a specific wireless network. Check AP has WEP on or not. Your wireless network will need to have same WEP setting with AP in order to communicate. If your wireless network doesn't have any AP, check the **this is computer-to-computer (ad-hoc) network; wireless access points are not used**

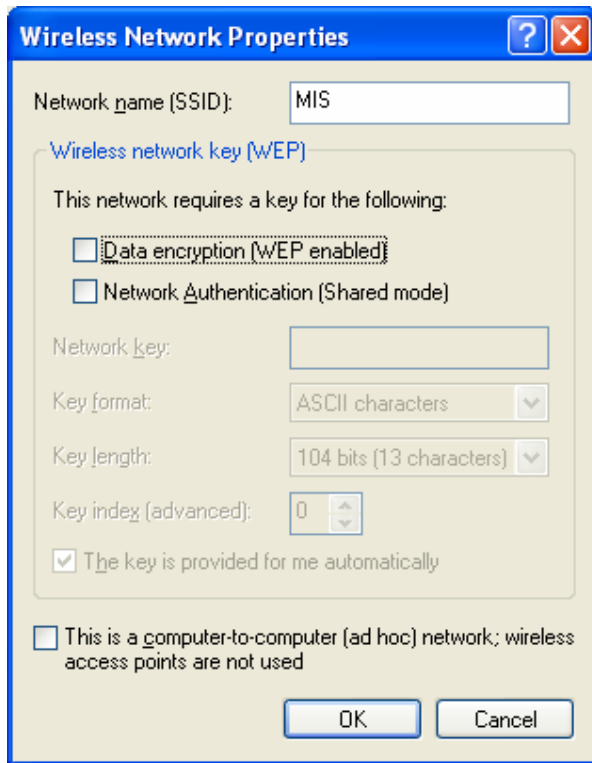


The image shows a Windows XP-style dialog box titled "Wireless Network Properties". It has a blue title bar with a question mark icon and a close button. The dialog is divided into several sections. The first section is "Network name (SSID):" with a text box containing "MIS". The second section is "Wireless network key (WEP)" with a sub-header "This network requires a key for the following:". Below this are two checkboxes: "Data encryption (WEP enabled)" and "Network Authentication (Shared mode)". The "Data encryption" checkbox is checked. Below these are fields for "Network key:" (empty), "Key format:" (set to "ASCII characters"), "Key length:" (set to "104 bits (13 characters)"), and "Key index (advanced):" (set to "0"). There is also a checkbox "The key is provided for me automatically" which is checked. At the bottom, there is an unchecked checkbox "This is a computer-to-computer (ad hoc) network; wireless access points are not used". The dialog ends with "OK" and "Cancel" buttons.


This window provides authentication via 802.1X. 802.1X, an IEEE standard that provides an authentication framework for 802-based LANs. 802.1X takes advantage of an existing authentication protocol known as the Extensible Authentication Protocol. 802.1x, giving someone secure, encrypted, wireless access on a Microsoft network will be as easy as setting a flag on the users domain account.

*What does this mean for the Home Network user?*

802.1x will ensure that if and when you make the change over to Wireless Ethernet, your neighbor will not be able to access your wireless LAN!

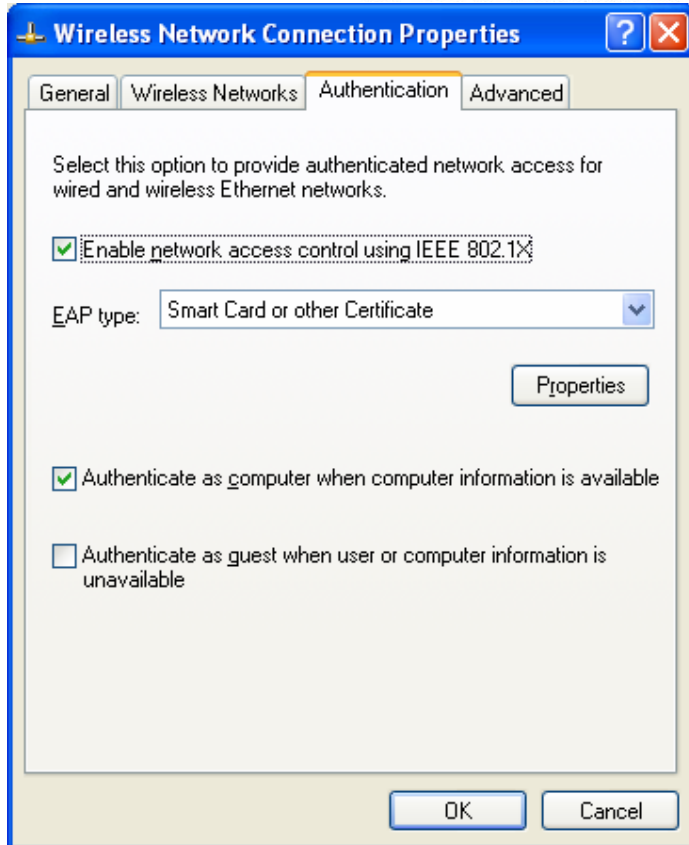

The 'Advanced' window offers Firewall and Internet Connection Sharing functions. Depends on your networking environment, you can select below functions.

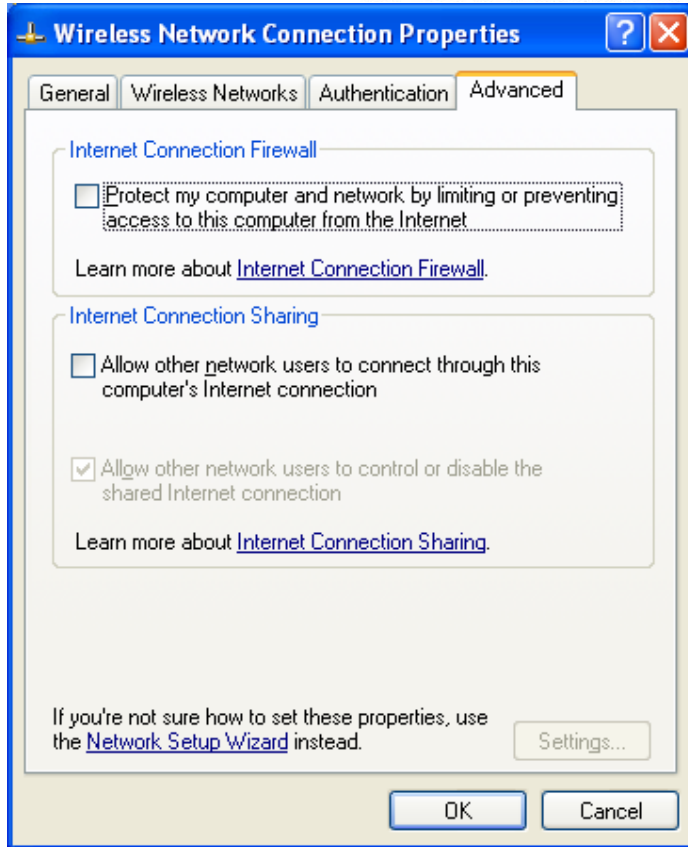

## Appendix A Troubleshooting

### Problem Solving

#### 1. My computer does not recognize the wireless network card.

Solution:

- ③ The wireless network card is not properly inserted into the PCMCIA slot.
- ③ Ensure that the wireless network card has been inserted into an available PCMCIA slot.

#### 2. The wireless network card does not work properly.

Check and Solution:

- ③ Insert the MINI PCI into Notebook slot again. A beep should be heard if the card properly inserted.
- ③ The Activity LED indicator is active if the card is properly connected.
- ③ Right click on 'My Computer' and select Properties. Select the device Manager and click on the Network Adapter. You will find 'AN-Express IEEE 802.11 MINI PCI' if it is installed successfully. If you see the Yellow Question Mark besides the wireless network card, then the wireless card is not properly installed. Please check below:
  - ③ Check if your Notebook has a free IRQ
  - ③ Check that you have inserted the right card and have installed the proper driver.
  - ③ Try to remove driver, install again, and then reboot your computer.
- ③ Confirm the station is configured the same ESSID as the same wireless network.
- ③ Check your channel is the same as AP setting. Try to use 'scan' function in



the card status page after launch Wireless Utility.

## Appendix B Glossary

**Access Point** - An internetworking device that seamlessly connects wired and wireless networks together.

**Ad-Hoc** - Ad-Hoc is a peer- to-peer wireless network without Access Point. A group of wireless clients consistent an independent wireless LAN.

**Backbone** - The core infrastructure of a network, the portion of the network that transports information from one central location to another central location. The information is then off-loaded onto a local system.

**BSS** - Stands for "Basic Service Set." An Access Point associated with several wireless stations.

**ESS** - Stands for "Extended Service Set." More than one BSS can be configured as an Extended Service Set. An ESS is basically a roaming domain.

**Ethernet** - A popular local area data communications network, originally developed by Xerox Corp., which accepts transmission from computers and terminals. Ethernet operates on 10/100 Mbps transmission rate over shielded coaxial cable or over shielded twisted pair telephone wire.

**Infrastructure** - An integrated wireless and wired LAN is called an Infrastructure configuration.

**PCMCIA** - Personal Computer Memory Card International Association, which develops standards for PC cards, formerly known as MINI PCI, are available in three "Types" which are about the same length and width as credit cards, but range in thickness from 3.3 mm (Type I) to 5.0 mm (Type II) to 10.5 mm (Type III). These cards can be used for many functions, including memory storage, as landline modems and as wireless LAN.

**Roaming** - A function that allows one to travel with a mobile end system (wireless LAN mobile station, for example) through the territory of a domain (an ESS, for example) while continuously connecting to the infrastructure.

## Warning

- This equipment must be installed and operated in accordance with provided instructions and a minimum 20 cm spacing must be provided between computer mounted antenna and person's body (excluding extremities of hands, wrist and feet) during wireless modes of operation.
- Optional vehicle mounted antenna must not exceed 5.11 dBi antenna gain and should be professionally installed.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## CAUTION

Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

## **Warning**

"NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT."

1. T60H424 is for OEM installation only.
2. "The antenna used for this transmitter must be installed to provide a separation distance of at least  
20 cm from all persons and must not be co-located or operating in conjunction with any other antenna  
or transmitter.
3. OEM integrators are instructed to ensure that the End-User has NO manual instructions to remove or  
install the device (EUT).