

LISEN

SELFIE STICK PHONE TRIPOD WITH REMOTE

SUPPORT@LISEN.COM

UK CA CE RoHS

PRODUCT LAYOUT

PRODUCT DIAGRAM

COMPATIBLE SYSTEM

ANDROID, IOS, HARMONYOS

PRIMARY MATERIALS

ALUMINUM ALLOY, ABS

MAXIMUM SUPPORTED DEVICE WIDTH

86MM

MAXIMUM DEVICE WEIGHT CAPACITY

500G

OPERATING TEMPERATURE RANGE

-20-60°C

OPERATING VOLTAGE

3.0V

BATTERY CAPACITY (SHUTTER REMOTE)

120MAH

DIMENSIONS DIAGRAM (FOLDED)

45\*68\*290MM

BATTERY LIFE (SHUTTER REMOTE)

360 DAYS

BATTERY MODEL (SHUTTER REMOTE)

BUTTON BATTERY

MODEL NUMBER OF BATTERY

CR1532

MAXIMUM HEIGHT (EXPANDED)

160CM

COMPATIBLE DEVICES

- IOS 5.0 and Above
- Android 4.2.2 and Above

Please keep your device updated to maintain compatibility.

1

STEP-BY-STEP GUIDE

Master Your Selfie Game

MASTER YOUR SELFIE GAME

1.Unscrew the twist lock to achieve the ideal shooting angle. Once adjusted, retighten to ensure stability.

2.Press the two pads on the device bracket and pull to adjust the length as needed. Position your device, then release the bracket to secure it in place.

3.Expand the tripod by pulling the legs outward from the central column slightly, in order to unlock them. Forcibly pulling outward can cause the support leg to break.

4.Crimp the tripod crown and adjust the legs until the tripod is stable.

5.Compatible with cameras using 1/4 thread mounts.

6.Adjust the adjustable support column to the needed length.

7.Swivel the Secondary Grip upwards to unlock the Horizontal Rotation Head, in order to rotate the Device Clamp 360 degrees horizontally. Then, swivel the Secondary Grip downwards until hearing a "click" sound to lock the handle and stop the Horizontal Rotation Head from spinning.

8.Press up through the hole at the base under the Secondary Grip to release the Shutter Controller.

9.To activate the Shutter Remote, slide the switch to "On". The blinking light indicates it's ready to pair. Access your device's Connection Option setting, select "LISEN-ZE582", and pair. The light will turn off when pairing is successful. To deactivate, switch to "Off".

FOR OVERHEAD SHOTS

During overhead shots, loosen the twist lock to set your desired angle, then secure it by tightening the lock.

BATTERY REPLACEMENT

1.Flip the Shutter Remote so that the rear side is facing upwards, ensuring the battery dock is on top. Using your thumb, slide the battery dock cover downward to open it.

2.Using a flat tool, gently push the battery from right to left on the right side to dislodge it. Carefully remove the used battery from the dock.

3.Ensure that the positive side (+) of the new battery is facing upward. Insert the new battery from the left side and slide it to the right until it is properly settled in the dock. Slide the cover it upwards until it clicks into place.

PRECAUTIONS

EN /

01- Please handle it with care to avoid pinching your fingers.

02- Before use, confirm whether the use of this product is restricted in the area or place, and avoid actions that violate public order.

03- Do not place the product on high surfaces or uneven tables and floors to prevent it from falling and getting damaged.

04- Do not use a power source that exceeds the product's load capacity, as it may cause overheating and damage to the circuit board.

05- Do not disassemble or modify the product, as it can easily cause internal malfunctions.

06- Avoid striking or throwing the product, as it can easily cause internal malfunctions.

07- Do not place the product in low-temperature or humid environments.

08- Do not throw the product into fire and keep it away from sources of ignition.

Warnings: This product is not suitable for use by children under the age of 3 without adult supervision.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
1) This device may not cause harmful interference, and  
2) this device must accept any interference received, including interference that may cause undesired operation.  
The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.

WARNING

- INGESTION HAZARD : This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- KEEP new and used batteries OUT OF REACH of CHILDREN.
- Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

LISEN

> Video QSG

Experience innovation for work, play, and travel.

Since 2011, LISEN designs tech accessories. We specialize in the conception, manufacturing and distribution of 3C and mobile phone accessories products tailored

PDF  
Adobe