

CDR6221

QUICK START GUIDE


DVD Multimedia Receiver with Bluetooth featuring a 6.2" digital touch screen TFT

This Quick Start Guide gives you the basics to start using your CDR6221. Please visit www.jensenmobile.com to download a complete owner's manual or call customer service at 1-888-921-4088 (Monday-Friday, 9AM-5PM EST).



JENSEN®

Installation

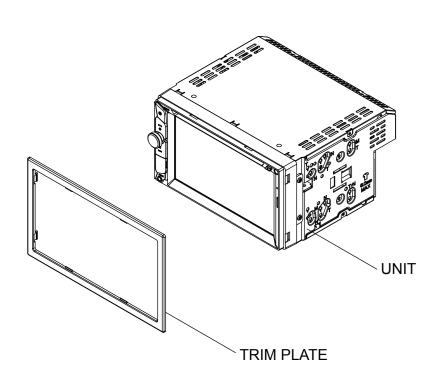


TYPICAL FRONT-LOAD DIN MOUNTING METHOD

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

SD Logo is a trademark of SD-3C, LLC.

Siri and Apple are registered trademarks owned by Apple Inc. Google Assistant and Android are trademarks owned by Google LLC. Other trademarks and trade names are those of their respective owners. Wiring Diagram - Inputs/Outputs

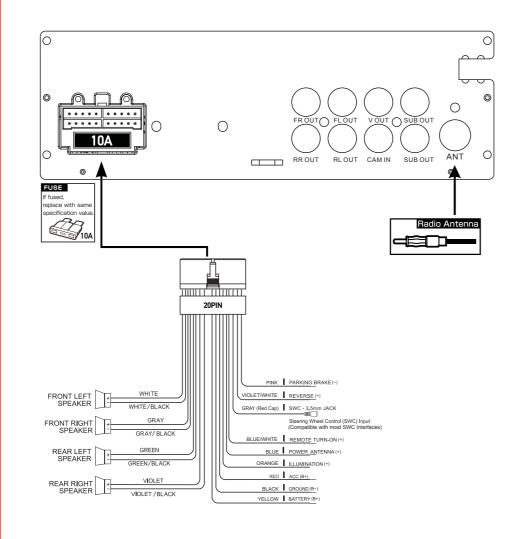

Control Locations



1. MIC

2. MiroSD card slot

3. Eject-Press to eject disc

4. Reset

5. Press- Mode Change Press and hold -- Voice Activation

6. Tune/Track Up

7. Volume/Power/Mute

8. Tune/Track Down

9. USB port

10. AUX

Main Menu

Press the Top Left Source icon to enter Main Source Menu In the Menu mode, press the desired icon to enter the desired mode:

1. Radio Direct

2. Media Player Last Source 3. BT Handsfree Direct

4. DISC Direct

5. USB Direct 6. microSD Card Direct

7. BT Streaming Direct 8.AUX In Direct

9. Rear/Front Camera 10. Main System Setup Menu

11.Press Clock to Standby Monitor

- Press screen anywhere to return Audio will still continue to play while in Standby mode

Tuner Operation

Select the Tuner icon from the Main Menu screen

1. Current Mode Icon / Main Source Menu

2.Tuner Presets - Long press to set 3.AM Direct

4.FM Direct


5.Bluetooth Handsfree Direct 6.Stereo / Mono

7. Previous Station - Long Press Manual Tune 8.AS/PS - Auto Scan / Preset Scan

9. Direct Station Entry 10.Station Number

> 11.Station Search 12.Next Station - Long Press Manual Tune

13.EQ Settings 14. Quick BAND Select - FM 1-2-3 | AM 1-2 15. Monitor Standby

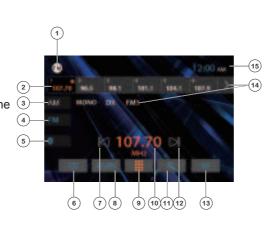

Media Player Operation

USB/MicroSD Media operation will work the same way

1. Current Mode / Main Source Menu

2. BT Streaming Music Direct 3. USB Media Direct

4. SD Media Direct 5. Bluetooth Handsfree Direct 6.Shuffle On / Off


7.Repeat 1 | All | Off 8. Direct File Entry 9. Drive File List

10. EQ Settings 11.Track Down 12. Play/Pause

13. Track Up 14.Track Time / Status Bar

15. File Playing - ID3 Metadata 16. File Playing -Album Art

17. Track Counter of Folder 18. Press Clock to Standby Monitor

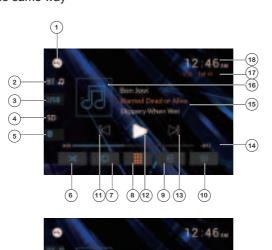



Media Player Operation

Press EQ icon in each Source to select EQ settings

Source Tone Memory - Each Source will remember their EQ settings

1. Main System Volume

2. EQ Settings 3.EQ On/Off

4.Loudness On/Off 5. EQ Reset

8. Balance / Fader

6. Return to Source 7. EQ Presets / Custom



Subwoofer Frequency, Fader and Balance controls do not have Source Tone Memory.

1. Main Volume

2. Fader Reset 3. Subwoofer ON/OFF

4. Return to Source 5. Return to EQ Controls

System Settings

Press GEAR icon in MAIN Source Menu

1. Back to Main Menu 2. General Setup

Clock Settings 4. System Audio

Bluetooth

6. Display - RGB LED, TFT 7. About - Software Version



Handfree Operation

Bluetooth Microphone-The microphone is built-in to the receiver.

• To ensure the best conversation quality/performance, stay within 3 feet (1 meter) of the unit's microphone when talking.

FCC Compliance

(1) this device may not cause harmful interference.

void the user's authority to operate the equipment.

Reorient or relocate the receiving antenna.

· Increase the separation between the equipment and receiver.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

used in accordance with the instructions, may cause harmful interference to radio comi

the user is encouraged to try to correct the interference by one or more of the following measures:

· Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause

15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

harmful interference to radio or television reception, which can be determined by turning the equipment off and on.

Pairing and Connecting *

Before using Bluetooth functions, you must pair your mobile phone to the CDR6221. The device name is "JENSEN BT". The Bluetooth passcode "0000". To ensure the best reception for pairing and re-connection, please make sure the mobile phone battery is fully charged before you begin.

• Try to perform pairing within a few minutes of the mobile phone being turned on.

· Once the unit has been paired with the mobile phone, the unit's model number, "JENSEN BT", will be displayed on the mobile phone.

• To achieve the best performance, always keep the mobile phone within 10 feet (3 meters) of the unit.

· Always keep a clear path between the mobile phone and the unit. Never place a metal object or any other obstacle between the mobile phone and the unit.

• Some mobile phones may have a "Power Saving Mode" option. PLEASE DO NOT use the power saving mode with the CDR6221.

• Before accepting or making a call, make sure your mobile phone's "Bluetooth function" is turned on.



Dialing a Number

Press keypad to dial a numbe



Dial number, press to connect a call

1. Current Mode / Main Source Menu

Making a Call

2. Dial Keypad

3. Back to Last Source 4. Bluetooth Keypad

5. Contacts - must be manually synced 6. Keypad Backspace

7. Recent Calls 8. Device Manager

9. Call Button 10. Number

11. Press Clock to Standby Monitor

- Press screen anywhere to return

- Audio will still continue to play while in Standby



Press to download the phone numbers or access the call history info.



Transferring Audio Press to transfer call audio between the headunit and mobile phone.

1. Hang Up

2. Call Transfer 3. MIC Mute

4. Return to Keypad



One-Year (or Two-Year*) Limited Warranty

This warranty gives you specific legal rights. You may also have other rights which vary from state to state. Namsung America Inc warrants this product to the original purchaser to be free from defects in material and workmanship for a period of one year (or two years*) from the date of the original purchase. Namsung America Inc agrees, at our option, during the warranty period, to repair any defect in material or workmanship or to furnish an equal new, renewed or comparable product (whichever is deemed necessary) in exchange without charges, subject to verification of the defect or malfunction and proof of the date of purchase Subsequent replacement products are warranted for the balance of the original warranty period.

This warranty is extended to the original retail purchaser for products purchased from an authorized JENSEN dealer and used in the U.S.A.

This warranty covers all defects in material and workmanship in this product.

The following are not covered: software, installation/removal costs, damage resulting from accident, misuse, abuse, neglect, product modification, improper installation, incorrect line voltage, unauthorized repair or failure to follow instructions supplied with the product, or damage occurring during return shipment of the product. Specific license conditions and copyright notices for the software can be found via www.jensenmobile.com.

Limited 1-year warranty when purchased from an authorized Jensen dealer.

(Proof of purchase and Installation required)

following methods:

1. Before you call for service, check the troubleshooting guide in your owner's manual. A slight adjustment of any 2. If you require service during the warranty period, you must carefully pack the product (preferably in the original package) and ship it by prepaid transportation with a copy of the original receipt from the retailer to an authorized

3. Please describe your problem in writing and include your name, a return UPS shipping address (P.O. Box not acceptable), and a daytime phone number with your shipment.

4. For more information and for the location of the nearest authorized service center please contact us by one of the

 Call us toll-free at 1-888-921-4088 (Monday-Friday, 9:00 a.m. to 5:00 p.m. EST)

· E-mail us at cs@jensenmobile.com

Exclusion of Certain Damages: This warranty is exclusive and in lieu of any and all other warranties, expressed or implied, including without limitation the implied warranties of merchantability and fitness for a particular purpose and any obligation, liability, right, claim or remedy in contract or tort, whether or not arising from the company's negligence, actual or imputed. No person or representative is authorized to assume for the company any other liability in connection with the sale of this product. In no event shall the company be liable for indirect, incidental or consequentia

Customer Service Toll Free: 1-888-921-4088 www.jensenmobile.com ©2021 Namsung America Inc.