

Preferences Menu**Note**

The key beep length affects the DTMF tones used for sending tones over the network for automated phone services, such as voice mail or online banking. Select the appropriate key beep length before sending tones (see Sending tones, page 30).

To set the key beep length

1. From standby mode, press  **menu**.
2. Press  **Preferences**.
3. Press  **Sounds**.
4. Press  **KeyBeepLen**.
5. Press  or  to select "standard." Press again to select "custom."
 - Standard – Key beep is short and fixed in length.
 - Custom – Key beep sounds as long as you press a key.
6. Press  **ok**.

Mute Stereo

To use this feature the Globalstar Installation Kit mute line must be connected to the stereo mute line. When using the kit, this feature can be set to automatically mute the stereo in your vehicle when receiving incoming calls. Press  when making outgoing calls. (Contact your service provider or kit installer for more information on implementing this in your vehicle.)

To mute the stereo

1. Be sure that the kit mute line is connected to the stereo mute line.
2. From standby mode, press  **menu**.
3. Press  **Preferences**.
4. Press  **Sounds**.
5. Press  **Mute Stereo**.

Preferences Menu

6. Press  or  to select “yes.” Press again to select “no.”
7. Press  **ok**.

Display

The following display features can be adjusted:

- Backlight
- Sort Book
- Banner
- Auto Hyphen
- Manual Hyphen
- Show Time
- Time Zone

Backlight

The screen and keypad backlighting can be adjusted to maximize battery life.

To set the backlight

1. From standby mode, press  **menu**.
2. Press  Preferences.
3. Press  Display.
4. Press  Backlight.
5. Scroll to select one of the following:
 - Always Off – The backlight is always off, which significantly *increases* battery life.
 - 7 Seconds – Turns the backlight off 7 seconds after the last key press.
 - 15 Seconds – Turns the backlight off 15 seconds after the last key press.
 - 30 Seconds – Turns the backlight off 30 seconds after the last key press.

Preferences Menu

- Always On – The backlight is always on, which significantly *decreases* battery life.

6. Press  **ok**.

To turn the backlight on

- Press any key.

**Note**

If this feature is set to “Always Off,” pressing any key does *not* turn the backlight on.

Sort Book

This option allows users to select whether the phone book displays in numerical location order or by alphabetic name order.

To set the sort order

1. From standby mode, press  **menu**.
2. Press  Preferences.
3. Press  Display.
4. Press  Sort Book.
5. Press  or  to select “location#.” Press again to select “alphabetic.”
6. Press  **ok** to confirm sort change.

Banner

When the phone is turned on, a banner or personal greeting can be displayed. As many as 12 characters can be added to the startup screen, such as a company name or a personal reminder.

To edit the banner

1. From standby mode, press  **menu**.
2. Press  Preferences.

Preferences Menu

3. Press  Display.
4. Press  Banner.
5. Choose one of the following:
 - Press  **ok** to return to standby mode.
 - Press  **edit** to change the banner. (See Entering numbers, page 15.)
6. Press  **ok** to confirm banner changes.

Auto Hyphens

This feature automatically inserts hyphens when entering phone numbers. As the following example shows, hyphens are inserted automatically when numbers are entered:

- ### - ### -



Note

To manually enter hyphens, see Manual Hyphens, page 66.

To set auto hyphen

1. From standby mode, press  **menu**.
2. Press  Preferences.
3. Press  Display.
4. Press  AutoHyphen.
5. Press  or  to select "yes." Press again to select "no."
6. Press  **ok**.

Manual Hyphens

Hyphens can be entered manually from standby mode or when editing phone numbers in the phone book. Each hyphen counts as one character.

 


Note

To automatically insert hyphens, see Auto Hyphens, page 66.

Preferences Menu**To manually enter a hyphen**

1. Press and hold . The following screen displays:



2. To add a hyphen, on the screen, press .

**Note**

You cannot insert a hyphen or pause as the first digit of a phone number. Pressing and holding will display the messages screen.

Show Time

The time format can be set by selecting 12-hour, 24-hour, UTC, or Off. UTC (universal time coordinated) displays as the default mode.

To set the time format

1. From standby mode, press menu.
2. Press Preferences.
3. Press Display.
4. Press Show Time.
5. Press or to select one of the following:
 - 12 hour – Time displays in 12-hour format
 - 24 hour – Time displays in 24-hour format
 - Off – Time does not display
6. Press ok.

Time Zone

This feature allows you to select the display of a different time zone instead of UTC (universal time coordinated) time. The time zone remains selected

Preferences Menu

until you change it. UTC (plus or minus any hour) is an option if your time zone is unavailable.

The available time zones include:

European	GMT	Greenwich Mean Time	same as UTC
	BST	British Summer Time	UTC + 1 hour
	IST	Irish Summer Time	UTC + 1 hour
	WET	Western Europe Time	same as UTC
	WEST	Western Europe Summer Time	UTC + 1 hour
	CET	Central Europe Time	UTC + 1 hour
	CEST	Central Europe Summer Time	UTC + 2 hours
	EET	Eastern Europe Time	UTC + 2 hours
	EEST	Eastern Europe Summer Time	UTC + 3 hours
	MSK	Moscow Time	UTC + 3 hours
	MSD	Moscow Summer Time	UTC + 4 hours
	MSD	Moscow Summer Time, Irkutsk	MSD + 5 hours
	MSK	Moscow, Chita, Yakutsk	MSK + 6 hours
	MSD	Moscow Summer Time, Chita Yakutsk	MSK + 6 hours
	MSK	Moscow, Vladivostock, Khabavorsk, Sakhalin	MSK + 7 hours
	MSK	Moscow, Magadan	MSK + 8 hours
	MSD	Moscow Summer, Magadan	MSD + 8 hours
	MSK	Moscow, Kamchatka, Anadyr	MSK + 9 hours

Preferences Menu

U.S. and Canada	MSD	Moscow Summer, Kamchatka, Anadyr	MSD + 9 hours
	Beij	Beijing, China	UTC + 8 hours
	AST	Atlantic Standard Time	UTC – 4 hours
	ADT	Atlantic Daylight Saving Time	UTC – 3 hours
	EST	Eastern Standard Time	UTC – 5 hours
	EDT	Eastern Daylight Saving Time	UTC – 4 hours
	CST	Central Standard Time	UTC – 6 hours
	CDT	Central Daylight Saving Time	UTC – 5 hours
	MST	Mountain Standard Time	UTC – 7 hours
	MDT	Mountain Daylight Saving Time	UTC – 6 hours
	PST	Pacific Standard Time	UTC – 8 hours
	PDT	Pacific Daylight Saving Time	UTC – 7 hours
	HST	Hawaiian Standard Time	UTC – 10 hours
	AKST	Alaska Standard Time	UTC – 9 hours
	AKDT	Alaska Daylight Saving Time	UTC – 8 hours

To select a different time zone

1. From standby mode, press  menu.
2. Press  Preferences.
3. Press  Display.
4. Press  TimeZone.

Preferences Menu

5. Press  to select a time zone from the list. Press  to move backward through the list.
6. Press  **ok**.

Language

Several languages are available to be displayed on your phone's screen: English, Spanish, Portuguese, French, Russian, and Chinese.

To set the language

1. From standby mode, press  **menu**.
2. Press  Preferences.
3. Press  Display.
4. Press  Language.
5. Press  or  to select from the list of available languages.
6. Press  **ok**.

Display Color Scheme

Several color schemes are available for your phone's screen.

To set the display color

1. From standby mode, press  **menu**.
2. Press  Preferences.
3. Press  Display.
4. Press  Display Color.
5. Press  or  to select from the list of available color schemes.
6. Press  **ok**.

Alerts

For your convenience, alerts may be configured to produce a tone while flashing a message. The following alerts can be set to sound a tone:

- Fade

Preferences Menu

- Minute
- Service change
- New message

Fade

The fade alert occurs when any network drops a call.

To set the fade alert

1. From standby mode, press  menu.
2. Press  Preferences.
3. Press  Alerts.
4. Press  Fade.
5. Press  or  to select "on." Press again to select "off."
6. Press  ok.

Minute

The minute alert occurs ten seconds before the end of every minute.

To set the minute alert

1. From standby mode, press  menu.
2. Press  Preferences.
3. Press  Alerts.
4. Press  Minute.
5. Press  or  to select "on." Press again to select "off."
6. Press  ok.

Service Change

The service change alert occurs when the phone enters or leaves service. This alert displays a message and can also be configured to sound a tone.

Preferences Menu

To set the service change alert

1. From standby mode, press  menu.
2. Press  Preferences.
3. Press  Alerts.
4. Press  Service.
5. Press  or  to select "on." Press again to select "off."
6. Press  ok.

New Message

The new message alert occurs when you receive a new text message or voice mail notification.

To set the new message alert

1. From standby mode, press  menu.
2. Press  Preferences.
3. Press  Alerts.
4. Press  New Message.
5. Press  or  to select one of the following options:
 - Off – Phone does not sound a beep when a new message is received
 - Once – Phone sounds one beep when a new message is received
 - Periodic – Phone sounds a beep periodically when a new message is received until you retrieve the message by pressing 
6. Press  ok.

Calling

The following features can be configured to simplify the calling process:

- Auto Answer
- Auto Redial
- One-Touch Dial
- Any-Key Answer