



## **"Patio+" Indoor/Outdoor Water-Resistant Speakers (Set of 2)**

User's Guide for Model ISBW763BDL-3017

For the most up-to-date version of this User's Guide, go to: [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

# Safety Instructions & Warnings

## Important Safety Instructions

- Read these Instructions.
- Keep these Instructions.
- Heed all Warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



## Additional Warnings and Precautions

- **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- **WARNING:** Shock hazard—Do Not Open.
- Caution and marking information is located at the rear or bottom of the apparatus.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain, moisture, dripping, or splashing.
- Objects filled with liquids, such as vases, shall not be placed on the apparatus.
- **CAUTION:** Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.
- **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Do not mix old and new batteries.
- Completely replace all old batteries with new ones.
- Do not mix alkaline, standard (carbon zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
- Batteries should be recycled or disposed of as per state and local guidelines.

---

## FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## FCC Radiation Exposure Statement

This equipment complied with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



**WARNING:** To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

**WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.**



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



**WARNING :** This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov). **This product meets and complies with required Federal product guidelines.**

# Table of Contents

---

## **Contents**

Features & Specifications - 5

Includes - 5

## **Orientation**

Left Speaker Rear View - 6

Left Speaker Front View - 6

Right Speaker Rear View - 6

## **Remote**

Functions & Controls - 7

Remote Battery - 7

## **Connecting Your Speakers**

Connect Your Speakers - 8

Connect Your Speaker to Power - 8

Connect with Bluetooth - 8

## **Mounting Your Speakers**

Placing Your Speakers - 9

Attaching the Mounting Hardware -9

Attaching Your Speakers -9

## **Positioning Your Speakers**

Angling Your Speakers (FPO) - 10

## **Troubleshooting**

Problems and Possible Solutions - 11

## **Company Information**

Contact Information - 12

International Support - 12

Warranty - 12

# Contents

---

## Features & Specifications

- Supports Bluetooth v5.0, range 100ft
- IP44 water-resistant
- Protective UV cabinet
- Powder-coated, rustproof aluminum grill
- Built-in 5.25" woofer and 1" tweeter speakers
- Auto pairing
- Mounted vertically or horizontally
- 70° swivel left and right
- Peak audio output: 140W
- Max volume: 97dB
- Frequency response: 80Hz–18kHz
- Speaker weight: 2.42lbs

 
## Includes

- Speakers (Set of 2)
- Remote control with CR2025 battery (included)
- DC adapter with waterproof plug
- 25' connecting wire
- Heavy duty mounting brackets (Set of 2)
- Anchors (4)
- Screws (4)

# Orientation

---


## Left Speaker Rear View

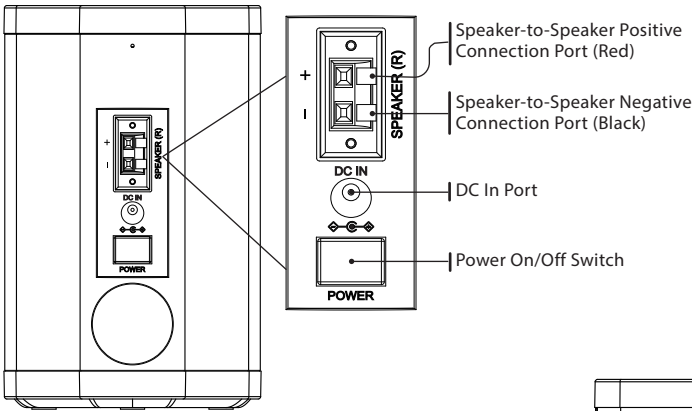

## Left Speaker Front View


LED Indicator Light
 
## Right Speaker Rear View

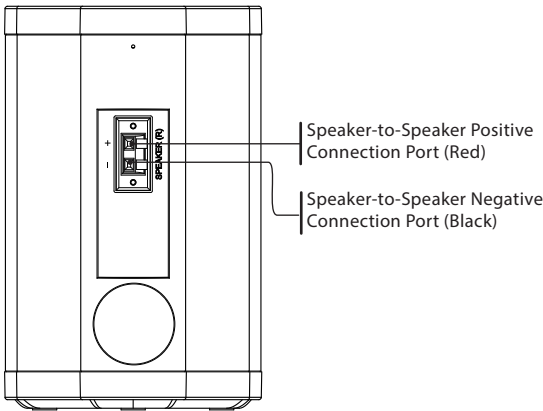


# Remote
 
## Functions & Controls

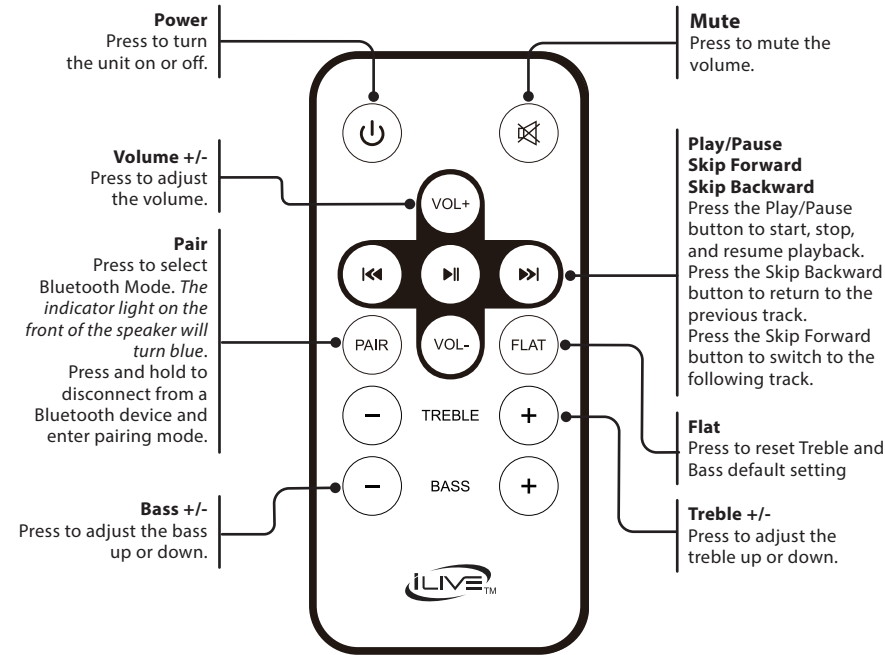

## Remote Battery

 Requires one (1) CR2025 button cell battery (included).

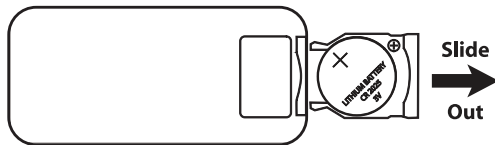


# Connecting Your Speakers

## Connect Your Speakers


Connect the speakers using the included speaker cable.

 1. Plug the red end of the connection cable into the red port on the back of the left speaker.
2. Plug the black end of the connection cable into the black port on the back of the left speaker.
3. Connect the red plug on the other end of the cable to the red port on the back of the right speaker. Then, connect the black plug to the black port.

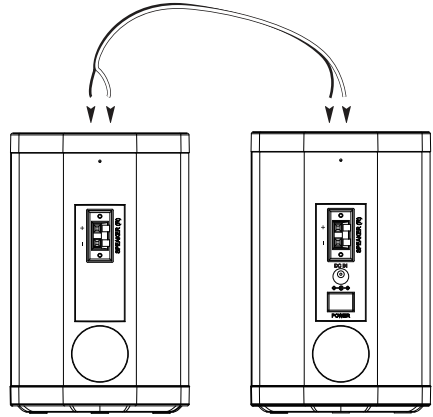

## Connect Your Speaker to Power

 1. Plug the power adapter into the DC power input on the speaker and a standard outlet.
2. Press the Power button to turn the speakers on.

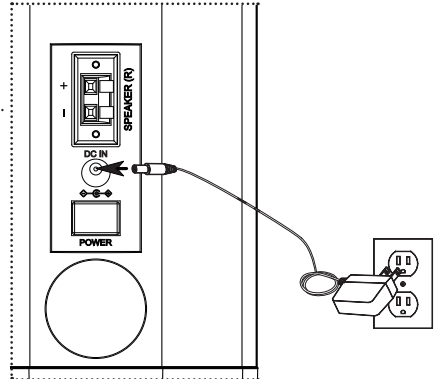

## Connect with Bluetooth

When the speakers first power ON they default to Bluetooth Mode and are ready to pair automatically. When pairing, remain within 3 feet of the Bluetooth device.

1. Using the controls on your Bluetooth device, select ISBW763BDL in the Bluetooth settings to pair. If you have trouble with accessing Bluetooth settings, refer to the user's manual for your specific device for more information.
2. When successfully paired, audio from your Bluetooth device will play through the speakers.
3. Use the controls on the connected Bluetooth device to select and play audio.
4. The speaker will remember and try to connect to the last used device. Press and hold the PAIR button on the remote to disconnect from the last device and connect to a new device.

**Note:** If you are having trouble with automatic pairing to your device, use the PAIR button on the remote to enter pairing mode on the speaker. Then, follow the steps listed above.



# Mounting Your Speakers

---

## Placing Your Speakers

 
These speakers feature an IP44 water-resistant protection, UV resistant coating, and a powder-coated, rust-proof grill for outdoor use. If you choose to mount the speakers outside, place them in a covered setting or somewhere sheltered from rainfall, splashing, or spills.

**Note:** Remember to keep the distance between the speakers under 25ft. for the connection cables.

## Attaching the Mounting Hardware


This speaker set comes with four screws and four external anchors. Make sure the surface you choose is able to support the weight of the speaker and mounting bracket. Additional tools (such as wood screws or wall anchors) may be required.

1. Position the mounting bracket vertically or horizontally on your wall.
2. Attach the mounting bracket to the wall with the screws, as seen below.

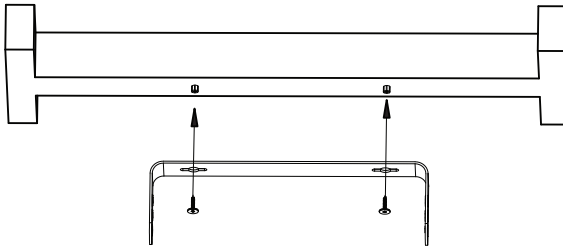

## Attaching Your Speakers

 1. Locate the mounting bracket holes on the top and bottom of the speaker (one on each side)
2. Insert the anchors through the hole in the mounting bracket into the mounting bracket holes on the speaker.
3. Screw in and tighten the anchors to secure the speaker into place.

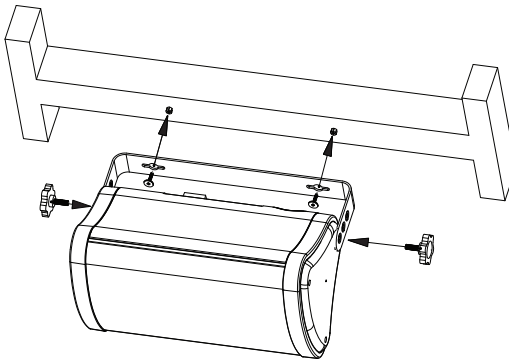

---


## Positioning Your Speakers

 To change the angle of your speakers, loosen the anchors and gently turn the speaker to face your desired direction. Retighten the anchors once the speaker is in place.

**Note:** Speakers can only swivel when mounted vertically.

The position of your speakers can affect the sound quality of your audio. Here are some points to keep in mind.

- If possible, mount your speakers at ear-level in the listening area.
- Point both speakers inward toward the listening area.
- Place each speaker at least two feet away from corners to avoid sound reflection.

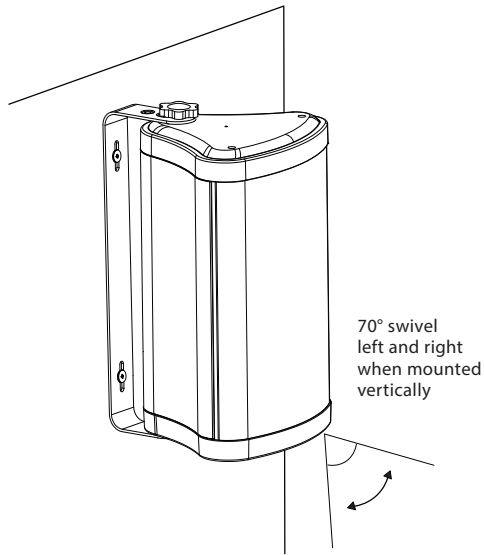

# Troubleshooting

---

PROBLEM	POSSIBLE SOLUTION
Speaker will not power on	<ul style="list-style-type: none"><li>• Make sure the AC/DC plug is plugged in and connected to the left speaker</li><li>• If using the remote to try powering on the speaker, check if the remote battery needs to be changed.</li><li>• Check for water damage: this product is water resistant, but not fully waterproof.</li></ul>
Sound skipping/Audio doesn't play	<ul style="list-style-type: none"><li>• Turn the speakers off and then on again.</li><li>• Check for water damage and dry off speaker.</li><li>• Check the volume on the speaker and your playback device.</li></ul>
Audio Distortion	<ul style="list-style-type: none"><li>• Check the volume on the speaker and playback device, the level may be too high.</li><li>• Maintain distance from devices or frequencies that may cause interference.</li></ul>
Bluetooth won't play/fails to connect	<ul style="list-style-type: none"><li>• Check the volume on the speaker and your playback device.</li><li>• Make sure the Bluetooth setting on your playback device is on.</li><li>• Stay within 3 ft. of the speaker when pairing.</li><li>• Remain within xx ft. of the speaker when paired.</li><li>• The speaker will automatically pair to the last paired device. Disconnect from the previous device before connecting to another.</li></ul>

# Company Information

---

## Contact Information

**Website:** [www.iLiveElectronics.com](http://www.iLiveElectronics.com)

**Email Support:** [prodinfo@dpiinc.com](mailto:prodinfo@dpiinc.com)

**Email Parts:** [partsinfo@dpiinc.com](mailto:partsinfo@dpiinc.com)

**Phone Support:** 1-888-999-4215

## Warranty

For Warranty Information and the most up-to-date version of this User's Guide, go to:

**[www.iLiveElectronics.com](http://www.iLiveElectronics.com)**



***Protect for Today  
Sustain for Tomorrow***