

KM-0002 Karaoke Speaker Manual

Size: H: 200mm x W: 258mm

13 Jun 2024




DANCING LIGHT SHOW KARAOKE SPEAKER

Instruction Manual

Thank you for purchasing the Dancing Light Show Karaoke Speaker. This manual provides more information about this Karaoke Speaker. Please read the instructions before using.

Product Overview

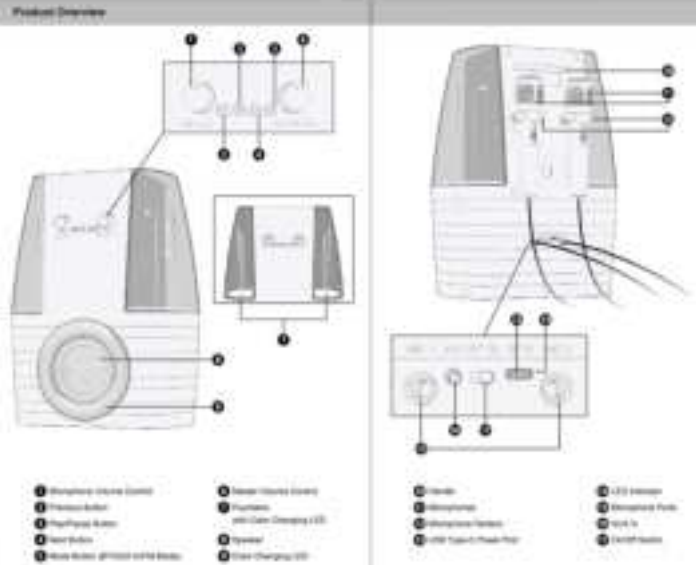

- 1. Bluetooth Volume Control
- 2. Previous Button
- 3. Play/Pause Button
- 4. Next Button
- 5. Sleep Mode (HOLD) Button
- 6. Power (Standby) Button
- 7. Function
- 8. Auto Charge (LED)
- 9. Type-C
- 10. USB Charging (USB)
- 11. LED Indicator
- 12. Microphone Port
- 13. AUX In
- 14. Switch Button

Package Contents

Dancing Light Show Karaoke Speaker (1 Set) x 1 x 1 x 1 (Please Refer to the Back of the Product for Details)

Bluetooth Type-C Power Cable (1 Set)

Quick Start Manual

Technical Specification

Power (Wattage)	15W
Power Supply	DC 5V/2A
Bluetooth Version	4.2
Bluetooth Range	10m
Bluetooth Mode	Class 2
Bluetooth Power	10mW

Notes:

- 1. Please use the USB Type-C Power Cable provided with the Karaoke Speaker.
- 2. Please use the USB Type-C Power Cable provided with the Karaoke Speaker.

Power On/Off

Power On: Press the ON/OFF button on the top of the speaker.

Power Off: Press the ON/OFF button on the top of the speaker.

LED Indicator

The LED indicator is a red light that indicates the power status of the speaker.

USB Type-C Power Cable (1 Set)

1. Please use the USB Type-C Power Cable provided with the Karaoke Speaker.

2. Please use the USB Type-C Power Cable provided with the Karaoke Speaker.

How to Use the Karaoke Speaker

1. Connect the Karaoke Speaker to your mobile device.
2. Turn on the Karaoke Speaker.
3. Select the Karaoke Speaker on your mobile device and select "Karaoke" from the list.
4. You will hear a beep sound when pairing is successful.

Reconnect Karaoke Speaker to your mobile device

When powered on, the Karaoke Speaker will automatically connect with the last connected mobile device.

Function

Bluetooth Mode

Press the Bluetooth Mode Button on the top of the Karaoke Speaker.

Play/Pause Mode

Press the Play/Pause Button on the top of the Karaoke Speaker.

Next/Previous Mode

Press the Next/Previous Button on the top of the Karaoke Speaker.

Volume Mode

Press the Volume Button on the top of the Karaoke Speaker.

Power Mode

Press the Power Button on the top of the Karaoke Speaker.

How to Use The Microphone



1. Plug in the microphone into the microphone port on the top of the Karaoke Speaker.
2. Turn on the ON/OFF button on the microphone.
3. Use the microphone to sing into the Karaoke Speaker.

Caution: Please do not use the microphone before the microphone is fully charged. Otherwise, the microphone may be damaged or the Karaoke Speaker may be damaged.

Notes:

- 1. If the Karaoke Speaker cannot be paired with your device, please try the following:
 - Turn off the Karaoke Speaker and restart it.
 - Turn off the Bluetooth function of your mobile device and restart it.
- 2. If the Karaoke Speaker cannot be powered on, please try the following:
 - Check if the Karaoke Speaker is fully charged.
 - Check if the Karaoke Speaker is not damaged.

Safety Instructions

- 1. The input voltage to the product is DC 5V/2A.
- 2. In order to operate the product in safe manner and reliable condition, please only select certified appropriate adapter for operating the product.
- 3. Only operate the product at ambient temperature between 10°C (50°F) and 40°C (104°F).
- 4. Do not heat above 100°C (212°F) or do not expose to sunlight or flame.
- 5. Please note that we are not responsible for any injury or loss of property, and we cannot control the warranty process during the time the user using this product.

FCC Statement

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

RF Warning Statement

This device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

FCC ID: 2A0002-KM-0002

Model: KM-0002

Class 1 (B) device

Copyright © 2024 Karaoke Speaker Inc.

Printed in China