TYPO - Bluetooth Shower Speaker Instruction Booklet

ARTWORK 1

SIDE 1

Safety Instructions:

1) Keep the device away from heat, direct sunlight and sharp edges

2) Keep the device away from naked flames

3) Do not insert any metal objects into the device. Risk of shortcut

Button Descriptions

() - On/off: to Switch on or off the unit

K√ - Short press for the previous song. Long press for turning down the volume

D→ - Short press for the next song. Long press for turning up the volume

¬ - To pick up or hang up a phone call

D→ Play/Pause the music

Tips:

You can press Phone button twice quickly to redial the last phone number.

This device may not cause harmful interference, and
(2) this device may not cause harmful interference, and
(1) This device may not cause harmful interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance codd void the user's authority to operate the equipment.

WIDTH = 152mm

PRINT COLOUR

WIDTH = 76mm




BLACK

ARTWORK 2

HEIGHT:

SIDE 2

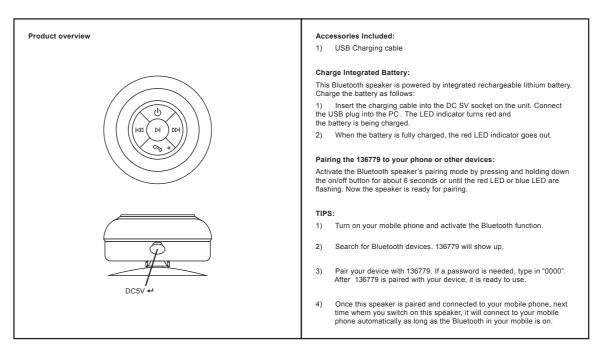

HEIGHT =89mm

WIDTH = 76mm

WIDTH = 152mm